

# Deployment of Dell M6348 Blade Switch with Cisco 4900M Catalyst Switch (Simple Mode)

Dell Networking Solutions Engineering  
July 2011

## Revisions

Date	Description	Authors
July 2011	Initial release	Victor Teeter

Copyright © 2011 – 2017, Dell Inc. or its subsidiaries. All Rights Reserved.

Except as stated below, no part of this document may be reproduced, distributed or transmitted in any form or by any means, without express permission of Dell.

You may distribute this document within your company or organization only, without alteration of its contents.

THIS DOCUMENT IS PROVIDED “AS-IS”, AND WITHOUT ANY WARRANTY, EXPRESS OR IMPLIED. IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE SPECIFICALLY DISCLAIMED. PRODUCT WARRANTIES APPLICABLE TO THE DELL PRODUCTS DESCRIBED IN THIS DOCUMENT MAY BE FOUND AT: <http://www.dell.com/learn/us/en/vn/terms-of-sale-commercial-and-public-sector-warranties>

Performance of network reference architectures discussed in this document may vary with differing deployment conditions, network loads, and the like. Third party products may be included in reference architectures for the convenience of the reader. Inclusion of such third party products does not necessarily constitute Dell’s recommendation of those products. Please consult your Dell representative for additional information.

Trademarks used in this text: Dell™, the Dell logo, Dell Boomi™, PowerEdge™, PowerVault™, PowerConnect™, OpenManage™, EqualLogic™, Compellent™, KACE™, FlexAddress™, Force10™ and Vostro™ are trademarks of Dell Inc. EMC VNX®, and EMC Unisphere® are registered trademarks of Dell. Other Dell trademarks may be used in this document. Cisco Nexus®, Cisco MDS®, Cisco NX-OS®, and other Cisco Catalyst® are registered trademarks of Cisco System Inc. Intel®, Pentium®, Xeon®, Core® and Celeron® are registered trademarks of Intel Corporation in the U.S. and other countries. AMD® is a registered trademark and AMD Opteron™, AMD Phenom™ and AMD Sempron™ are trademarks of Advanced Micro Devices, Inc. Microsoft®, Windows®, Windows Server®, Internet Explorer®, MS-DOS®, Windows Vista® and Active Directory® are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries. Red Hat® and Red Hat® Enterprise Linux® are registered trademarks of Red Hat, Inc. in the United States and/or other countries. Novell® and SUSE® are registered trademarks of Novell Inc. in the United States and other countries. Oracle® is a registered trademark of Oracle Corporation and/or its affiliates. VMware®, Virtual SMP®, vMotion®, vCenter® and vSphere® are registered trademarks or trademarks of VMware, Inc. in the United States or other countries. IBM® is a registered trademark of International Business Machines Corporation. Broadcom® and NetXtreme® are registered trademarks of QLogic is a registered trademark of QLogic Corporation. Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and/or names or their products and are the property of their respective owners. Dell disclaims proprietary interest in the marks and names of others.

# Table of contents

Revisions.....	2
Summary.....	4
Simple Switch Mode.....	4
M6348 Firmware Versions 4.1 and 3.1 .....	5
1 Testing Scenarios.....	6
1.1 Scenario 1: Plug and Play the Dell PowerConnect M6348 Switch .....	6
1.1.1 Configuring the Dell M6348 Switch .....	7
1.1.2 Configuring the Cisco 4900M Switch.....	8
1.2 Scenario 2: Configuring VLANs on the internal ports of the Dell PowerConnect M6348 switch .....	9
1.2.1 Configuring the Dell M6348 Switch .....	9
1.2.2 Configuring the Cisco 4900M Switch.....	10
1.3 Scenario 3: Configuring multiple VLANs per internal port to connect to a server NIC with Tagging enabled ..	11
1.3.1 Configuring the Dell M6348 Switch .....	11
1.3.2 Configuring the Cisco 4900M Switch.....	12
1.4 Scenario 4: Configuring multiple Port Aggregation Groups and dedicating specific Uplinks.....	13
1.4.1 Configuring the Dell M6348 Switch .....	13
1.4.2 Configuring the Cisco 4900M Switch.....	17
1.5 Scenario 5: Adding VLANs in a multi-AG configuration .....	17
1.5.1 Configuring the Dell M6348 Switch .....	18
1.5.2 Configuring the Cisco 4900M Switch.....	23
1.6 Scenario 6: Setting up a LAG backup for failover .....	24
1.6.1 Configuring the Dell M6348 Switch .....	25
1.6.2 Configuring the Cisco 4900M Switch.....	26
A M6348 screens using firmware 3.1 .....	27
B Network switch versions .....	31
About Dell EMC .....	31

## Summary

Adding a Dell™ PowerConnect™ blade (M-Series) switch, within a Dell PowerEdge™ M1000e modular blade enclosure, to an external Cisco Catalyst Switch is a straightforward process. The addition of Simple Switch Mode on the Dell PowerConnect™ Blade switch further simplifies the process, allowing integration into existing network with minimal effort. This document is part of the Simple Connect campaign that includes both Simple Connect for SAN and Simple Connect for LAN –targeted at today’s Fibre Channel (FC) SAN and Ethernet LAN environments and meant to serve as a supplemental guide on how to interconnect equipment within the Data Center.

This document provides an easy to use step-by-step guide on how to configure and deploy the DELL™ M-Series 1Gbit/s Blade Switch (M6348) (Figure 1) with a Cisco Catalyst 4900M Switch.

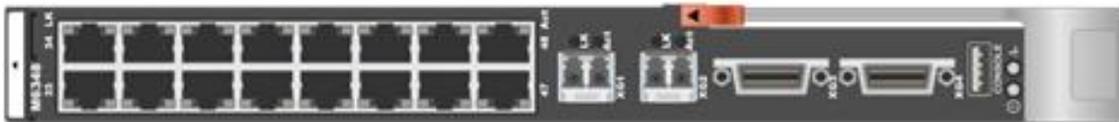


Figure 1 Dell PowerConnect 6348 switch

## Simple Switch Mode

[Simple Switch Mode](#), or SSM, allows server administrators (even those with minimum networking expertise) the ability to deploy a loop-free switching solution without having to configure the Spanning Tree Protocol (STP) or worry about STP compatibility or interaction with the existing environment.

The primary advantages of deploying SSM are:

- Port Aggregation is easy to configure. Simply group internal ports and associate with external ports, assign VLANs (if required), and it’s ready to go.
- Automatic configuration of the external ports into a Link Aggregation Control Protocol (LACP) trunk group.
- Providing loop-free topologies without using STP.
- Port Aggregation is completely interoperable. Dynamic (via LACP) and static link aggregation is supported on the external ports. To enable Simple Switch Mode on a Dell PowerConnect M6348 switch, perform the following steps via Command Line or Web Interface.

### Command-Line Interface:

From global config enter the following commands:

```
config# mode simple
config# ip address vlan 4022
config# port-aggregator group 1
config# exit
```

Later versions of the firmware will not require a reload of the switch, however some earlier versions do. Reload the switch if requested. You can run the “show run” command again to verify you are in Simple Mode. This can be seen within the first 5 lines of the running configuration.

Look for: !System Operational Mode “Simple”

## Web Interface:

Follow the steps below:

1. Log into the switch.
2. Select System → Operational Mode → Operational Mode Configuration.
3. In the Operational Mode Configuration screen, select **Enable** in the **Simple Mode** drop-down menu, and left-click **Apply Changes** (Figure 2):

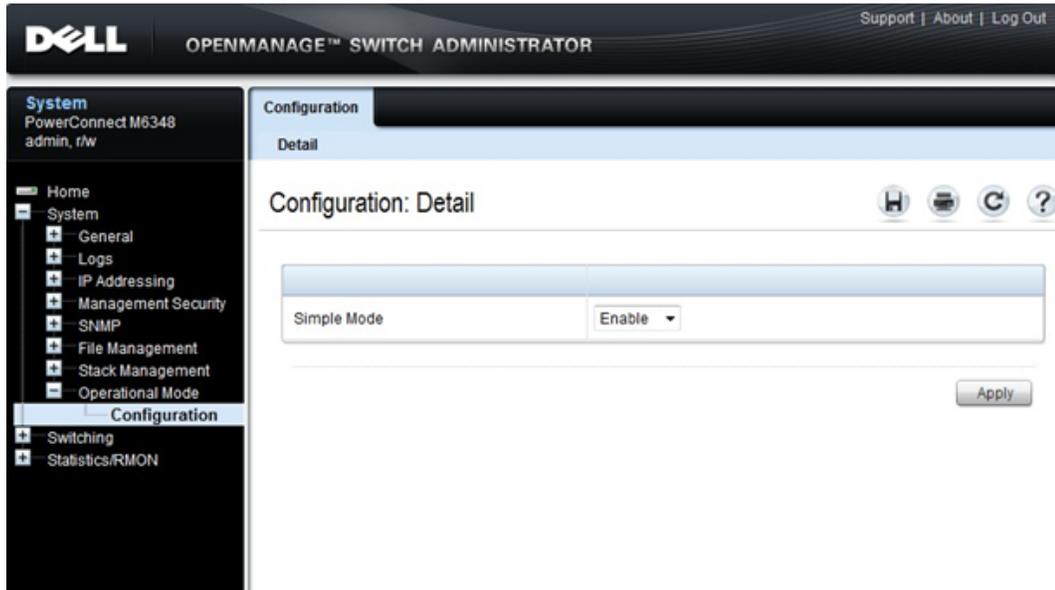


Figure 2 Configuration: Detail screen for Simple Mode configuration on the Dell PowerConnect M6348

## M6348 Firmware Versions 4.1 and 3.1

Command line and Web interface examples in the main body of this document are shown using M6348 firmware version 4.1.0.6. If you are using firmware version 3.1.x.x, Appendix A provides CLI and Web interface screens for the first three scenarios, using firmware 3.1.5.7 for those examples. One primary difference between the two firmware versions is how ports are addressed. For 3.1.5.7 the ports are shown as x/y, where x is the device and y is the port. If you are using firmware 4.1.0.6 on the M6348 then your ports will show up as x/y/z, where x is the device, y is the module, and z is the port. For example:

firmware 3.1.x.x	firmware 4.1.x.x
1/g33	Gi1/0/33
1/xg1	Te1/0/1

**Note:** All Scenarios 1–6 are shown using the 4.1 firmware; however Appendix A also includes 3.1 screens for the first three Scenarios.

# 1 Testing Scenarios

In the sections that follow, we present an overview of a variety of different network deployment scenarios and then provide step-by-step set up guidance using configuration tools with screen shots as a visual guide. Intent of the paper is to show how some of the features of Simple Switch firmware can be used to easily and quickly configure both equipment to work with each other without requiring extensive knowledge of network.

## 1.1 Scenario 1: Plug and Play the Dell PowerConnect M6348 Switch

In this section, we will setup a basic network connection between the PowerConnect M6348 blade switch and the Cisco Catalyst 4900M to allow a Dell blade server to connect to the Cisco Catalyst through the PowerConnect M6348.

By default, all internal ports and the first 8 external ports of a PowerConnect M6348 are in port-aggregator group 1, but this can be changed by the user. All ports (internal and external) within a port aggregator group can communicate. There is a maximum of 8 *external* ports in any port-aggregator group. When one or more cables are plugged into external ports of the same port-aggregator group and in the same LAG role (primary or secondary) they are automatically in a LAG (link aggregation group). Secondary LAG roles are for backup LAGs in case of a LAG failure.

### Notes:

1. External ports don't need to be side by side to be in the same port aggregator group. For example, ports 33 and 40 can be in group 1 and ports 34 and 35 can be in group 2. Having multiple external Ethernet ports of different speeds (e.g. 1G and 10G) in the same LAG is not supported, however they can be in the same port-aggregator group as long as one speed is used as a primary LAG and the other as a secondary (backup) LAG. All ports in a port-aggregator group only go to a single destination, which eliminates the need for STP.
2. Upstream switches should have port-fast enabled on any links connected to an external port of an M6348 while in Simple Mode. Internal ports of an M6348 are not active unless there is at least one active external connection.

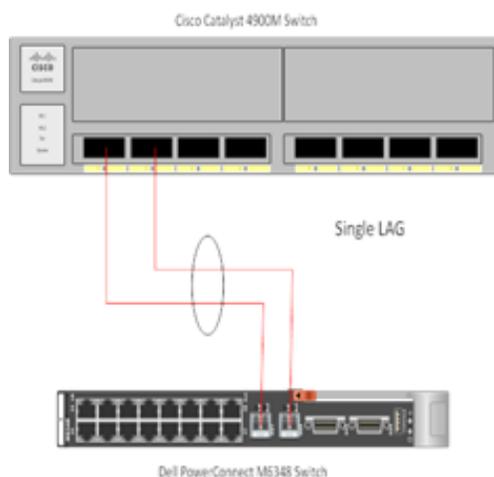


Figure 3 Scenario 1

## 1.1.1 Configuring the Dell M6348 Switch

### 1.1.1.1 Command-Line Interface:

By default external ports 33 through 40 (1GB ports) are in port-aggregator group “1”. In this example, we’ll remove these ports from group “1” in order to add two 10GB ports (*Xg1* and *Xg2*) to the group. Figure 4 shows the command-line interface for configuring Dell M6348 switch using firmware version 4.1. For details on firmware 3.1 please refer to Appendix A.

```
console#config
console(config)#port-aggregator group 1
console(config-portAggr-group-1)#no add interface gigabitethernet 1/0/33-40
console(config-portAggr-group-1)#add interface tengigabitethernet 1/0/1-2
console(config-portAggr-group-1)#exit
console(config)#exit
```

Figure 4 Dell M6348 switch CLI for Scenario 1

### 1.1.1.2 Web Interface:

Follow the steps below:

1. Select Switching > Port Aggregator > Port Configuration.
2. Select only the ports you want to use in the group by removing or placing the group number in the field beside the port. For this example we removed the 1s beside Gigabit ports 33 – 40 (Figure 5) and placed a 1 in the field beside both Te1/0/1 and Te1/0/2 (Figure 6).

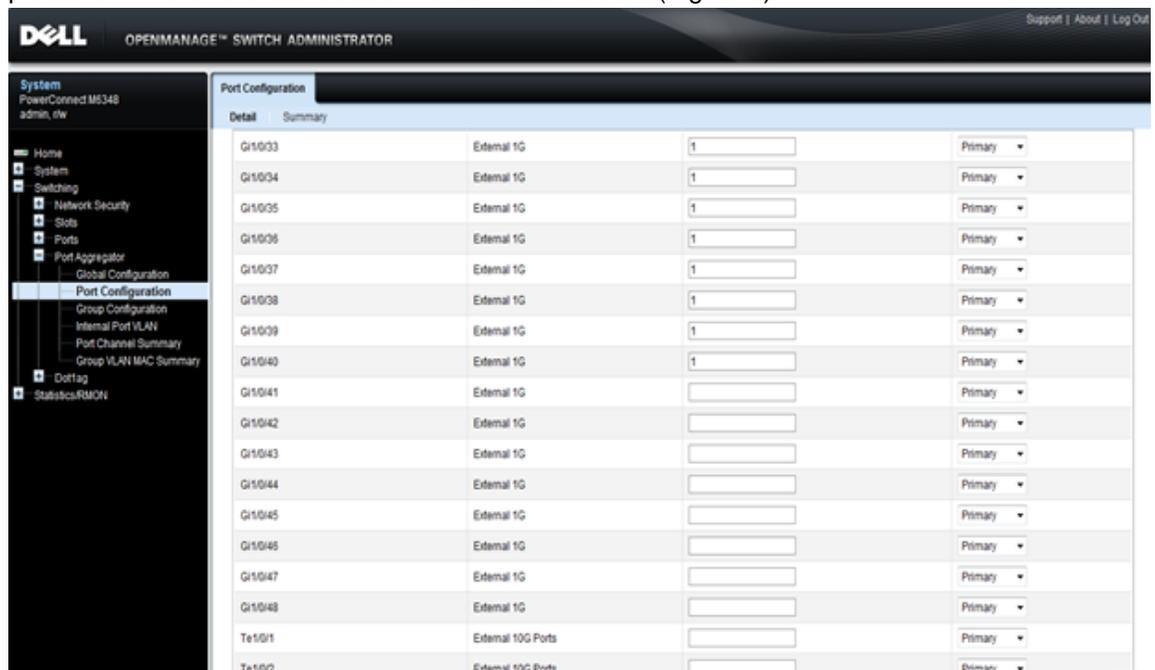


Figure 5 Dell M6348 switch Gigabit ports Web interface for Scenario 1

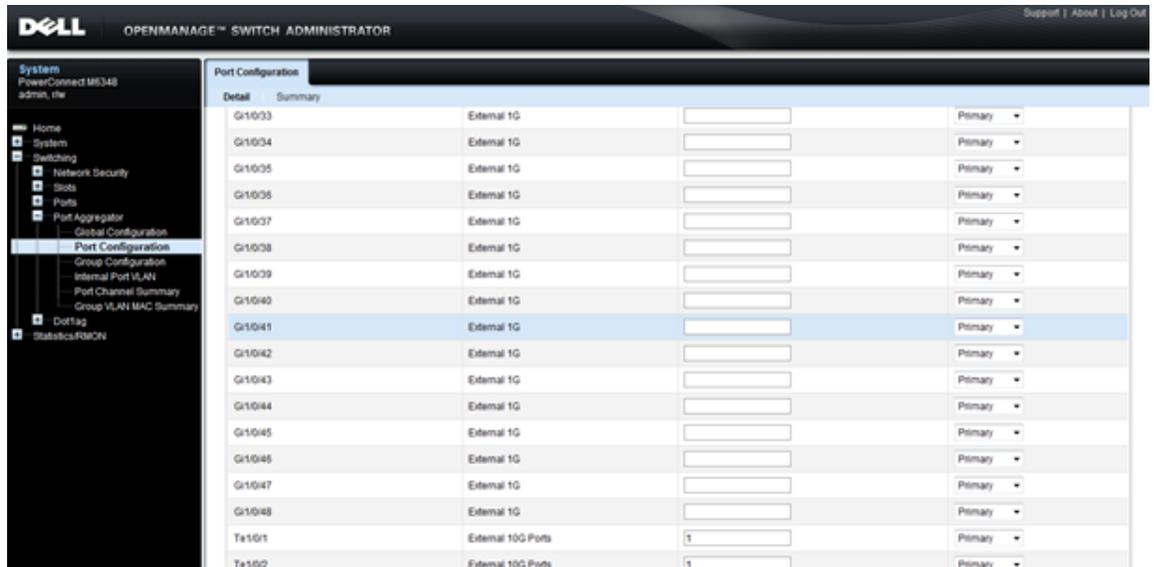


Figure 6 Dell M6348 switch TE Web interface for Scenario 1

- Click **Apply**.

## 1.1.2 Configuring the Cisco 4900M Switch

Configure Link Aggregation Control Protocol (LACP) on Cisco Catalyst switch ports, setting up a 2-port port channel with LACP using the ports to be connected to Dell PowerConnect M6348.

Login to the Catalyst 4900M and make the following changes (Figure 7):

```
Switch(config)#
Switch(config)#int TenGigabitEthernet1/1
Switch(config-if)#channel-protocol lacp
Switch(config-if)#channel-group 1 mode active
Switch(config-if)#exit
Switch(config)#int TenGigabitEthernet1/2
Switch(config-if)#channel-protocol lacp
Switch(config-if)#channel-group 1 mode active
Switch(config-if)#exit
Switch(config)#exit
Switch#
```

Figure 7 Cisco Catalyst 4900M switch CLI for Scenario 1

## 1.2 Scenario 2: Configuring VLANs on the internal ports of the Dell PowerConnect M6348 switch

In this section, we provide an overview of configuring VLANs on the internal ports of the Dell PowerConnect M6348 switch. VLANs allow for greater granularity and quality of service (QoS) control over simple sub-netting, and Dell EMC switches with Simple Switch Mode enabled offer a quick and easy VLAN configuration. In this example we will configure VLANs across the internal ports of the M6348 and then extend these VLANs into the external network by configuring the Cisco Catalyst switch.

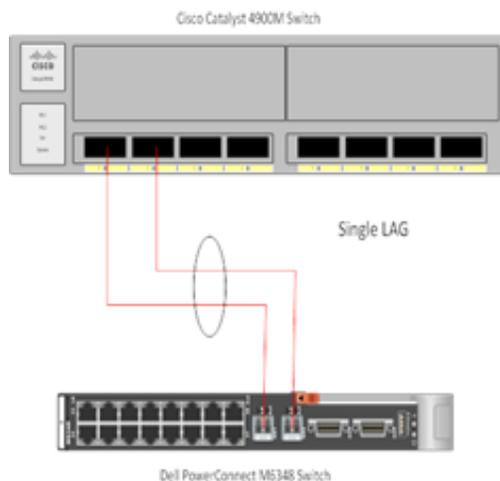


Figure 8 Scenario 2

### 1.2.1 Configuring the Dell M6348 Switch

#### 1.2.1.1 Command-Line Interface:

Figure 9 shows the command-line interface for configuring the Dell M6348 switch using firmware version 4.1. For details on firmware 3.1 please refer to Appendix A.

```
console(config)#port-aggregator group 1
console(config-portAggr-group-1)#interface gigabitethernet 1/0/1
console(config-portAggr-if-Gi1/0/1)#switchport general allowed vlan add 100 untagged
Warning! This operation changes default vlan of some interface(s).
console(config-portAggr-if-Gi1/0/1)#exit
console(config-portAggr-group-1)#exit
console(config)#exit
```

Figure 9 Dell M6348 switch CLI for Scenario 2

### 1.2.1.2 Web Interface:

Follow the steps below:

1. Select Switching > Port Aggregator > Internal Port VLAN.
2. Select any port from the **Internal-Port** menu. For this example we chose port Gi1/0/1.
3. Enter a VLAN number, i.e. 100, in the **Untagged-VLAN** field (Figure 10).

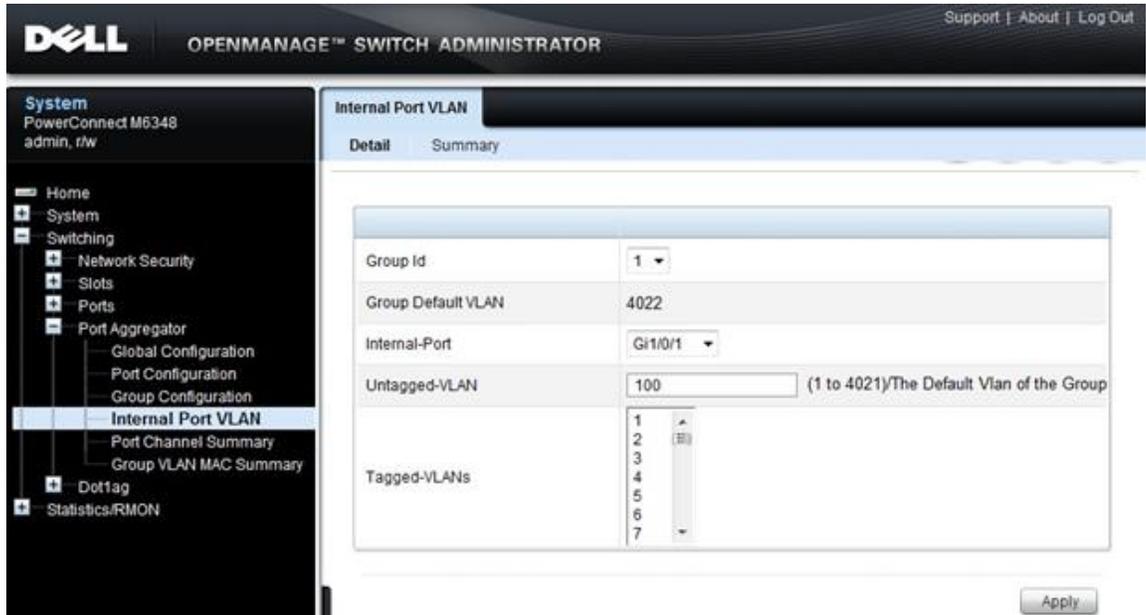


Figure 10 Dell M6348 switch Web interface for Scenario 2

4. Click **Apply**.

### 1.2.2 Configuring the Cisco 4900M Switch

Login to the Catalyst 4900M and make the following changes (Figure 11):

```
Switch#config t
Enter configuration commands, one per line. End with CNTL/Z.
Switch(config)#interface port-channel 1
Switch(config-if)#switchport
Switch(config-if)#switchport trunk allowed vlan 100
Switch(config-if)#switchport mode trunk
Switch(config-if)#interface range te 1/1-2
Switch(config-if-range)#switchport
Switch(config-if-range)#channel-group 1 mode active
Switch(config-if-range)#no shutdown
Switch(config-if-range)#exit
Switch(config)#exit
```

Figure 11 Cisco Catalyst 4900M switch CLI for Scenario 2

## 1.3 Scenario 3: Configuring multiple VLANs per internal port to connect to a server NIC with Tagging enabled

In this section, we provide an overview of configuring multiple VLANs per internal port to connect to a server NIC with Tagging enabled, which is useful for management of VMs.

**Note:** Adding a tagged or untagged VLAN to an internal port will add the same VLAN (tagged only) to all external ports that are members of the same port aggregator group as the internal port. The same VLAN cannot be in multiple aggregator groups on the M6348.

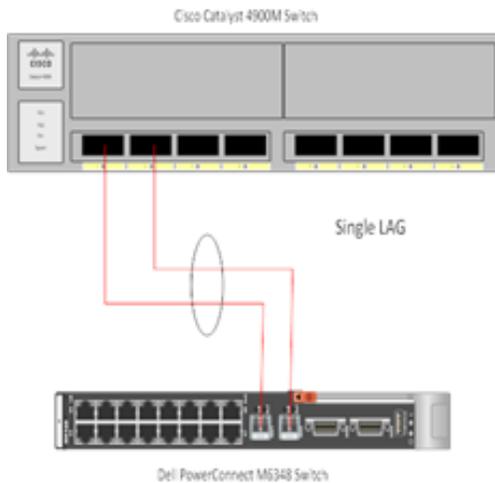


Figure 12 Scenario 3

### 1.3.1 Configuring the Dell M6348 Switch

#### 1.3.1.1 Command-Line Interface:

Shows the command-line interface for configuring Dell M6348 switch using firmware version 4.1. For details on firmware 3.1 please refer to Appendix A.

```
Switch#config t
Enter configuration commands, one per line. End with CNTL/Z.
Switch(config)#interface port-channel 1
Switch(config-if)#switchport
Switch(config-if)#switchport trunk allowed vlan 101-103
Switch(config-if)#switchport mode trunk
Switch(config-if)#interface range te 1/1-2
Switch(config-if-range)#switchport
Switch(config-if-range)#channel-group 1 mode active
Switch(config-if-range)#no shutdown
Switch(config-if-range)#exit
Switch(config)#exit
Switch#
```

Figure 13 Dell M6348 switch CLI for Scenario 3

### 1.3.1.2 Web Interface:

Follow the steps below:

1. Select Switching > Port Aggregator > Internal Port VLAN.
2. Select a port from the Internal-Port drop-down menu, i.e. Gi1/0/1.
3. From the Tagged-VLANs list select one or more VLANs, i.e. 101-103 (Figure 14).

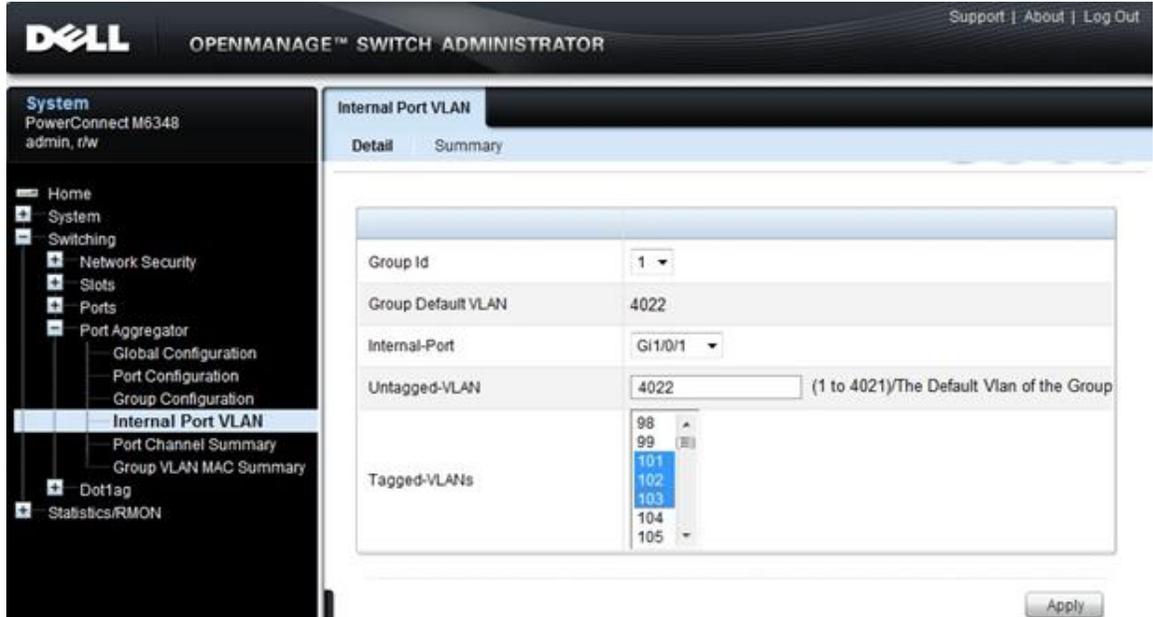


Figure 14 Dell M6348 switch web interface for Scenario 3

4. Click **Apply**.

### 1.3.2 Configuring the Cisco 4900M Switch

Login to the Catalyst 4900M and make the following changes (Figure 15):

```
Switch#config t
Enter configuration commands, one per line. End with CNTL/Z.
Switch(config)#interface port-channel 1
Switch(config-if)#switchport
Switch(config-if)#switchport trunk allowed vlan 101-103
Switch(config-if)#switchport mode trunk
Switch(config-if)#interface range te 1/1-2
Switch(config-if-range)#switchport
Switch(config-if-range)#channel-group 1 mode active
Switch(config-if-range)#no shutdown
Switch(config-if-range)#exit
Switch(config)#exit
Switch#
```

Figure 15 Cisco 4900M switch CLI for Scenario 3

## 1.4 Scenario 4: Configuring multiple Port Aggregation Groups and dedicating specific Uplinks

In this section, we provide an overview of configuring multiple Port Aggregation Groups (AGs to group specific attached blade servers) and dedicating specific Uplinks to carry that traffic to the Cisco Catalyst switch network. Doing this allows us to physically separate traffic for easier administration.

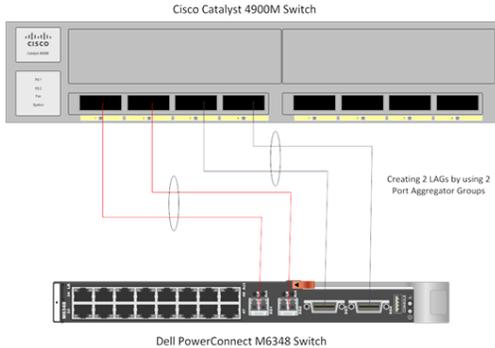


Figure 16 Scenario 4

### 1.4.1 Configuring the Dell M6348 Switch

#### 1.4.1.1 Command-Line Interface:

Figure 17 shows the command-line interface for configuring the Dell M6348 switch using firmware version 4.1.

```
console(config)#port-aggregator group 1
console(config-portAggr-group-1)#no add interface GigabitEthernet 1/0/17-40
console(config-portAggr-group-1)#add interface TengigabitEthernet 1/0/1-2
console(config-portAggr-group-1)#exit
console(config)#port-aggregator group 2
console(config-portAggr-group-2)#add interface GigabitEthernet 1/0/17-32
console(config-portAggr-group-2)#add interface TengigabitEthernet 1/0/3-4
console(config-portAggr-group-2)#exit
console(config)#exit
```

Figure 17 M6348 switch CLI for Scenario 4

### 1.4.1.2 Web Interface:

Follow the steps below:

1. Select Switching > Port Aggregator > Port Configuration.
2. Add **Group 2** ports:
  - a. Change the group ID of *half* of the internal ports, i.e. Gi1/0/17-32, to group 2 (Figure 18).

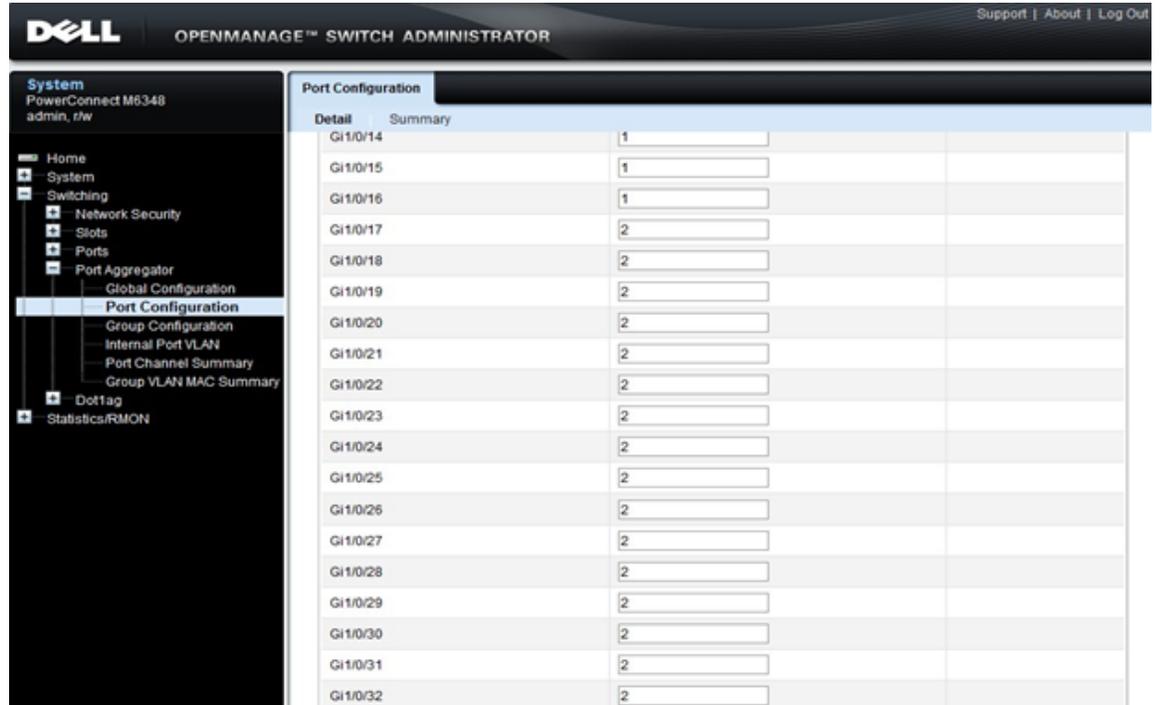


Figure 18 Dell M6348 switch web interface, port configuration, for Scenario 4

- b. Change the group ID of the external ports you want to use, i.e. Te1/0/3-4 to group 2 (Figure 19).

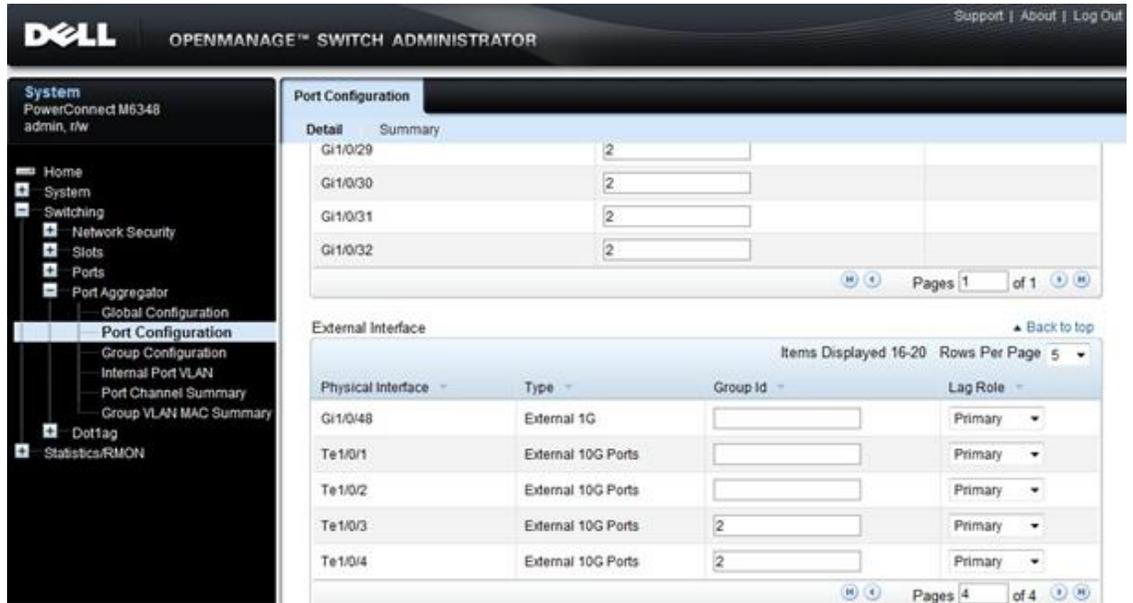


Figure 19 Dell M6348 switch web interface, external interface, for Scenario 4

- 3. Add Group 1 ports
  - a. Verify the group ID of the other half of the internal ports, i.e. Gi1/0/1-16, remains in group 1 (the default for internal ports) (Figure 20).

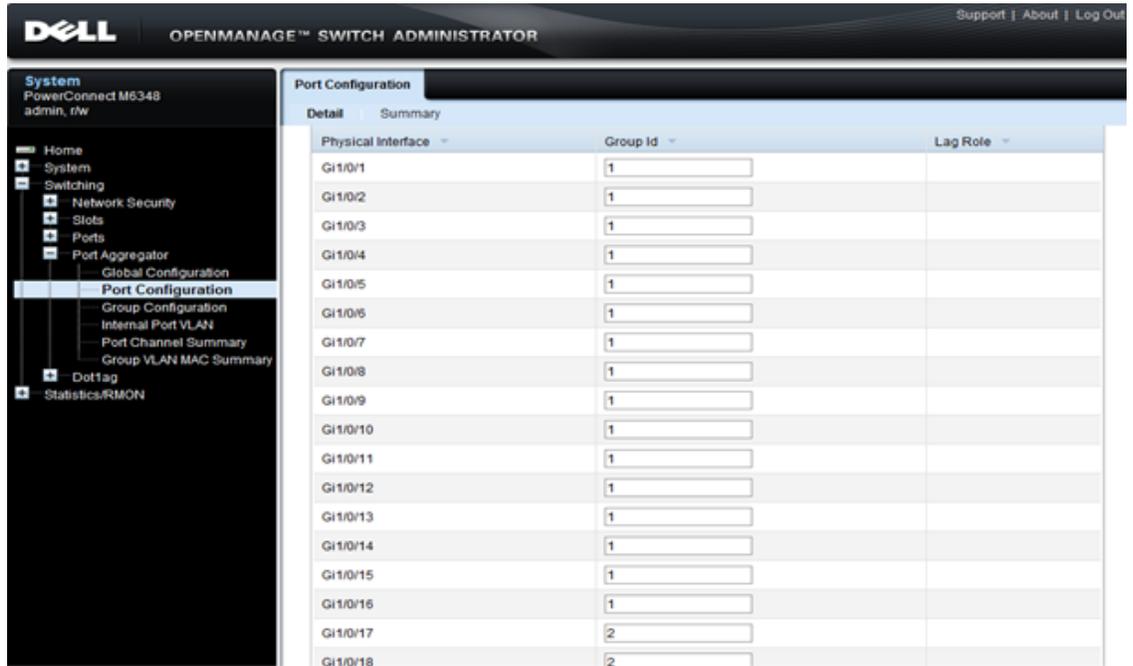


Figure 20 Dell M6348 switch web interface, internal ports, for Scenario 4

- b. Remove the group ID from all default external ports, i.e. Gi1/0/33-40 (Figure 21):

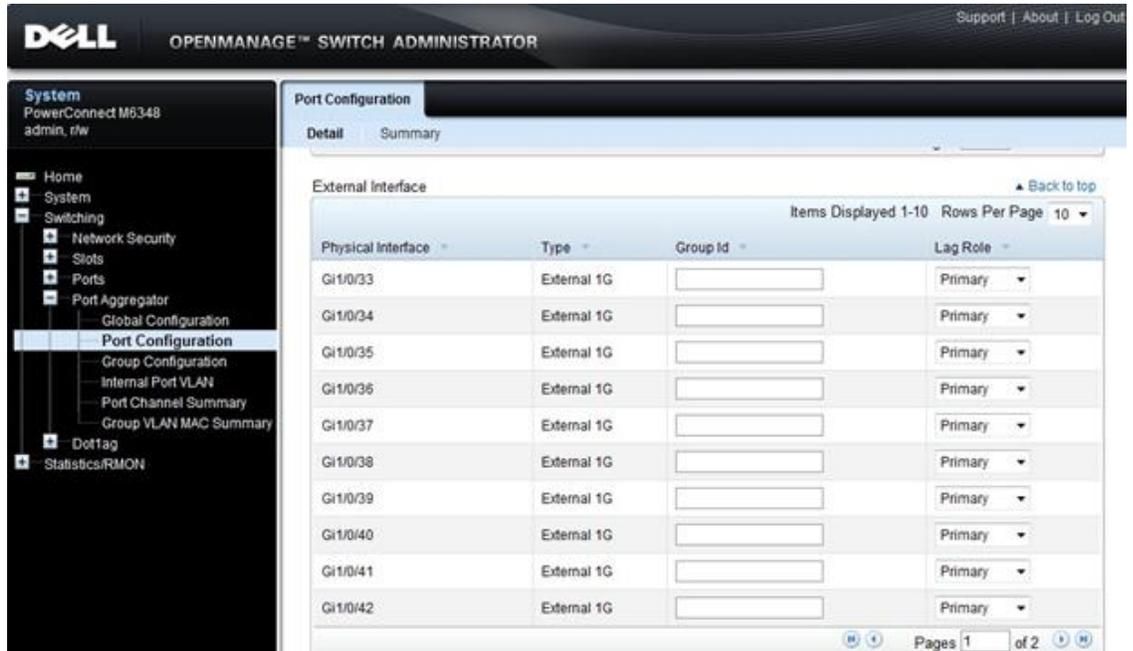


Figure 21 Dell M6348 switch web interface, default external ports, for Scenario 4

- c. Change the group ID of the external ports you want to use, i.e. Te1/0/1-2, to group 1 (Figure 22):

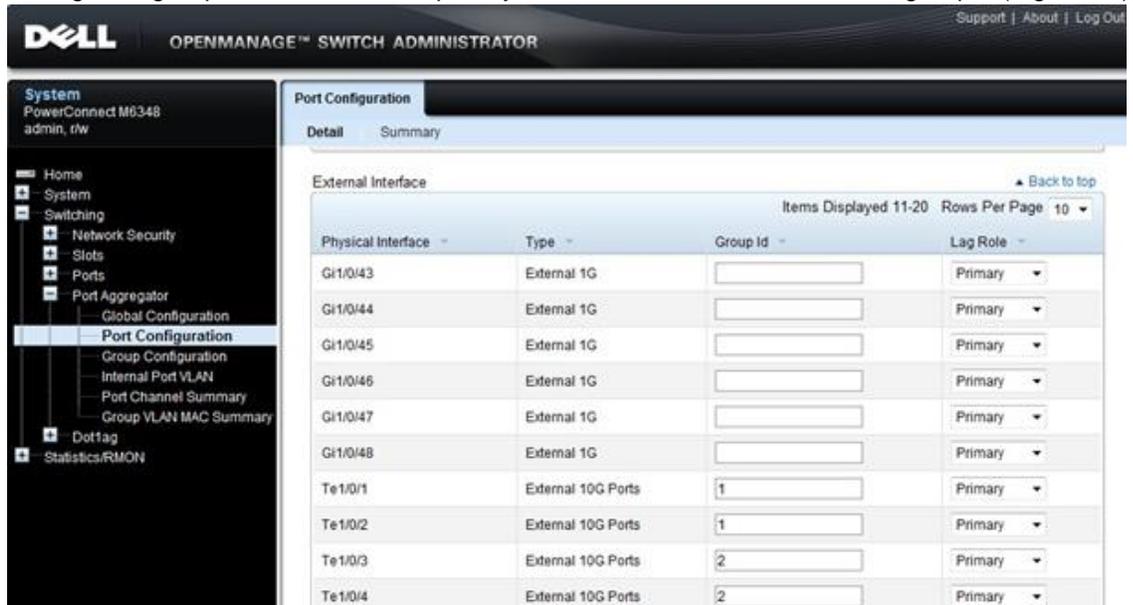


Figure 22 Dell M6348 switch web interface, port configuration, for Scenario 4

- d. Click **Apply**.

## 1.4.2 Configuring the Cisco 4900M Switch

Login to the Catalyst 4900M and enter the following commands (Figure 23) to configure port channels and add them to the ports. In this example we are adding ports 1-2 to port-channel 1 and ports 3-4 to port-channel 2.

```
Switch#config t
Enter configuration commands, one per line.  End with CNTL/Z.
Switch(config)#interface port-channel 1
Switch(config-if)#switchport
Switch(config-if)#switchport access vlan 110
Switch(config-if)#interface port-channel 2
Switch(config-if)#switchport
Switch(config-if)#switchport access vlan 111
Switch(config-if)#exit
Switch(config)#interface range TenGigabitEthernet 1/1-2
Switch(config-if-range)#switchport
Switch(config-if-range)#channel-group 1 mode active
Switch(config-if-range)#no shutdown
Switch(config-if-range)#exit
Switch(config)#interface range TenGigabitEthernet 1/3-4
Switch(config-if-range)#switchport
Switch(config-if-range)#channel-group 2 mode active
Switch(config-if-range)#no shutdown
Switch(config-if-range)#exit
Switch(config)#exit
```

Figure 23 Cisco 4900M switch CLI for Scenario 4

## 1.5 Scenario 5: Adding VLANs in a multi-AG configuration

In this section, we provide an overview of adding VLANs in a multi-AG configuration, which combine the advantages of virtual network administration with physical network separation.

### Notes:

1. The Tengigabitethernet ports 1/0/3 and 1/0/4 used in this example on the M6348 are CX4s and will require your Catalyst 4900M to have X2-CX4-10G modules installed in order to connect the second LAG.
2. Ports Tengigabitethernet 1/0/3 and 1/0/4 on the M6348 are in stacking mode by default. You will need toggle them to Ethernet mode to establish links to the Catalyst 4900M.

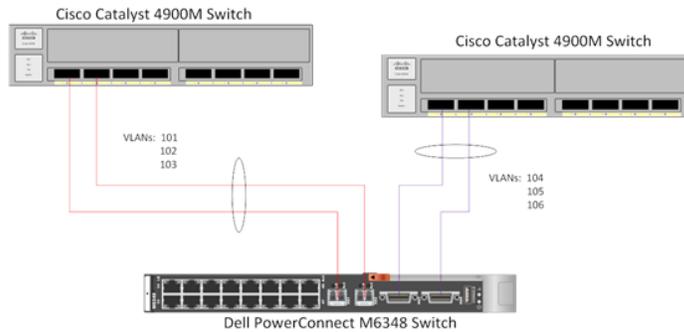


Figure 24 Scenario 5

## 1.5.1 Configuring the Dell M6348 Switch

### 1.5.1.1 Command-Line Interface:

Figure 25 shows the command-line interface for configuring Dell M6348 switch using firmware version 4.1.

```

console(config)#port-aggregator group 1
console(config-portAggr-group-1)#no add interface GigabitEthernet 1/0/17-40
console(config-portAggr-group-1)#add interface TengigabitEthernet 1/0/1-2
console(config-portAggr-group-1)#interface GigabitEthernet 1/0/1
console(config-portAggr-if-Gi1/0/1)#switchport general allowed vlan add 101-103
console(config-portAggr-if-Gi1/0/1)#exit
console(config-portAggr-group-1)#exit
console(config)#port-aggregator group 2
console(config-portAggr-group-2)#add interface GigabitEthernet 1/0/17-32
console(config-portAggr-group-2)#add interface TengigabitEthernet 1/0/3-4
console(config-portAggr-group-2)#interface GigabitEthernet 1/0/17
console(config-portAggr-if-Gi1/0/17)#switchport general allowed vlan add 104-106
console(config-portAggr-if-Gi1/0/17)#exit
console(config-portAggr-group-2)#exit
console(config)#exit

```

Figure 25 Dell M6348 switch CLI for Scenario 5

### 1.5.1.2 Web Interface:

Follow the steps below:

1. Select Switching > Port Aggregator > Port Configuration.
2. Add **Group 2** ports:

- a. Change the group ID of *half* of the internal ports, i.e. Gi1/0/17-32, to group 2 (Figure 26).

The screenshot shows the Dell OpenManage Switch Administrator web interface. The left sidebar contains a navigation tree with 'Port Configuration' selected. The main content area displays a table of internal ports (Gi1/0/14 to Gi1/0/32) with a 'Group ID' column. The values in the 'Group ID' column are 1 for Gi1/0/14-16 and 2 for Gi1/0/17-32.

Port	Group ID
Gi1/0/14	1
Gi1/0/15	1
Gi1/0/16	1
Gi1/0/17	2
Gi1/0/18	2
Gi1/0/19	2
Gi1/0/20	2
Gi1/0/21	2
Gi1/0/22	2
Gi1/0/23	2
Gi1/0/24	2
Gi1/0/25	2
Gi1/0/26	2
Gi1/0/27	2
Gi1/0/28	2
Gi1/0/29	2
Gi1/0/30	2
Gi1/0/31	2
Gi1/0/32	2

Figure 26 Dell M6348 switch web interface, group 2 internal ports, for scenario 5

- b. Change the group ID of the external ports you want to use, i.e. Te1/0/3-4, to group 2 (Figure 27).

The screenshot shows the Dell OpenManage Switch Administrator web interface. The left sidebar contains a navigation tree with 'Port Configuration' selected. The main content area displays a table of external interfaces (Gi1/0/29 to Gi1/0/32) with a 'Group ID' column. The values in the 'Group ID' column are 2 for Gi1/0/29-32. Below this, there is an 'External Interface' table showing physical interfaces (Gi1/0/48 to Te1/0/4) with a 'Group ID' column. The values in the 'Group ID' column are 2 for Te1/0/3 and Te1/0/4.

Port	Group ID
Gi1/0/29	2
Gi1/0/30	2
Gi1/0/31	2
Gi1/0/32	2

Physical Interface	Type	Group ID	Lag Role
Gi1/0/48	External 1G		Primary
Te1/0/1	External 10G Ports		Primary
Te1/0/2	External 10G Ports		Primary
Te1/0/3	External 10G Ports	2	Primary
Te1/0/4	External 10G Ports	2	Primary

Figure 27 Dell M6348 switch web interface, group 2 external ports, for scenario 5

3. Add **Group 1** ports:
  - a. Verify the group ID of the *other half* of the internal ports, i.e. Gi1/0/1-16, remains in group 1 (the default for internal ports) (Figure 28).

The screenshot shows the Dell OpenManage Switch Administrator web interface. The left sidebar contains a navigation tree with 'Port Configuration' selected. The main content area displays a table of port configurations. The table has three columns: 'Physical Interface', 'Group Id', and 'Lag Role'. The rows show ports Gi1/0/1 through Gi1/0/18. Ports Gi1/0/1 through Gi1/0/16 are assigned to Group 1, while ports Gi1/0/17 and Gi1/0/18 are assigned to Group 2.

Physical Interface	Group Id	Lag Role
Gi1/0/1	1	
Gi1/0/2	1	
Gi1/0/3	1	
Gi1/0/4	1	
Gi1/0/5	1	
Gi1/0/6	1	
Gi1/0/7	1	
Gi1/0/8	1	
Gi1/0/9	1	
Gi1/0/10	1	
Gi1/0/11	1	
Gi1/0/12	1	
Gi1/0/13	1	
Gi1/0/14	1	
Gi1/0/15	1	
Gi1/0/16	1	
Gi1/0/17	2	
Gi1/0/18	2	

Figure 28 Dell M6348 switch web interface, group 1 internal ports, for scenario 5

- b. Remove the group ID from all default external ports, i.e. Gi1/0/33-40 (Figure 29).

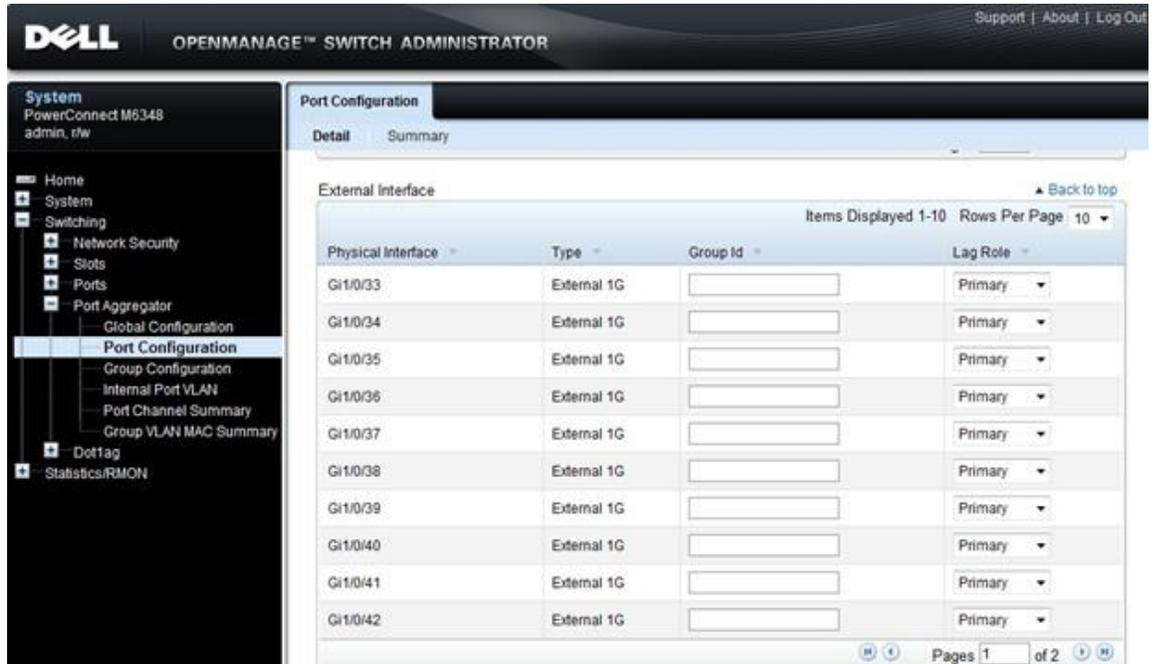


Figure 29 Dell M6348 switch web interface, group 1 default external ports, for scenario 5

- c. Change the group ID of the external ports you want to use, i.e. Te1/0/1-2, to group 1 (Figure 30).

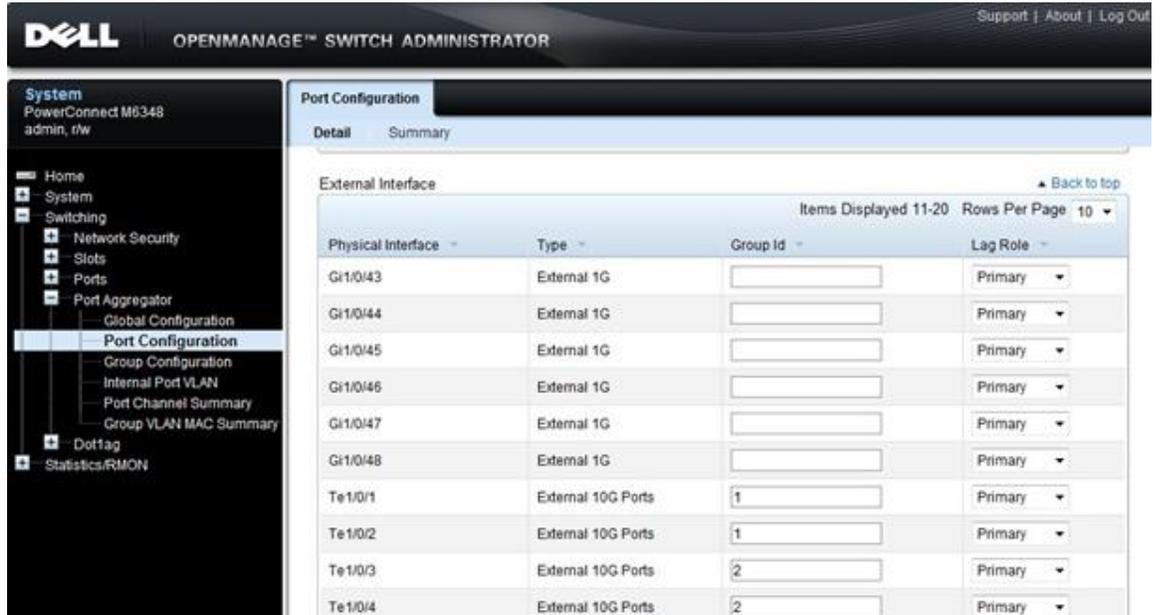


Figure 30 Dell M6348 switch web interface, group1 used external ports, for scenario 5

- d. Click **Apply**.

Follow these next steps to assign internal port VLANs.

1. Select Switching > Port Aggregator > Internal Port VLAN
2. Make sure **Group Id** is set to 1.
3. Select a port from the **Internal-Port** drop-down menu, i.e. Gi1/0/1.
4. In the **Tagged-VLANs** menu, select the VLANs, i.e. 101-103, for this port (Figure 31).

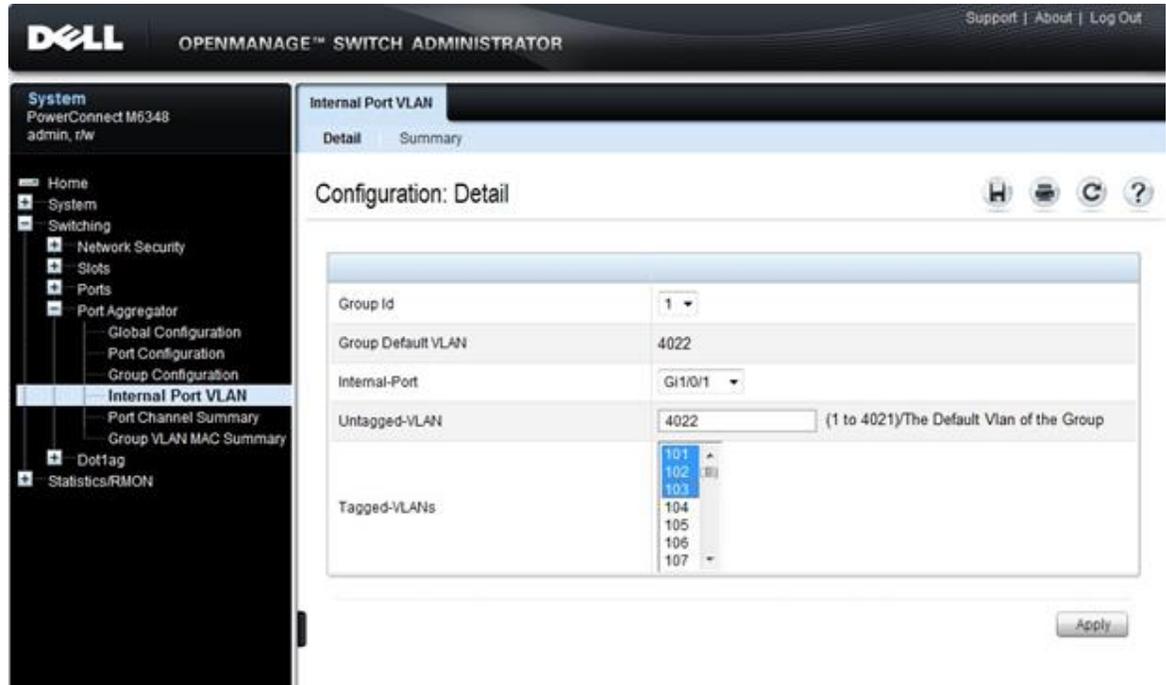


Figure 31 Dell M6348 switch web interface, group 1 Configuration Detail, for scenario 5

5. Click **Apply**.
6. Change the **Group Id** to 2.
7. Select a port from group 2 using the **Internal-Port** drop-down menu, i.e. Gi1/0/17.

- In the **Tagged-VLANs** menu, select the VLANs, i.e. 104-106, for this port (Figure 32).

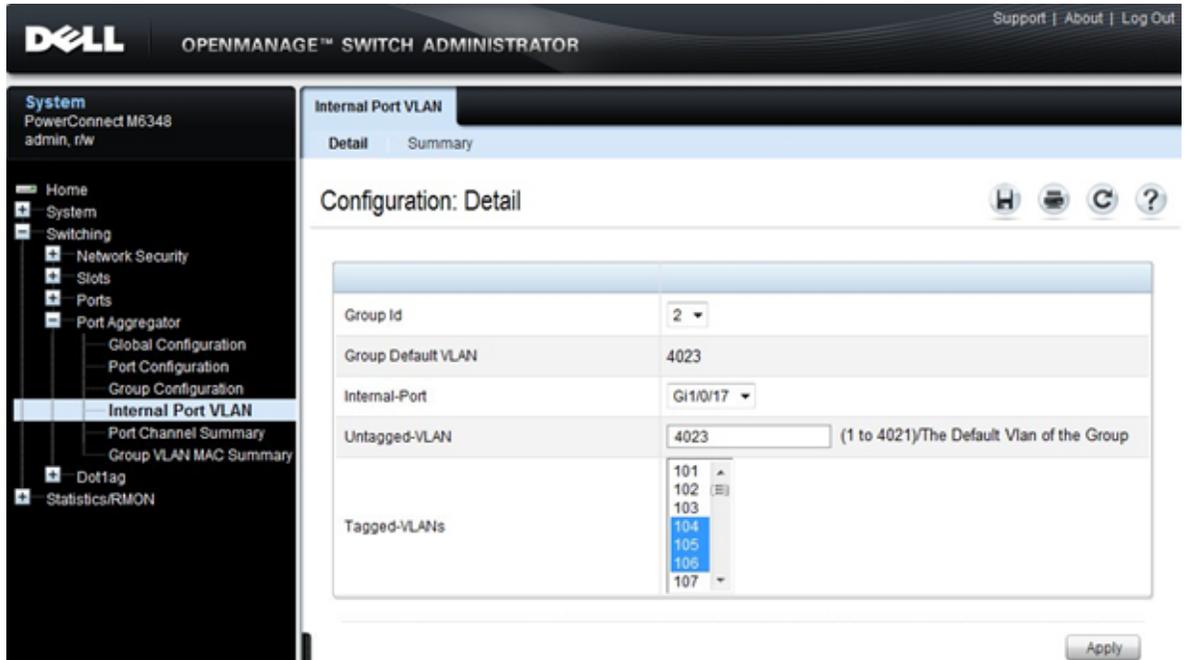


Figure 32 Dell M6348 switch web interface, group 2 Configuration Detail, for scenario 5

- Click **Apply**.

## 1.5.2 Configuring the Cisco 4900M Switch

Login to the first Catalyst and enter the following commands (Figure 33) to configure trunking and multiple VLANs on a port-channel.

```
Switch#config t
Enter configuration commands, one per line. End with CNTL/Z.
Switch(config)#interface port-channel 1
Switch(config-if)#switchport
Switch(config-if)#switchport trunk allowed vlan 101-103
Switch(config-if)#switchport mode trunk
Switch(config-if)#interface range te 1/1-2
Switch(config-if-range)#switchport
Switch(config-if-range)#channel-group 1 mode active
Switch(config-if-range)#no shutdown
Switch(config-if-range)#exit
Switch(config)#exit
```

Figure 33 Cisco 4900M switch CLI for Scenario 5

Login to the second Catalyst and enter the following commands (Figure 34) to again configure trunking and multiple VLANs on a port-channel.

```
Switch#config t
Enter configuration commands, one per line. End with CNTL/Z.
Switch(config)#interface port-channel 1
Switch(config-if)#switchport
Switch(config-if)#switchport trunk allowed vlan 104-106
Switch(config-if)#switchport mode trunk
Switch(config-if)#interface range te 1/1-2
Switch(config-if-range)#switchport
Switch(config-if-range)#channel-group 1 mode active
Switch(config-if-range)#no shutdown
Switch(config-if-range)#exit
Switch(config)#exit
```

Figure 34 Cisco 4900M switch CLI for Scenario 5

## 1.6 Scenario 6: Setting up a LAG backup for failover

In this section, we provide an overview of setting up a straight-through topology with LAG failover. Simple Switch Mode LAG failover allows Dell switches to automatically change from the primary to the backup LAG in the event of a port failure, reducing potential downtime.

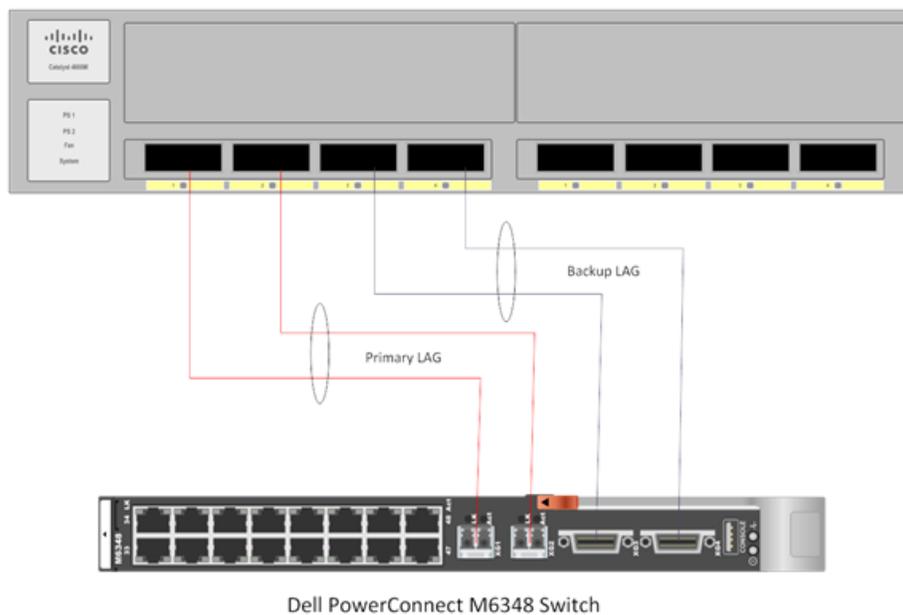


Figure 35 Scenario 6

## 1.6.1 Configuring the Dell M6348 Switch

### 1.6.1.1 Command-Line Interface

If you are using the M6348 CLI, enter the following commands to remove all external 1Gig ports from port-aggregator group 1. Then add two external 10Gig ports to group 1 as the primary LAG and another two external 10Gig ports to group 1 as the secondary LAG. Figure 36 shows the command-line interface for configuring Dell M6348 switch using firmware version 4.1.

```
console#config
console(config)#port-aggregator group 1
console(config-portAggr-group-1)#no add interface GigabitEthernet 1/0/33-48
console(config-portAggr-group-1)#add interface TengigabitEthernet 1/0/1-2
console(config-portAggr-group-1)#add interface TengigabitEthernet 1/0/3-4 secondary
console(config-portAggr-group-1)#exit
console(config)#exit
```

Figure 36 M6348 Group 1 CLI for scenario 6

### 1.6.1.2 Web Interface:

Follow the steps below:

1. Select Switching > Port Aggregator > Port Configuration
2. In the Port Configuration screen, make ports Te1/0/1-4 members of Group Id 1.
3. Remove the 1 from the Group Id fields for ports Gi1/0/33-48.
4. Verify the Lag Role fields for Te1/0/1 and Te1/0/2 are set to Primary.

- Change the Lag Role of ports Te1/0/3 and Te1/0/4 to 2 Secondary (Figure 37).

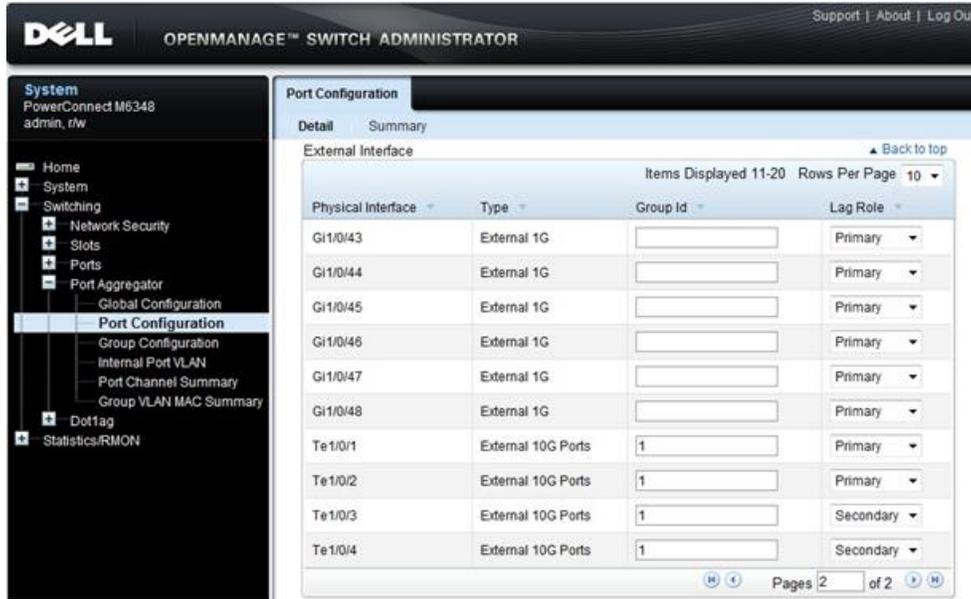


Figure 37 Dell M6348 switch web interface for scenario 6

- Click **Apply**.

## 1.6.2 Configuring the Cisco 4900M Switch

Login to the Catalyst 4900M and make the following changes (Figure 38):

```
Switch#conf t
Enter configuration commands, one per line. End with CNTL/Z.
Switch(config)#interface port-channel 1
Switch(config-if)#switchport
Switch(config-if)#switchport access vlan 101
Switch(config-if)#interface port-channel 2
Switch(config-if)#switchport
Switch(config-if)#switchport access vlan 101
Switch(config-if)#interface range te 1/1-2
Switch(config-if-range)#switchport
Switch(config-if-range)#channel-group 1 mode active
Switch(config-if-range)#no shutdown
Switch(config-if-range)#interface range te 1/3-4
Switch(config-if-range)#switchport
Switch(config-if-range)#channel-group 2 mode active
Switch(config-if-range)#no shutdown
Switch(config-if-range)#exit
Switch(config)#exit
```

Figure 38 Cisco 4900M switch CLI for Scenario 6

## A M6348 screens using firmware 3.1

This appendix shows how the commands in this document look if you are using firmware version 3.1.x.x on your M6348. Examples are shown for the scenarios 1 through 3 only.

**Note:** Dell EMC recommends that you run the latest firmware available for your device.

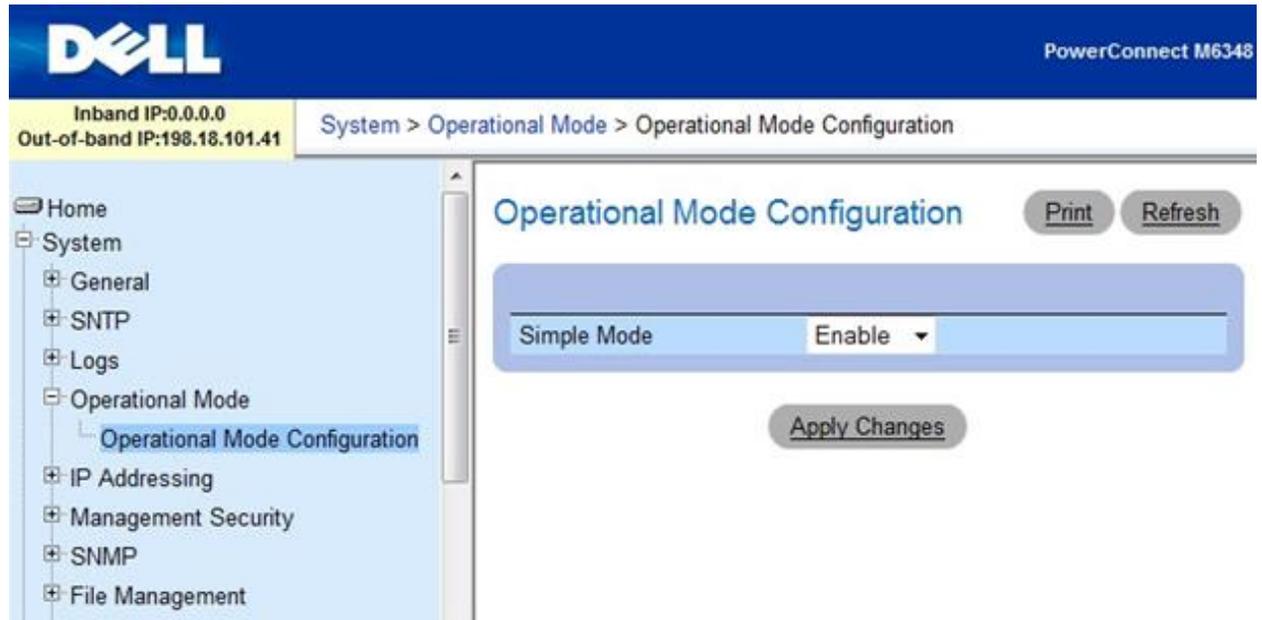


Figure 39 Operational Mode Configuration web interface screen – enable Simple Mode

```

console#configure
console(config)#port-aggregator group 1
console(config-portAggr-group-1)#no add ethernet 1/g33-1/g40
console(config-portAggr-group-1)#add ethernet 1/xg1-1/xg2
console(config-portAggr-group-1)#exit
console(config)#exit
console#

```

Figure 40 Scenario 1: Plug and play Dell PowerConnect M6348 switch-CLI

The screenshot shows the Dell PowerConnect M6348 switch web interface. The breadcrumb navigation is "Switching > Port Aggregator > Port Configuration". The page title is "Port Configuration". A "Unit" dropdown menu is set to "1". Below this is a table with the following columns: Internal Ports, Group Id, External 1G Ports, Group Id, Lag Role, External 10G Ports, Group Id, and Lag Role. The table contains 13 rows of data, each representing a port configuration for a specific internal port (1/g1 to 1/g13).

Internal Ports	Group Id	External 1G Ports	Group Id	Lag Role	External 10G Ports	Group Id	Lag Role
1/g1	1	1/g33		Primary	1/xg1	1	Primary
1/g2	1	1/g34		Primary	1/xg2	1	Primary
1/g3	1	1/g35		Primary	1/xg3		Primary
1/g4	1	1/g36		Primary	1/xg4		Primary
1/g5	1	1/g37		Primary			
1/g6	1	1/g38		Primary			
1/g7	1	1/g39		Primary			
1/g8	1	1/g40		Primary			
1/g9	1	1/g41		Primary			
1/g10	1	1/g42		Primary			
1/g11	1	1/g43		Primary			
1/g12	1	1/g44		Primary			
1/g13	1	1/g45		Primary			

Figure 41 Scenario 1: Plug and play Dell PowerConnect M6348 switch-web interface

```

console#configure
console(config)#port-aggregator group 1
console(config-portAggr-group-1)#interface ethernet 1/g1
console(config-portAggr-if-1/g1)#switchport general allowed vlan add 100 untagged
Warning! This operation changes default vlan of some interface(s).
console(config-portAggr-if-1/g1)#exit

console(config-portAggr-group-1)#exit
console(config)#exit
console#

```

Figure 42 Scenario 2: Configuring VLANs on Dell PowerConnect M6348 switch Internal ports - CLI

The screenshot shows the Dell PowerConnect M6348 web interface. The top navigation bar includes the Dell logo and the text 'PowerConnect M6348'. Below the navigation bar, the breadcrumb path is 'Switching > Port Aggregator > Internal Port VLAN Configuration'. The left sidebar contains a navigation menu with the following items: Home, System, Switching, Network Security, Ports, Port Aggregator (selected), Global Configuration, Port Configuration, Port Configuration Summary, Group Configuration Summary, Internal Port VLAN Configuration (highlighted), Internal Port VLAN Summary, Port Channel Summary, and Group VLAN MAC Summary. The main content area is titled 'Internal Port VLAN Configuration' and contains the following configuration fields:

- Group Id: 1
- Group Default VLAN: 4022
- Internal-Port: 1/g1
- Untagged-VLAN: 100 (1 to 4021)The Default Vlan of the Group
- Tagged-VLANs: A list of VLANs from 1 to 7.

Buttons for 'Print', 'Refresh', and 'Apply Changes' are located at the bottom right of the configuration area.

Figure 43 Scenario 2: Configuring VLANs on Dell PowerConnect M6348 switch Internal ports - web interface

```

console#config
console(config)#port-aggregator group 1
console(config-portAggr-group-1)#lACP auto
console(config-portAggr-group-1)#interface ethernet 1/g1
console(config-portAggr-if-1/g1)#switchport general allowed vlan add 101-103
console(config-portAggr-if-1/g1)#exit
console(config-portAggr-group-1)#exit
console(config)#port-aggregator lag-failover
Warning! Please ensure that lACP mode is 'auto' for all groups.
console(config)#exit

```

Figure 44 Scenario 3: Configuring Multiple VLANS per internal port to connect to a server NIC with Tag enabled – CLI

The screenshot displays the Dell PowerConnect M6348 web interface for configuring an internal port VLAN. The breadcrumb trail indicates the path: Switching > Port Aggregator > Internal Port VLAN Configuration. The configuration form is as follows:

Group Id	1
Group Default VLAN	4022
Internal-Port	1/g1
Untagged-VLAN	4022 (1 to 4021)The Default Vlan of the Group
Tagged-VLANs	99, 100, 101, 102, 103, 104, 105

An 'Apply Changes' button is located at the bottom of the configuration area.

Figure 45 Scenario 3: Configuring Multiple VLANS per internal port to connect to a server NIC with Tag enabled – web interface

## B Network switch versions

Version information for the network switches we used are as follows:

Network switch	Software version
Dell PowerConnect M6348	3.1.5.7 and 4.1.0.6
Cisco Catalyst 4900M	12.2(54)SG1 (fc1)

## About Dell EMC

Dell EMC is a leading technology provider to commercial and public enterprises around the world.