

# RAID Profile

**Document Number: DCIM1031**  
**Document Type: Specification**  
**Document Status: Published**  
**Document Language: E**  
**Date: 2014-09-12**

**Version: 1.6.0**



31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66

THIS PROFILE IS FOR INFORMATIONAL PURPOSES ONLY, AND MAY CONTAIN TYPOGRAPHICAL ERRORS AND TECHNICAL INACCURACIES. THE CONTENT IS PROVIDED AS IS, WITHOUT EXPRESS OR IMPLIED WARRANTIES OF ANY KIND. ABSENT A SEPARATE AGREEMENT BETWEEN YOU AND DELL™ WITH REGARD TO FEEDBACK TO DELL ON THIS PROFILE SPECIFICATION, YOU AGREE ANY FEEDBACK YOU PROVIDE TO DELL REGARDING THIS PROFILE SPECIFICATION WILL BE OWNED AND CAN BE FREELY USED BY DELL.

© 2010 – 2012 Dell Inc. All rights reserved. Reproduction in any manner whatsoever without the express written permission of Dell, Inc. is strictly forbidden. For more information, contact Dell.

*Dell* and the *DELL* logo are trademarks of Dell Inc. *Microsoft* and *WinRM* are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries. Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell disclaims proprietary interest in the marks and names of others.

## CONTENTS

1	Scope .....	7
2	Normative References.....	7
3	Terms and Definitions .....	8
4	Symbols and Abbreviated Terms .....	9
5	Synopsis .....	10
6	Description .....	10
7	Implementation Description .....	12
7.1	View Classes .....	12
7.2	Attributes.....	41
7.3	DCIM_RAIDService .....	47
7.4	RAID Profile Registration.....	48
8	Methods.....	50
8.1	DCIM_RAIDService.AssignSpare() .....	50
8.2	DCIM_RAIDService.ResetConfig() .....	51
8.3	DCIM_RAIDService.ClearForeignConfig() .....	52
8.4	DCIM_RAIDService.DeleteVirtualDisk() .....	52
8.5	DCIM_RAIDService.CreateVirtualDisk().....	53
8.6	DCIM_RAIDService.InitializeVirtualDisk() .....	56
8.7	DCIM_RAIDService.GetDHSDisks () .....	57
8.8	DCIM_RAIDService.GetRAIDLevels().....	58
8.9	DCIM_RAIDService.GetAvailableDisks () .....	59
8.10	DCIM_RAIDService.CheckVDValues() .....	60
8.11	DCIM_RAIDService.SetControllerKey() .....	62
8.12	DCIM_RAIDService.LockVirtualDisk ().....	64
8.13	DCIM_RAIDService.CreateTargetedConfigJob() .....	64
8.14	DCIM_RAIDService.DeletePendingConfiguration() .....	67
8.15	DCIM_RAIDService.SetAttribute() .....	68
8.16	DCIM_RAIDService.SetAttributes() .....	69
8.17	DCIM_RAIDService.RemoveControllerKey() .....	70
8.18	DCIM_RAIDService.EnableControllerEncryption().....	71
8.19	DCIM_RAIDService.ReKey() .....	72
8.20	DCIM_RAIDService.UnassignSpare() .....	74
8.21	DCIM_RAIDService.ConvertToRAID() .....	75
8.22	DCIM_RAIDService.ConvertToNonRAID().....	75
8.23	DCIM_RAIDService.ImportForeignConfig().....	76
8.24	DCIM_RAIDService.BlinkTarget() .....	77
8.25	DCIM_RAIDService.UnBlinkTarget().....	78
8.26	DCIM_RAIDService.CheckConsistency ().....	79
8.27	DCIM_RAIDService.CancelCheckConsistency () .....	80
8.28	DCIM_RAIDService.StartPatrolRead () .....	80
8.29	DCIM_RAIDService.StopPatrolRead () .....	81
8.30	DCIM_RAIDService.SecureErase () .....	82
8.31	DCIM_RAIDService.ExportLog () .....	83
8.32	DCIM_RAIDService.PrepareToRemove() .....	84
9	Use Cases .....	86
10	CIM Elements .....	86
11	Privilege and License Requirement .....	86
	ANNEX A (informative) Change Log.....	89
	<b>Figures</b>	
	Figure 1 –RAID Profile: Class Diagram .....	11

## 119 Tables

120	Table 1 – Related Profiles.....	10
121	Table 2 – CIM Elements: RAID Profile.....	12
122	Table 3 – DCIM_ControllerView - Operations.....	13
123	Table 4 – DCIM_ControllerView - Properties.....	13
124	Table 5 – DCIM_EnclosureView - Operations .....	17
125	Table 6 – DCIM_EnclosureView - Properties .....	17
126	Table 7 – DCIM_VirtualDiskView - Operations .....	19
127	Table 8 – DCIM_VirtualDiskView - Properties .....	19
128	Table 9 – DCIM_PhysicalDiskView - Operations.....	24
129	Table 10 – DCIM_PhysicalDiskView - Properties .....	24
130	Table 11 – DCIM_ControllerBatteryView - Operations .....	28
131	Table 12 – DCIM_ControllerBatteryView - Properties .....	29
132	Table 13 – DCIM_EnclosureEMMView - Operations.....	30
133	Table 14 – DCIM_EnclosureEMMView - Properties.....	30
134	Table 15 – DCIM_EnclosurePSUView - Operations.....	31
135	Table 16 – DCIM_EnclosurePSUView - Properties.....	31
136	Table 17 – DCIM_EnclosureFanSensor - Operations .....	32
137	Table 18– DCIM_EnclosureFanSensor - Properties .....	32
138	Table 19 – DCIM_EnclosureTemperatureSensor - Operations.....	34
139	Table 20 – DCIM_EnclosureTemperatureSensor - Properties .....	34
140	Table 21 – DCIM_PCleSSDView - Operations.....	35
141	Table 22 – DCIM_PCleSSDView – Properties .....	36
142	Table 23 – DCIM_PCleSSDBackPlaneView - Operations .....	38
143	Table 24 – DCIM_PCleSSDBackPlaneView – Properties.....	39
144	Table 25 – DCIM_PCleSSDView - Operations.....	40
145	Table 26 – DCIM_PCleSSDExtenderView – Properties.....	40
146	Table 11 – DCIM_RAIDEnumeration - Operations.....	42
147	Table 12 – Class: DCIM_RAIDEnumeration.....	42
148	Table 13 – DCIM_RAIDEnumeration Attributes.....	42
149	Table 14 – DCIM_RAIDString - Operations .....	44
150	Table 15 – Class: DCIM_RAIDString.....	45
151	Table 16 – DCIM_RAIDString Attributes.....	45
152	Table 17 – DCIM_RAIDInteger - Operations .....	46
153	Table 17 – Class: DCIM_RAIDInteger .....	46
154	Table 18 – DCIM_RAIDInteger Attributes .....	47
155	Table 19 – DCIM_RAIDService – Operations.....	48
156	Table 20 – Class: DCIM_RAIDService .....	48
157	Table 21 – DCIM_LCRegisteredProfile - Operations.....	49
158	Table 22 – Class: DCIM_RegisteredProfile .....	49
159	Table 23 –DCIM_RAIDService.AssignSpare() Method: Return Code Values.....	50
160	Table 24 – DCIM_RAIDService.AssignSpare() Method: Standard Messages .....	50
161	Table 25 – DCIM_RAIDService.AssignSpare() Method: Parameters .....	50
162	Table 26 – DCIM_RAIDService.ResetConfig() Method: Return Code Values .....	51
163	Table 27 – DCIM_RAIDService.ResetConfig() Method: Standard Messages .....	51
164	Table 28 – DCIM_RAIDService.ResetConfig() Method: Parameters .....	51
165	Table 29 – DCIM_RAIDService. ClearForeignConfig() Method: Return Code Values.....	52

166	Table 30 – DCIM_RAIDService.ClearForeignConfig() Method: Standard Messages.....	52
167	Table 31 – DCIM_RAIDService.ClearForeignConfig() Method: Parameters.....	52
168	Table 32 – DCIM_RAIDService.DeleteVirtualDisk() Method: Return Code Values .....	53
169	Table 33 – DCIM_RAIDService.DeleteVirtualDisk() Method: Standard Messages.....	53
170	Table 34 – DCIM_RAIDService.DeleteVirtualDisk () Method: Parameters .....	53
171	Table 35 – DCIM_RAIDService.CreateVirtualDisk() Method: VDPProp (Cachecade) .....	54
172	Table 36 – DCIM_RAIDService.CreateVirtualDisk() Method: VDPProp .....	54
173	Table 37 – DCIM_RAIDService.CreateVirtualDisk () Method: Return Code Values .....	55
174	Table 38 – DCIM_RAIDService.CreateVirtualDisk () Method: Standard Messages .....	55
175	Table 39 – DCIM_RAIDService.CreateVirtualDisk () Method: Parameters .....	56
176	Table 40 – DCIM_RAIDService.InitializeVirtualDisk() Method: Return Code Values.....	56
177	Table 41 – DCIM_RAIDService.InitializeVirtualDisk() Method: Standard Messages .....	56
178	Table 42 – DCIM_RAIDService.InitializeVirtualDisk () Method: Parameters.....	57
179	Table 43 – DCIM_RAIDService.GetDHSDisks () Method: Return Code Values.....	57
180	Table 44 – DCIM_RAIDService.GetDHSDisks() Method: Standard Messages .....	57
181	Table 45 – DCIM_RAIDService.GetDHSDisks () Method: Parameters.....	57
182	Table 46 – DCIM_RAIDService.GetRAIDLevels() Method: Return Code Values .....	58
183	Table 42 – DCIM_RAIDService. GetRAIDLevels() Method: Standard Messages.....	58
184	Table 47 – DCIM_RAIDService.GetRAIDLevels () Method: Parameters .....	58
185	Table 48 –DCIM_RAIDService.GetAvailableDisks() Method: Return Code Values.....	59
186	Table 49 – DCIM_RAIDService.GetAvailableDisks() Method: Standard Messages .....	59
187	Table 50 – DCIM_RAIDService.GetAvailableDisks() Method: Parameters.....	59
188	Table 51 – DCIM_RAIDService.CheckVDValues() Method: .....	60
189	Table 52 – DCIM_RAIDService.CheckVDValues() Method: .....	61
190	Table 53 – DCIM_RAIDService.CheckVDValues() Method: Return Code Values .....	61
191	Table 54 –DCIM_RAIDService.CheckVDValues() Method: Standard Messages .....	61
192	Table 55 – DCIM_RAIDService.CheckVDValues () Method: Parameters.....	62
193	Table 56 –DCIM_RAIDService.SetControllerKey() Method: Return Code Values.....	63
194	Table 57 –DCIM_RAIDService.SetControllerKey() Method: Standard Messages.....	63
195	Table 58 – DCIM_RAIDService.SetControllerKey () Method: Parameters.....	63
196	Table 59 – DCIM_RAIDService.LockVirtualDisk() Method: Return Code Values .....	64
197	Table 60 – DCIM_RAIDService.LockVirtualDisk () Method: Standard Messages .....	64
198	Table 61 – DCIM_RAIDService.LockVirtualDisk () Method: Parameters .....	64
199	Table 62 – DCIM_RAIDService.CreateTargetedConfigJob() Method: Return Code Values .....	65
200	Table 63 – DCIM_RAIDService.CreateTargetedConfigJob() Method: Parameters .....	65
201	Table 64 – DCIM_RAIDService.CreateTargetedConfigJob() Method: Standard Messages .....	66
202	Table 65 – DCIM_RAIDService.DeletePendingConfiguration() Method: Return Code Values .....	67
203	Table 66 – DCIM_RAIDService.DeletePendingConfiguration () Method: Standard Messages .....	67
204	Table 67 – DCIM_RAIDService.DeletePendingConfiguration () Method: Parameters.....	67
205	Table 68 – DCIM_RAIDService.SetAttribute() Method: Return Code Values.....	68
206	Table 69 – DCIM_RAIDService.SetAttribute() Method: Standard Messages .....	68
207	Table 70 – DCIM_RAIDService.SetAttribute() Method: Parameters.....	69
208	Table 71 –DCIM_RAIDService.SetAttributes() Method: Return Code Values.....	69
209	Table 72 – DCIM_RAIDService.SetAttributes() Method: Standard Messages .....	70
210	Table 73 – DCIM_RAIDService.SetAttributes() Method: Parameters.....	70
211	Table 74 – DCIM_RAIDService.RemoveControllerKey() Method: Return Code Values.....	71
212	Table 75 – DCIM_RAIDService.RemoveControllerKey () Method: Standard Messages.....	71
213	Table 76 – DCIM_RAIDService.RemoveControllerKey () Method: Parameters.....	71

214	Table 77 – DCIM_RAIDService.EnableControllerEncryption () Method: Return Code Values .....	71
215	Table 78 – DCIM_RAIDService.EnableControllerEncryption() Method: Standard Messages .....	71
216	Table 79 – DCIM_RAIDService.EnableControllerEncryption() Method: Parameters .....	72
217	Table 80 – DCIM_RAIDService.ReKey () Method: Return Code Values .....	73
218	Table 81 – DCIM_RAIDService.ReKey () Method: Standard Messages .....	73
219	Table 82 – DCIM_RAIDService.ReKey () Method: Parameters .....	73
220	Table 83 – DCIM_RAIDService.UnassignSpare() Method: Return Code Values .....	74
221	Table 84 – DCIM_RAIDService.UnassignSpare() Method: Standard Messages .....	74
222	Table 85 – DCIM_RAIDService.UnassignSpare() Method: Parameters .....	74
223	Table 83 – DCIM_RAIDService.ConvertToRAID() Method: Return Code Values.....	75
224	Table 84 – DCIM_RAIDService.ConvertToRAID() Method: Standard Messages .....	75
225	Table 85 – DCIM_RAIDService.ConvertToRAID() Method: Parameters .....	75
226	Table 86 – DCIM_RAIDService.ConvertToNonRAID() Method: Return Code Values .....	76
227	Table 87 – DCIM_RAIDService.ConvertToNonRAID() Method: Standard Messages .....	76
228	Table 88 – DCIM_RAIDService.ConvertToNonRAID() Method: Parameters .....	76
229	Table 87 – DCIM_RAIDService.ImportForeignConfig() Method: Standard Messages.....	76
230	Table 88 – DCIM_RAIDService.ImportForeignConfig() Method: Parameters .....	77
231	DCIM_RAIDService.BlinkTarget() Method: Return Code Values.....	77
232	DCIM_RAIDService.CheckConsistency() Method: Return Code Values .....	79
233	DCIM_RAIDService.CheckConsistency () Method: Standard Messages.....	79
234	DCIM_RAIDService.CheckConsistency() Method: Parameters .....	79
235	DCIM_RAIDService.CancelCheckConsistency() Method: Return Code Values .....	80
236	DCIM_RAIDService.CancelCheckConsistency () Method: Standard Messages .....	80
237	DCIM_RAIDService.CancelCheckConsistency () Method: Parameters .....	80
238	DCIM_RAIDService.StartPatrolRead () Method: Standard Messages.....	81
239	DCIM_RAIDService.StopPatrolRead () Method: Standard Messages .....	81
240	DCIM_RAIDService.SecureErase() Method: Return Code Values .....	82
241	Table 11 – DCIM_RAIDService.ExportLog() Method: Return Code Values.....	83
242	Table 12 – DCIM_RAIDService.ExportLog () Method: Standard Messages .....	83
243	Table 13 – DCIM_RAIDService.ExportLog () Method: Parameters.....	84
244	DCIM_RAIDService.PrepareToRemove() Method: Return Code Values.....	85
245	Table 89 – Privilege and License Requirements .....	86
246		

## 248 1 Scope

249 The RAID Profile extends the management capabilities of referencing profiles by adding the capability to  
 250 represent the configuration of RAID storage. The RAID storage is modeled as collections of attributes  
 251 where there are collections for the storage adaptors, physical disks, logical disks, end enclosures and  
 252 parent-child relationships between the collections. Additionally, there is a configuration service that  
 253 contains all the methods used to configure the RAID storage.

## 254 2 Normative References

255 The following referenced documents are indispensable for the application of this document. For dated  
 256 references, only the edition cited applies. For undated references, the latest edition of the referenced  
 257 document (including any amendments) applies.

- 258 • DMTF DSP0131, *Profile Registration Profile 1.0.0*
- 259 • DMTF DSP0226, *Web Services for Management (WS-Management) Specification 1.1.0*
- 260 • DMTF DSP0227, *WS-Management CIM Binding Specification 1.0.0*
- 261 • *Dell Lifecycle Controller Best Practices Guide 1.0*,
- 262 [http://en.community.dell.com/techcenter/extras/m/white\\_papers/20066173.aspx](http://en.community.dell.com/techcenter/extras/m/white_papers/20066173.aspx)
- 263 • *Dell WSMAN Licenses and Privileges 1.0*
- 264 • ISO/IEC Directives, Part 2, *Rules for the structure and drafting of International Standards*,
- 265 <http://isotc.iso.org/livelink/livelink.exe?func=ll&objId=4230456&objAction=browse&sort=subtype>
- 266 • Unified Modeling Language (UML) from the Open Management Group (OMG),
- 267 <http://www.uml.org>
- 268 • Related Managed Object Format (MOF) files:
  - 269 ○ DCIM\_ControllerView.mof
  - 270 ○ DCIM\_EnclosureView.mof
  - 271 ○ DCIM\_PhysicalDiskView.mof
  - 272 ○ DCIM\_PCleSSDView.mof
  - 273 ○ DCIM\_PCleSSDBackPlaneView.mof
  - 274 ○ DCIM\_PCleSSDExtenderView.mof
  - 275 ○ DCIM\_RAIDService.mof
  - 276 ○ DCIM\_VirtualDiskView.mof
  - 277 ○ DCIM\_LCElementConformsToProfile.mof
  - 278 ○ DCIM\_LCRegisteredProfile.mof
  - 279 ○ DCIM\_RAIDEnumeration.mof
  - 280 ○ DCIM\_RAIDInteger.mof
  - 281 ○ DCIM\_RAIDString.mof

282 Dell Tech Center MOF Library: <http://www.delltechcenter.com/page/DCIM.Library.MOF>.

## 3 Terms and Definitions

For the purposes of this document, the following terms and definitions apply.

For the purposes of this document, the following terms and definitions apply.

### 3.1

**Conditional** – Indicates requirements to be followed strictly in order to conform to the document when the specified conditions are met.

### 3.2

**Mandatory** – Indicates requirements to be followed strictly in order to conform to the document and from which no deviation is permitted.

### 3.3

**May** – Indicates a course of action permissible within the limits of the document.

### 3.4

**Optional** – Indicates a course of action permissible within the limits of the document.

### 3.5

**can** – Used for statements of possibility and capability, whether material, physical, or causal.

### 3.6

**cannot** – Used for statements of possibility and capability, whether material, physical, or causal.

### 3.7

**need not** – Indicates a course of action permissible within the limits of the document.

### 3.8

**referencing profile** – Indicates a profile that owns the definition of this class and can include a reference to this profile in its “Related Profiles” table.

### 3.9

**shall** – Indicates requirements to be followed strictly in order to conform to the document and from which no deviation is permitted.



309 **3.10**  
310 **shall not** – Indicates requirements to be followed strictly in order to conform to the document and from  
311 which no deviation is permitted.

312 **3.11**  
313 **should** – Indicates that among several possibilities, one is recommended as particularly suitable, without  
314 mentioning or excluding others, or that a certain course of action is preferred but not necessarily required.

315 **3.12**  
316 **should not** – Indicates that a certain possibility or course of action is deprecated but not prohibited

317 **3.13**  
318 **FQDD** – Fully Qualified Device Descriptor is used to identify a particular component in a system.

319 **3.14**  
320 **Interop Namespace root/interop** – Interop Namespace is where instrumentation instantiates classes to  
321 advertise its capabilities for client discovery.

322 **3.15**  
323 **Implementation Namespace: root/dcim** – Implementation Namespace is where instrumentation  
324 instantiates classes relevant to executing core management tasks.

325 **3.16**  
326 **ENUMERATE** – Refers to WS-MAN `ENUMERATE` operation as described in Section 8.2 of  
327 DSP0226\_V1.1 and Section 9.1 of DSP0227\_V1.0

328 **3.17**  
329 **GET** – Refers to WS-MAN `GET` operation as defined in Section 7.3 of DSP00226\_V1.1 and Section 7.1  
330 of DSP0227\_V1.0.

331 **3.18**  
332 **Cachecade** – The cachecade feature makes use of high-performing solid state disks (SSDs) as a  
333 secondary tier of cache to provide faster reads to maximize transactional I/O performance.

## 334 **4 Symbols and Abbreviated Terms**

335 **4.1**  
336 **CIM**  
337 Common Information Model

338 **4.2**  
339 **iDRAC**  
340 integrated Dell Remote Access Controller – management controller for blades and monolithic servers

341 **4.3**  
342 **CMC**  
343 Chassis Management Controller – management controller for the modular chassis

344 **4.4**  
345 **EMM**  
346 Enclosure Management Module  
347

## 5 Synopsis

**Profile Name:** RAID Profile

**Version:** 1.3.0

**Organization:** Dell

**CIM Schema Version:** 2.26 Experimental

**Central Class:** DCIM\_RAIDService

**Scoping Class:** CIM\_ComputerSystem

The RAID Profile extends the management capability of the referencing profiles by adding the capability to describe the RAID configuration. DCIM\_RAIDService shall be the Central Class. CIM\_ComputerSystem shall be the Scoping Class. Instance(s) of DCIM\_RAIDService shall be the Central Instance(s). The instance of CIM\_ComputerSystem with which the Central Instance is associated through the CIM\_HostedService association shall be the Scoping Instance.

Table 1 identifies profiles that are related to this profile.

**Table 1 – Related Profiles**

Profile Name	Organization	Version	Relationship
Profile Registration	DCIM	1.0	Reference


## 6 Description

The RAID Profile describes the RAID configuration service and the groups that the service manages. The profile also describes the relationship of the RAID groups to the profile version information.

Figure 1 represents the class schema for the RAID Profile. For simplicity, the prefix CIM\_ has been removed from the names of the classes.

The RAID service in a managed system is represented by the instance of DCIM\_RAIDService class. Each RAID controller can have three additional view classes populated besides the Controller view class shown. Views are related to devices through the FQDD.

The profile information is represented with the instance of CIM\_RegisteredProfile.

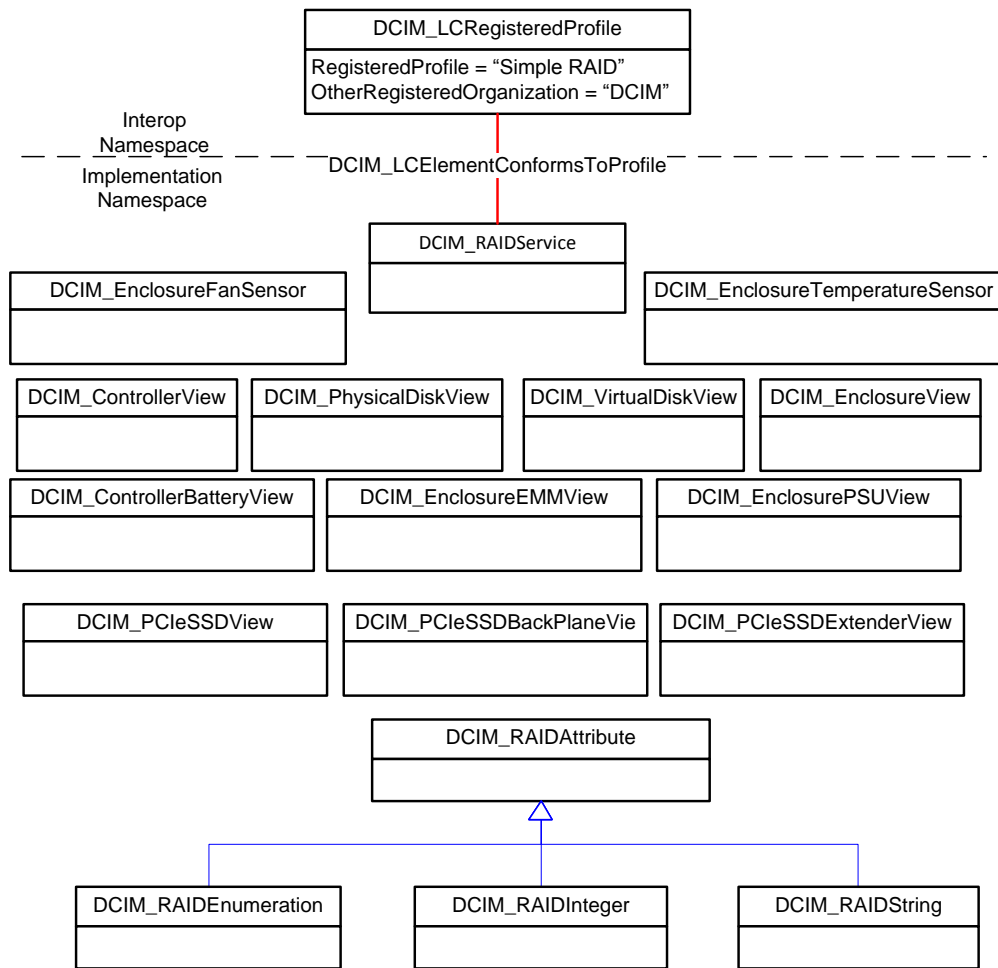

**Figure 1 –RAID Profile: Class Diagram**

## 7 Implementation Description

This section describes the requirements and guidelines for implementing RAID profile.

Table 2 shows the instances of CIM Elements for this profile. Instances of the CIM Elements shall be implemented as described in Table 2.

**Table 2 – CIM Elements: RAID Profile**

Element Name	Requirement	Description
<b>Classes</b>		
DCIM_RAIDService	Mandatory	See section 7.3
DCIM_ControllerView	Mandatory	See section 7.1.1
DCIM_EnclosureView	Mandatory	See section 7.1.2
DCIM_VirtualDiskView	Mandatory	See section 7.1.3
DCIM_PhysicalDiskView	Mandatory	See section 7.1.4
DCIM_ControllerBatteryView	Mandatory	See section 7.1.5
DCIM_EnclosureEMMView	Mandatory	See section 7.1.6
DCIM_EnclosurePSUView	Mandatory	See section 7.1.7
DCIM_EnclosureFanSensor	Mandatory	See section 7.1.8
DCIM_EnclosureTemperatureSensor	Mandatory	See section 7.1.9
DCIM_PCleSSDView	Mandatory	See section 7.1.10
DCIM_PCleSSDBackPlaneView	Mandatory	See section 7.1.11
DCIM_PCleSSDExtenderView	Mandatory	See section 7.1.12
DCIM_RAIDEnumeration	Mandatory	See section 7.2.1
DCIM_RAIDString	Mandatory	See section 7.2.2
DCIM_RAIDInteger	Mandatory	See section 7.2.3
DCIM_LCElementConformsToProfile	Mandatory	See section 7.4
DCIM_LCRegisteredProfile	Mandatory	See section 7.4
<b>Indications</b>		
None defined in this profile		

### 7.1 View Classes

The view classes represent the properties and status of the storage devices. The FQDD property correlates the view to a specific device such as RAID.Integrated.1-1 for an integrated RAID controller..

#### 7.1.1 Controller View - DCIM\_ControllerView

This section describes the implementation for the DCIM\_ControllerView class. This class shall be instantiated in the Implementation Namespace: root/dcim.

##### 7.1.1.1 Resource URIs for WinRM®

The class Resource URI shall be “http://schemas.dell.com/wbem/wscim/1/cim-schema/2/DCIM\_ControllerView?\_\_cimnamespace=root/dcim”

389 The key property shall be the InstanceID.  
 390 The instance Resource URI for DCIM\_ControllerView instance shall be:  
 391 "http://schemas.dell.com/wbem/wscim/1/cim-  
 392 schema/2/DCIM\_ControllerView?\_\_cimnamespace=root/dcim+InstanceID=<FQDD>"

### 393 7.1.1.2 Operations

394 The following table lists the implemented operations on DCIM\_ControllerView.

395 **Table 3 – DCIM\_ControllerView - Operations**

Operation Name	Requirements	Required Input
Get	Mandatory	Instance URI
Enumerate	Mandatory	Class URI

### 396 7.1.1.3 Class Properties

397 The following table lists the implemented properties for DCIM\_ControllerView instance representing the  
 398 RAID Controller in a system. The "Requirements" column shall denote whether the property is  
 399 implemented (for requirement definitions, see section 3). The "Additional Requirements" column shall  
 400 denote either possible values for the property, or requirements on the value formulation.

401 **Table 4 – DCIM\_ControllerView - Properties**

Property Name	Requirement	Type	Additional Requirements
InstanceID	Mandatory	string	The property shall have the value of the FQDD.
FQDD	Mandatory	string	The property shall represent Fully Qualified Device Description (FQDD.)
DeviceDescription	Mandatory	string	A string containing the friendly Fully Qualified Device Description, a property that describes the device and its location
PrimaryStatus	Mandatory	uint32	The property shall represent the status of the device and shall be one of the following values: <ul style="list-style-type: none"> <li>• 0 - Unknown</li> <li>• 1 - OK</li> <li>• 2 - Degraded</li> <li>• 3 - Error</li> </ul>
RollupStatus	Mandatory	uint32	The property shall represent the status of children and shall be one of the following values: <ul style="list-style-type: none"> <li>• 0 - Unknown</li> <li>• 1 - OK</li> <li>• 2 - Degraded</li> <li>• 3 - Error</li> </ul>
ControllerFirmwareVersion	Mandatory	string	The property shall represent the firmware version.
PCISlot	Mandatory	uint8	The property shall represent the

Property Name	Requirement	Type	Additional Requirements
			associated PCI slot.
Bus	Mandatory	string	The property shall represent the PCI Bus
Device	Mandatory	string	The property shall represent the PCI device.
Function	Mandatory	string	The property shall represent the PCI function.
PCIVendorID	Mandatory	string	The property shall represent the PCI vendor identifier.
PCISubVendorID	Mandatory	string	The property shall represent the PCI sub vendor identifier.
PCIDeviceID	Mandatory	string	The property shall represent the PCI device identifier.
PCISubDeviceID	Mandatory	string	The property shall represent the PCI sub device identifier.
DeviceCardManufacturer	Mandatory	string	The property shall represent the manufacturer name.
DeviceCardDataBusWidth	Mandatory	uint8	<p>The property shall represent the bus width and shall be one of the following values:</p> <ul style="list-style-type: none"> <li>• 0 - Unknown</li> <li>• 1- 8x</li> </ul>
DeviceCardSlotLength	Mandatory	uint8	<p>The property shall represent the slot length width and shall be one of the following values:</p> <ul style="list-style-type: none"> <li>• 2 – Unknown</li> <li>• 3 – Short</li> <li>• 4 – Long</li> </ul>
DeviceCardSlotType	Mandatory	string	<p>The property shall represent the the slot type and shall be one of the following values:</p> <ul style="list-style-type: none"> <li>• Unknown</li> <li>• PCI Express x8</li> <li>• PCI Express Gen 3</li> <li>• PCI Express Gen 3x1</li> <li>• PCI Express Gen 3x2</li> <li>• PCI Express Gen 3x4</li> <li>• PCI Express Gen 3x8</li> <li>• PCI Express Gen 3x16</li> </ul>
SecurityStatus	Mandatory	uint32	<p>The property shall represent the controller security configuration information and shall be one of the following values:</p> <ul style="list-style-type: none"> <li>• 0 - Unknown</li> <li>• 1 - Encryption Capable</li> <li>• 2 - Security Key</li> </ul>

Property Name	Requirement	Type	Additional Requirements
			Assigned
ProductName	Mandatory	string	The property shall represent the name of the controller.
SASAddress	Mandatory	string	The property shall provide unique ID of the controller and shall be in the form of hexadecimal.
EncryptionMode	Mandatory	uint8	<p>The property shall represent the current encryption state on the controller and shall be one of the following values:</p> <ul style="list-style-type: none"> <li>• 0 - None</li> <li>• 1 - Local Key Management</li> <li>• 2 - Dell Key Management</li> <li>• 3 - Pending Dell Key Management</li> </ul>
EncryptionCapability	Mandatory	uint8	<p>The property shall represent the EncryptionCapability property details possible encryption states on the controller and shall be one of the following values:</p> <ul style="list-style-type: none"> <li>• 0 - None</li> <li>• 1 - Local Key Management Capable</li> </ul>
KeyID	Mandatory	string	The property shall represent the KeyID of controller when controller is in Local Key Management mode.
CachecadeCapability	Mandatory	uint8	<p>The property shall represent the controller's support of cachecade virtual disk creation and shall have one of the following values:</p> <ul style="list-style-type: none"> <li>• 0 - Cachecade Virtual Disk not supported</li> <li>• 1 – Cachecade Virtual Disk supported</li> </ul>
SlicedVDCapability	Mandatory	uint8	<p>The property shall represent the controller's support of sliced virtual disk creation and shall have one of the following values:</p> <ul style="list-style-type: none"> <li>• 0 - Sliced Virtual Disk not supported</li> <li>• 1 – Sliced Virtual Disk supported</li> </ul>
CacheSizeInMB	Mandatory	uint32	This property shall represent the controller cache size in MB.
PatrolReadState	Mandatory	uint8	This property shall represent the current state of the patrol read operation and shall have

Property Name	Requirement	Type	Additional Requirements
			following values: <ul style="list-style-type: none"> <li>• 0 – Unknown</li> <li>• 1 – Stopped</li> <li>• 2 – Running</li> </ul>
DriverVersion	Mandatory	string	This property shall represent the controller driver version.
MaxPossiblePCILinkSpeed	Mandatory	string	This property shall represent the maximum possible PCI link speed (speed the device is capable of ).
MaxAvailablePCILinkSpeed	Mandatory	string	This property shall represent the maximum PCI link speed the controller is set to allow.
LastSystemInventoryTime	Mandatory	string	This property provides the last time “ <b>System Inventory Collection on Reboot (CSIOR)</b> ” was performed. The value is represented as “yyyymmddHHMMSS”.
LastUpdateTime	Mandatory	string	This property provides the last time the data was updated. The value is represented as “yyyymmddHHMMSS”.
T10PICapability	Optional	Uint32	This property will indicate if this controller supports T10 PI and shall have one of the following values: 0 – Incapable (not capable of supporting T10 PI) 1 – Capable (capable of supporting T10 PI)
SupportRAID10UnevenSpans	Optional	Uint8	This property will indicate if this controller supports uneven spans for RAID 10 and shall have one of the following values: 0 – Uneven span for RAID 10 not supported 1 – Uneven span for RAID 10 supported
SupportControllerBootMode	Optional	Uint8	This property will indicate if this controller supports setting of controller boot mode and shall have one of the following values: 0 – setting of controller boot mode not supported 1 – setting of controller boot mode supported
RealtimeCapability	uint32	This property will indicate if this controller supports Realtime and shall	RealtimeCapability



Property Name	Requirement	Type	Additional Requirements
		have one of the following values: 0 – Incapable (not capable of supporting Real-Time) 1 – Capable (capable of supporting Real-Time)	

## 7.1.2 Enclosure View - DCIM\_EnclosureView

This section describes the implementation for the DCIM\_EnclosureView class. This class shall be instantiated in the Implementation Namespace: root/dcim.

### 7.1.2.1 Resource URIs for WinRM®

The class Resource URI shall be “http://schemas.dell.com/wbem/wscim/1/cim-schema/2/DCIM\_EnclosureView?\_\_cimnamespace=root/dcim”

The key property shall be the InstanceID.

The instance Resource URI for DCIM\_EnclosureView instance shall be:  
“http://schemas.dell.com/wbem/wscim/1/cim-schema/2/DCIM\_EnclosureView?\_\_cimnamespace=root/dcim+InstanceID=<FQDD>”

### 7.1.2.2 Operations

The following table lists the implemented operations on DCIM\_EnclosureView.

**Table 5 – DCIM\_EnclosureView - Operations**

Operation Name	Requirements	Required Input
Get	Mandatory	Instance URI
Enumerate	Mandatory	Class URI

### 7.1.2.3 Class Properties

The following table lists the implemented properties for DCIM\_EnclosureView instance representing the Enclosure in a system. The “Requirements” column shall denote whether the property is implemented (for requirement definitions, see section 3). The “Additional Requirements” column shall denote either possible values for the property, or requirements on the value formulation.

**Table 6 – DCIM\_EnclosureView - Properties**

Property Name	Requirement	Type	Additional Requirements
InstanceID	Mandatory	string	The property shall have the value of the FQDD.
FQDD	Mandatory	string	Fully Qualified device description (uniquely identifies device)

Property Name	Requirement	Type	Additional Requirements
DeviceDescription	Mandatory	string	A string containing the friendly Fully Qualified Device Description, a property that describes the device and its location
PrimaryStatus	Mandatory	UInt32	The property shall represent the status of the device and shall be one of the following values: <ul style="list-style-type: none"> <li>• 0 - Unknown</li> <li>• 1 - OK</li> <li>• 2 - Degraded</li> <li>• 3 - Error</li> </ul>
RollupStatus	Mandatory	UInt32	The property shall represent the status of children and shall be one of the following values: <ul style="list-style-type: none"> <li>• 0 - Unknown</li> <li>• 1 - OK</li> <li>• 2 - Degraded</li> <li>• 3 - Error</li> </ul>
Connector	Mandatory	UInt8	The property shall represent the controller port connection.
WiredOrder	Mandatory	UInt8	The property shall represent the connection sequence in a daisy chain of enclosures in the relation to the controller port (0 for backplane).
ServiceTag	Mandatory	string	The property shall contain up to 10 characters.
AssetTag	Mandatory	string	The property shall contain up to 10 characters.
Version	Mandatory	string	The property shall represent the EMM version.
SlotCount	Mandatory	UInt8	The property shall represent the number of drive slots.
EMMCount	Mandatory	UInt8	The property shall represent the number of EMMs present.
PSUCount	Mandatory	UInt8	The property shall represent the number of power supply units present.
FanCount	Mandatory	Unit8	The property shall represent the number of fans present.
TempProbeCount	Mandatory	UInt8	The property shall represent the number of temperature probes present.

Property Name	Requirement	Type	Additional Requirements
ProductName	Mandatory	string	The property shall represent the commercial name of the enclosure.
LastSystemInventoryTime	Mandatory	string	This property shall provide the last time "System Inventory Collection on Reboot (CSIOR)" was performed. The value is represented as "yyyymmddHHMMSS".
LastUpdateTime	Mandatory	string	This property shall provide the last time the data was updated. The value is represented as yyyymmddHHMMSS

### 7.1.3 Virtual Disk View - DCIM\_VirtualDiskView

This section describes the implementation for the DCIM\_VirtualDiskView class. This class shall be instantiated in the Implementation Namespace: root/dcim.

#### 7.1.3.1 Resource URIs for WinRM®

The class Resource URI shall be "http://schemas.dell.com/wbem/wscim/1/cim-schema/2/DCIM\_VirtualDiskView?\_\_cimnamespace=root/dcim"

The key property shall be the InstanceID.

The instance Resource URI for DCIM\_VirtualDiskView instance shall be:  
"http://schemas.dell.com/wbem/wscim/1/cim-schema/2/DCIM\_VirtualDiskView?\_\_cimnamespace=root/dcim+InstanceID=<FQDD>"

#### 7.1.3.2 Operations

The following table details the implemented operations on DCIM\_VirtualDiskView.

**Table 7 – DCIM\_VirtualDiskView - Operations**

Operation Name	Requirements	Required Input
Get	Mandatory	Instance URI
Enumerate	Mandatory	Class URI

#### 7.1.3.3 Class Properties

The following table lists the implemented properties for DCIM\_VirtualDiskView instance representing the Virtual Disk in a system. The "Requirements" column shall denote whether the property is implemented (for requirement definitions, see section 3). The "Additional Requirements" column shall denote either possible values for the property, or requirements on the value formulation.

**Table 8 – DCIM\_VirtualDiskView - Properties**

Property Name	Requirement	Type	Description
InstanceID	Mandatory	string	The property shall have value of the FQDD property.

Property Name	Requirement	Type	Description
FQDD	Mandatory	string	The property shall represent the Fully Qualified Device Description that uniquely identifies a device.
DeviceDescription	Mandatory	string	A string containing the friendly Fully Qualified Device Description, a property that describes the device and its location
BusProtocol	Mandatory	Uint32	The property shall represent the bus protocol and shall be one of the following values: <ul style="list-style-type: none"> <li>• 0 - Unknown</li> <li>• 1 - SCSI</li> <li>• 2 - PATA</li> <li>• 3 - FIBRE</li> <li>• 4 - USB</li> <li>• 5 - SATA</li> <li>• 6 – SAS</li> </ul>
Cachecade	Mandatory	Uint8	The property shall represent the Cachecade property can have following values and shall be one of the following values: <ul style="list-style-type: none"> <li>• 0 – Not a cachecade Virtual Disk</li> <li>• 1 – Cachecade Virtual Disk</li> </ul>
DiskCachePolicy	Mandatory	Uint32	The property shall represent the policy for physical disks included in the virtual disk and shall have one of the following values: <ul style="list-style-type: none"> <li>• 0 - Unknown</li> <li>• 256 - Default,</li> <li>• 512 - Enabled,</li> <li>• 1024 - Disabled</li> </ul>
LockStatus	Mandatory	Uint8	The property shall represent if this Virtual Disk is locked and shall be one of the following values: <ul style="list-style-type: none"> <li>• 0 – Unlocked</li> <li>• 1 – Locked</li> </ul>
MediaType	Mandatory	Uint32	The property shall represent the drive media type and shall have one of the following values: <ul style="list-style-type: none"> <li>• 0 – Unknown</li> <li>• 1 – Hard Disk Drive</li> <li>• 2 – Solid State Drive</li> </ul>

Property Name	Requirement	Type	Description
Name	Mandatory	String	The property shall represent the virtual disk name.
ObjectStatus	Mandatory	UInt8	The property shall represent the virtual disk configuration state and shall be one of the following values: <ul style="list-style-type: none"> <li>• 0 – Current</li> <li>• 1 – Pending</li> <li>• 2 – Current Virtual Disk Pending Delete</li> <li>• 3 – Pending Create</li> </ul>
OperationName	Mandatory	String	This property shall represent the operation that is running on a virtual disk in background. If no operation is running, the value shall be “None”.
OperationPercentComplete	Mandatory	UInt8	This property shall represent the percentage of completion of the operation that is represented by the OperationName property.
PendingOperations	Mandatory	UInt8	This property shall represent the pending operations on the virtual disk. The property shall have one of the following values: <ul style="list-style-type: none"> <li>• 0 - None</li> <li>• 1 - Fast Init</li> <li>• 2 - Current Virtual Disk Pending Delete</li> <li>• 3 - Pending Create</li> </ul>
PhysicalDiskIDs[]	Mandatory	String	The property shall represent the array of physical disk FQDDs that includes dedicated hot spare physical disk FQDDs as well.
PrimaryStatus	Mandatory	UInt32	The property shall represent the status of the device and shall be one of the following values: <ul style="list-style-type: none"> <li>• 0 - Unknown</li> <li>• 1 - OK</li> <li>• 2 - Degraded</li> <li>• 3 - Error</li> </ul>

Property Name	Requirement	Type	Description
RAIDStatus	Mandatory	Uint32	<p>The property shall represent the RAID specific status and shall have one of the following values:</p> <ul style="list-style-type: none"> <li>• 0 - Unknown</li> <li>• 1 - Ready</li> <li>• 2 - Online</li> <li>• 3 - Foreign</li> <li>• 4 - Offline</li> <li>• 5 - Blocked</li> <li>• 6 - Failed</li> <li>• 7 – Degraded</li> <li>• 8 – Non-RAID</li> </ul>
RAIDTypes	Mandatory	Uint32	<p>The property shall represent the current RAID level and shall have one of the following values:</p> <ul style="list-style-type: none"> <li>• 1 - No RAID</li> <li>• 2 - RAID-0 <ul style="list-style-type: none"> <li>• 4 - RAID-1</li> <li>• 64 - RAID-5</li> </ul> </li> <li>• 128 –RAID6</li> <li>• 2048 - RAID-10 <ul style="list-style-type: none"> <li>• 8192 - RAID-50</li> </ul> </li> <li>• 16384- RAID60</li> </ul>
ReadCachePolicy	Mandatory	Uint32	<p>The property shall represent the current read policy and shall have one of the following values:</p> <ul style="list-style-type: none"> <li>• 0 - Unknown</li> <li>• 16 - No Read Ahead</li> <li>• 32 - Read Ahead</li> <li>• 64 – Adaptive Read Ahead</li> </ul>
RemainingRedundancy	Mandatory	Uint16	<p>The property shall represent the remaining redundancy</p>
RollupStatus	Mandatory	Uint32	<p>The property shall represent the status of the device and shall be one of the following values:</p> <ul style="list-style-type: none"> <li>• 0 - Unknown</li> <li>• 1 - OK</li> <li>• 2 - Degraded</li> <li>• 3 - Error</li> </ul>
SizeInBytes	Mandatory	Uint64	<p>The property shall represent the size of the virtual disk in Bytes.</p>
SpanDepth	Mandatory	Uint32	<p>The property shall represent the number of spans in virtual disk.</p>
SpanLength	Mandatory	Uint32	<p>The property shall represent the number of physical disks per span</p>

Property Name	Requirement	Type	Description
StartingLBainBlocks	Mandatory	Uint8	The property shall represent the starting logical block address in blocks for virtual disk.
StripeSize	Mandatory	Uint32	<p>The property shall represent the current strip size and shall be one of the following values:</p> <ul style="list-style-type: none"> <li>• 0 - Deafult</li> <li>• 1 – 512 Bytes</li> <li>• 2 - 1 KB</li> <li>• 4 - 2 KB</li> <li>• 8 - 4 KB</li> <li>• 16 - 8 KB</li> <li>• 32 - 16 KB</li> <li>• 64 - 32 KB</li> <li>• 128 - 64 KB</li> <li>• 256 - 128 KB</li> <li>• 512 - 256 KB</li> <li>• 1024 - 512 KB</li> <li>• 2048 - 1 MB</li> <li>• 4096 - 2 MB</li> <li>• 8192 - 4 MB</li> <li>• 16384 - 8 MB</li> <li>• 32768 - 16 MB</li> </ul>
VirtualDiskTarget ID	Mandatory	Uint32	The property shall represent the virtual disk target number
WriteCachePolicy	Mandatory	Uint32	<p>The property shall represent the current write policy and shall be one of the following values:</p> <ul style="list-style-type: none"> <li>• 0 - Unknown</li> <li>• 1 - Write Through,</li> <li>• 2 - Write Back,</li> <li>• 3 - Write Back force</li> </ul>
LastSystemInventoryTime	Mandatory	string	<p>The property shall represent the last time “<b>System Inventory Collection on Reboot (CSIOR)</b>” was performed. The value is represented as “yyyymmddHHMMSS”.</p>
LastUpdateTime	Mandatory	string	<p>The property shall represent the last time the data was updated. The value is represented as yyyymmddHHMMSS</p>

Property Name	Requirement	Type	Description
T10PIStatus	Optional	uint32	This property will indicate if T10 PI is enabled or disabled on this VD and shall have one of the following values: 0 – Disabled 1 – Enabled

#### 7.1.4 Physical Disk View - DCIM\_PhysicalDiskView

This section describes the implementation for the DCIM\_PhysicalDiskView class. This class shall be instantiated in the Implementation Namespace: root/dcim.

##### 7.1.4.1 Resource URIs for WinRM®

The class Resource URI shall be “http://schemas.dell.com/wbem/wscim/1/cim-schema/2/DCIM\_PhysicalDiskView?\_\_cimnamespace=root/dcim”

The key property shall be the InstanceID.

The instance Resource URI for DCIM\_PhysicalDiskView instance shall be:  
“http://schemas.dell.com/wbem/wscim/1/cim-schema/2/DCIM\_PhysicalDiskView?\_\_cimnamespace=root/dcim+InstanceID=<FQDD>”

##### 7.1.4.2 Operations

The following table details the implemented operations on DCIM\_PhysicalDiskView.

**Table 9 – DCIM\_PhysicalDiskView - Operations**

Operation Name	Requirements	Required Input
Get	Mandatory	Instance URI
Enumerate	Mandatory	Class URI

##### 7.1.4.3 Class Properties

The following table lists the implemented properties for DCIM\_PhysicalDiskView instance representing the Physical Disk in a system. The “Requirements” column shall denote whether the property is implemented (for requirement definitions, see section 3). The “Additional Requirements” column shall denote either possible values for the property, or requirements on the value formulation.

**Table 10 – DCIM\_PhysicalDiskView - Properties**

Property Name	Requirement	Type	Description
InstanceID	Mandatory	string	The property shall have the same value as the FQDD property.
FQDD	Mandatory	string	The property shall represent the Fully Qualified Device Description that uniquely identifies the device.



Property Name	Requirement	Type	Description
DeviceDescription	Mandatory	string	A string containing the friendly Fully Qualified Device Description, a property that describes the device and its location
BusProtocol	Mandatory	UInt32	The property shall represent the bus protocol and shall have one of the following values: <ul style="list-style-type: none"> <li>• 0 - Unknown</li> <li>• 1 - SCSI</li> <li>• 2 - PATA</li> <li>• 3 - FIBRE</li> <li>• 4 - USB</li> <li>• 5 - SATA</li> <li>• 6 – SAS</li> </ul>
Connector	Mandatory	UInt16	The property shall represent the controller port that the physical disk is connected to.
DriveFormFactor	Mandatory	UInt8	This property shall represent the physical disk form factor and shall be one of the following values: <ul style="list-style-type: none"> <li>• 0 - Unknown</li> <li>• 1 - 1.8 inch</li> <li>• 2 - 2.5 inch</li> <li>• 3 - 3.5 inch</li> </ul>
FreeSizeInBytes	Mandatory	UInt64	The property shall represent the free space available for a virtual disk
HotSpareStatus	Mandatory	UInt16	The property shall represent the hot-spare status and shall be one of the following values: <ul style="list-style-type: none"> <li>• 0 - No</li> <li>• 1 - Dedicated</li> <li>• 2 – Global</li> </ul>
Manufacturer	Mandatory	string	The property shall represent the manufacturer of the physical disk.
ManufacturingDay	Mandatory	UInt16	The property shall represent the physical disk's manufacturing days from the beginning of the manufacturing week, where weeks run from Saturday to Friday.
ManufacturingWeek	Mandatory	UInt16	The property shall represent the manufacturing fiscal weeks from the first Saturday of July in the manufacturing year.

Property Name	Requirement	Type	Description
ManufacturingYear	Mandatory	UInt32	The property shall represent the physical disk's manufacturing fiscal year beginning on the first Saturday of July. Note that the calendar year lags the fiscal year.
MaxCapableSpeed	Mandatory	UInt32	The property shall represent the data transfer speed that the disk is capable of and shall be one of the following values: <ul style="list-style-type: none"> <li>• 0 - Unknown</li> <li>• 1 - 1.5 GBPS <ul style="list-style-type: none"> <li>• 2 - 3 GBPS</li> </ul> </li> <li>• 3 - 6GBPS</li> <li>• 4 - 12 GBPS</li> </ul>
MediaType	Mandatory	UInt32	The property shall represent the drive media type and shall be one of the following values: <ul style="list-style-type: none"> <li>• 0 – Hard Disk Drive</li> <li>• 1 – Solid State Drive</li> </ul>
Model	Mandatory	string	The property shall represent the model name of the physical disk.
OperationName	Mandatory	String	This property shall represent the background operation that is running on a virtual disk. If no operation is running, the value shall be "None".
OperationPercentComplete	Mandatory	UInt8	This property shall represent the percentage completion of the operation that is represented by the OperationName property.
PPID	Mandatory	String	The property shall represent the Part Piece Identification (PPID) value for the physical disk.
PredictiveFailureState	Mandatory	UInt32	The property shall represent the smart alert presence and shall be one of the following values: <ul style="list-style-type: none"> <li>• 0 - Smart Alert Absent</li> <li>• 1 - Smart Alert Present</li> </ul>
PrimaryStatus	Mandatory	UInt32	The property shall represent the status of the device and shall be one of the following values: <ul style="list-style-type: none"> <li>• 0 - Unknown</li> <li>• 1 - OK</li> <li>• 2 - Degraded</li> <li>• 3 - Error</li> </ul>

Property Name	Requirement	Type	Description
RAIDStatus	Mandatory	Uint32	<p>The property shall represent the RAID specific status and shall be one of the following values:</p> <ul style="list-style-type: none"> <li>• 0 - Unknown</li> <li>• 1 - Ready</li> <li>• 2 - Online</li> <li>• 3 - Foreign</li> <li>• 4 - Offline</li> <li>• 5 - Blocked</li> <li>• 6 - Failed</li> <li>• 7 – Degraded</li> </ul>
Revision	Mandatory	string	The property shall represent the revision number of physical disk.
RollupStatus			<p>The property shall contain one of the following values:</p> <ul style="list-style-type: none"> <li>• 0(Unknown)</li> <li>• 1(OK)</li> <li>• 2(Degraded)</li> <li>• 3(Error).</li> </ul> <p>RollupStatus provides a high level status value, intended to align with Red-Yellow-Green type representation of status.</p>
SASAddress	Mandatory	string	The property shall represent the SAS address of the drive.
SecurityState	Mandatory	Uint32	<p>The property shall represent the security state of the physical disk and shall be one of the following values:</p> <ul style="list-style-type: none"> <li>• 0 - Unknown</li> <li>• 1 - Secured</li> <li>• 2 - Locked</li> <li>• 3 – Foreign</li> </ul>
SerialNumber	Mandatory	string	The property shall represent the serial number of physical disk.
SizeInBytes	Mandatory	Uint64	The property shall represent the coerced (no configuration data) size of the physical disk.
Slot	Mandatory	Uint16	The property shall represent the slot where drive is located.
SupportedEncryptionTypes[]	Mandatory	String	<p>This property shall represent the supported encryption types on the physical disk. The possible values is FDE (Full Drive Encryption)</p>
UsedSizeInBytes	Mandatory	Uint64	The property shall represent the space already consumed by virtual disks

LastSystemInventoryTime	Mandatory	string	The property shall represent the last time “ <b>System Inventory Collection on Reboot (CSIOR)</b> ” was performed. The value is represented as “yyymmddHHMMSS”.
LastUpdateTime	Mandatory	string	The property shall represent the last time the data was updated. The value is represented as yyymmddHHMMSS
T10PICapability	Optional	Uint32	This property will indicate if this physical disk supports T10 PI and shall have one of the following values:  0 – Incapable (not capable of supporting T10 PI)  1 – Capable (capable of supporting T10 PI)

## 7.1.5 Controller Battery View - DCIM\_ControllerBatteryView

This section describes the implementation for the DCIM\_ControllerBatteryView class. This class shall be instantiated in the Implementation Namespace: root/dcim.

### 7.1.5.1 Resource URIs for WinRM®

The class Resource URI shall be “http://schemas.dell.com/wbem/wscim/1/cim-schema/2/DCIM\_ControllerBatteryView?\_\_cimnamespace=root/dcim”

The key property shall be the InstanceID.

The instance Resource URI for DCIM\_ControllerBatteryView instance shall be:  
“http://schemas.dell.com/wbem/wscim/1/cim-schema/2/DCIM\_ControllerBatteryView?\_\_cimnamespace=root/dcim+InstanceID=<FQDD>”

### 7.1.5.2 Operations

The following table lists the implemented operations on DCIM\_ControllerBatteryView.

**Table 11 – DCIM\_ControllerBatteryView - Operations**

Operation Name	Requirements	Required Input
Get	Mandatory	Instance URI
Enumerate	Mandatory	Class URI

### 7.1.5.3 Class Properties

The following table lists the implemented properties for DCIM\_ControllerBatteryView instance representing the RAID Controller Battery in a system. The “Requirements” column shall denote whether the property is implemented (for requirement definitions, see section 3). The “Additional Requirements” column shall denote either possible values for the property, or requirements on the value formulation.

**Table 12 – DCIM\_ControllerBatteryView - Properties**

Property Name	Requirement	Type	Additional Requirements
InstanceID	Mandatory	string	The property shall have the value of the FQDD.
FQDD	Mandatory	string	The property shall represent Fully Qualified Device Description (FQDD)
DeviceDescription	Mandatory	string	A string containing the friendly Fully Qualified Device Description, a property that describes the device and its location
PrimaryStatus	Mandatory	uint32	The property shall represent the status of the device and shall be one of the following values: <ul style="list-style-type: none"> <li>• 0 - Unknown</li> <li>• 1 - OK</li> <li>• 2 - Degraded</li> <li>• 3 - Error</li> </ul>
RAIDState	Mandatory	Uint16	The property shall represent the status of battery and shall be one of the following values: <ul style="list-style-type: none"> <li>• 0 - Unknown</li> <li>• 1 - Ready</li> <li>• 6 - Failed</li> <li>• 7 - Degraded</li> <li>• 9 - Missing</li> <li>• 10 - Charging</li> <li>• 12 - Below Threshold</li> </ul>

## 478 7.1.6 Enclosure Mangement Module View - DCIM\_EnclosureEMMView

479 This section describes the implementation for the DCIM\_EnclosureEMMView class. This class shall be  
480 instantiated in the Implementation Namespace: root/dcim.

### 481 7.1.6.1 Resource URIs for WinRM®

482 The class Resource URI shall be "http://schemas.dell.com/wbem/wscim/1/cim-  
483 schema/2/DCIM\_EnclosureEMMView?\_\_cimnamespace=root/dcim"

484 The key property shall be the InstanceID.

485 The instance Resource URI for DCIM\_EnclosureEMMView instance shall be:  
486 "http://schemas.dell.com/wbem/wscim/1/cim-  
487 schema/2/DCIM\_EnclosureEMMView?\_\_cimnamespace=root/dcim+InstanceID=<FQDD>"

### 488 7.1.6.2 Operations

489 The following table lists the implemented operations on DCIM\_EnclosureEMMView.

490

**Table 13 – DCIM\_EnclosureEMMView - Operations**

Operation Name	Requirements	Required Input
Get	Mandatory	Instance URI
Enumerate	Mandatory	Class URI

491

**7.1.6.3 Class Properties**

492 The following table lists the implemented properties for DCIM\_EnclosureEMMView instance representing  
 493 the EMM in a system. The “Requirements” column shall denote whether the property is implemented (for  
 494 requirement definitions, see section 3). The “Additional Requirements” column shall denote either  
 495 possible values for the property, or requirements on the value formulation.

496

**Table 14 – DCIM\_EnclosureEMMView - Properties**

Property Name	Requirement	Type	Additional Requirements
InstanceID	Mandatory	string	The property shall have the value of the FQDD.
FQDD	Mandatory	string	The property shall represent Fully Qualified Device Description (FQDD)
DeviceDescription	Mandatory	string	A string containing the friendly Fully Qualified Device Description, a property that describes the device and its location
PrimaryStatus	Mandatory	uint32	The property shall represent the status of the device and shall be one of the following values: <ul style="list-style-type: none"> <li>• 0 - Unknown</li> <li>• 1 - OK</li> <li>• 2 - Degraded</li> <li>• 3 - Error</li> </ul>
PartNumber	Mandatory	String	The property shall represent the EMM part number.
Revision	Mandatory	String	The property shall represent the version of the EMM firmware.

497

**7.1.7 Enclosure Power Supply Unit View - DCIM\_EnclosurePSUView**

498 This section describes the implementation for the DCIM\_EnclosurePSUView class. This class shall be  
 499 instantiated in the Implementation Namespace: root/dcim.

500

**7.1.7.1 Resource URIs for WinRM®**

501 The class Resource URI shall be “http://schemas.dell.com/wbem/wscim/1/cim-  
 502 schema/2/DCIM\_EnclosurePSUView?\_\_cimnamespace=root/dcim”

503

The key property shall be the InstanceID.

504

The instance Resource URI for DCIM\_EnclosurePSUView instance shall be:

505

“http://schemas.dell.com/wbem/wscim/1/cim-

506

schema/2/DCIM\_EnclosurePSUView?\_\_cimnamespace=root/dcim+InstanceID=<FQDD>”

### 7.1.7.2 Operations

The following table lists the implemented operations on DCIM\_EnclosurePSUView.

**Table 15 – DCIM\_EnclosurePSUView - Operations**

Operation Name	Requirements	Required Input
Get	Mandatory	Instance URI
Enumerate	Mandatory	Class URI

### 7.1.7.3 Class Properties

The following table lists the implemented properties for DCIM\_EnclosurePSUView instance representing the Enclosure Power Supply Unit in a system. The “Requirements” column shall denote whether the property is implemented (for requirement definitions, see section 3). The “Additional Requirements” column shall denote either possible values for the property, or requirements on the value formulation.

**Table 16 – DCIM\_EnclosurePSUView - Properties**

Property Name	Requirement	Type	Additional Requirements
InstanceID	Mandatory	String	The property shall have the value of the FQDD.
FQDD	Mandatory	String	The property shall represent Fully Qualified Device Description (FQDD)
DeviceDescription	Mandatory	string	A string containing the friendly Fully Qualified Device Description, a property that describes the device and its location
PrimaryStatus	Mandatory	uint32	The property shall represent the status of the device and shall be one of the following values: <ul style="list-style-type: none"><li>• 0 - Unknown</li><li>• 1 - OK</li><li>• 2 - Degraded</li><li>• 3 - Error</li></ul>
PartNumber	Mandatory	String	The property shall represent the enclosure power supply unit part number.

## 7.1.8 Enclosure Fan Sensor - DCIM\_EnclosureFanSensor

This section describes the implementation for the DCIM\_EnclosureFanSensor class. This class shall be instantiated in the Implementation Namespace: root/dcim.

### 7.1.8.1 Resource URIs for WinRM®

The class Resource URI shall be “http://schemas.dell.com/wbem/wscim/1/cim-schema/2/DCIM\_EnclosureFanSensor?\_\_cimnamespace=root/dcim”

The key property shall be the SystemCreationClassName, SystemName, CreationClassName and DeviceID.

The instance Resource URI for DCIM\_EnclosureFanSensor instance shall be:  
“http://schemas.dell.com/wbem/wscim/1/cim-schema/2/DCIM\_EnclosureFanSensor?\_\_cimnamespace=root/dcim+SystemCreationClassName=DCIM\_ComputerSystem+SystemName= DCIM:ComputerSystem+CreationClassName=DCIM\_EnclosureFanSensor+DeviceID=<FQDD>”

### 7.1.8.2 Operations

The following table lists the implemented operations on DCIM\_EnclosureFanSensor.

**Table 17 – DCIM\_EnclosureFanSensor - Operations**

Operation Name	Requirements	Required Input
Get	Mandatory	Instance URI
Enumerate	Mandatory	Class URI

### 7.1.8.3 Class Properties

The following table lists the implemented properties for DCIM\_EnclosureFanSensor instance representing the Enclosure Fan Sensor in a system. The “Requirements” column shall denote whether the property is implemented (for requirement definitions, see section 3). The “Additional Requirements” column shall denote either possible values for the property, or requirements on the value formulation.

**Table 18– DCIM\_EnclosureFanSensor - Properties**

Property Name	Requirement	Type	Additional Requirements
SystemCreationClassName	Mandatory	String	The property value shall be “DCIM_ComputerSystem”.
SystemName	Mandatory	String	The property value shall be “DCIM:ComputerSystem”
CreationClassName	Mandatory	String	The property value shall be “DCIM_EnclosureFanSensor”
DeviceID	Mandatory	String	The property shall have the sensor FQDD value.
FQDD	Mandatory	String	The property shall represent Fully Qualified Device Description (FQDD)
DeviceDescription	Mandatory	string	A string containing the friendly Fully Qualified Device Description,a property that describes the device and its location
BaseUnits	Mandatory	uint16	The property value shall be 19 (RPM).
CurrentReading	Mandatory	sint32	The present value indicated by the sensor. The property value



Property Name	Requirement	Type	Additional Requirements
			shall be in rpm.
ElementName	Mandatory	String	The property shall have value "EnclosureFanSensor".
PrimaryStatus	Mandatory	uint32	The property shall represent the status of the device and shall be one of the following values: <ul style="list-style-type: none"> <li>0 - Unknown</li> <li>1 - OK</li> <li>2 - Degraded</li> <li>3 - Error</li> </ul>
RateUnits	Mandatory	uint16	The property value shall be 4. (Per Minute)
SensorType	Mandatory	Uint16	The property value shall be 5. (Tachometer)
UnitModifier	Mandatory	sint32	The property shall have the value 0 denoting that the CurrentReading property value need not be multiplied by the UnitModifier property value.
SettableThresholds[]	Mandatory	uint16	An array representing the writable thresholds supported by sensor. The property shall be NULL because this sensor is a read-only sensor.
SupportedThresholds[]	Mandatory	uint16	The array property shall be NULL.
UpperThresholdCritical	Mandatory	sint32	The array property shall be NULL.
UpperThresholdNonCritical	Mandatory	sint32	The array property shall be NULL.
LowerThresholdCritical	Mandatory	sint32	The array property shall be NULL.
LowerThresholdNonCritical	Mandatory	sint32	The array property shall be NULL.

541

## 542 7.1.9 Enclosure Temperature Sensor - DCIM\_EnclosureTemperatureSensor

543 This section describes the implementation for the DCIM\_Enclosure Temperature Sensor class. This class  
544 shall be instantiated in the Implementation Namespace: root/dcim.

### 545 7.1.9.1 Resource URIs for WinRM®

546 The class Resource URI shall be "http://schemas.dell.com/wbem/wscim/1/cim-  
547 schema/2/DCIM\_EnclosureTemperatureSensor?\_\_cimnamespace=root/dcim"

548 The key property shall be the SystemCreationClassName, SystemName, CreationClassName and  
549 DeviceID.

550 The instance Resource URI for DCIM\_EnclosureTemperatureSensor instance shall be:  
551 "http://schemas.dell.com/wbem/wscim/1/cim-  
552 schema/2/DCIM\_EnclosureTemperatureSensor?\_\_cimnamespace=root/dcim+SystemCreationClassNam  
553 e= DCIM\_ComputerSystem+SystemName= DCIM:ComputerSystem+CreationClassName=  
554 DCIM\_EnclosureTemperatureSensor+DeviceID=<FQDD>"

### 7.1.9.2 Operations

The following table lists the implemented operations on DCIM\_EnclosureTemperatureSensor.

**Table 19 – DCIM\_EnclosureTemperatureSensor - Operations**

Operation Name	Requirements	Required Input
Get	Mandatory	Instance URI
Enumerate	Mandatory	Class URI

### 7.1.9.3 Class Properties

The following table lists the implemented properties for DCIM\_EnclosureTemperatureSensor instance representing the Enclosure Temperature Sensor in a system. The “Requirements” column shall denote whether the property is implemented (for requirement definitions, see section 3). The “Additional Requirements” column shall denote either possible values for the property, or requirements on the value formulation.

**Table 20 – DCIM\_EnclosureTemperatureSensor - Properties**

Property Name	Requirement	Type	Additional Requirements
SystemCreationClassName	Mandatory	String	The property value shall be “DCIM_ComputerSytem”.
SystemName	Mandatory	String	The property value shall be “DCIM:ComputerSystem”
CreationClassName	Mandatory	String	The property value shall be “DCIM_EnclosureTemperatureSensor”
DeviceID	Mandatory	String	The property shall have the sensor FQDD value.
FQDD	Mandatory	String	The property shall represent Fully Qualified Device Description (FQDD)
DeviceDescription	Mandatory	string	A string containing the friendly Fully Qualified Device Description, a property that describes the device and its location
BaseUnits	Mandatory	uint16	The property value shall be 2 (Degrees C).
CurrentReading	Mandatory	sint32	The present value indicated by the sensor. The property value shall be in Degrees C.
ElementName	Mandatory	string	The property shall have the value “EnclosureTemperatureSensor”.
PrimaryStatus	Mandatory	uint32	The property shall represent the status of the device and shall be one of the following values: <ul style="list-style-type: none"><li>• 0 - Unknown</li><li>• 1 - OK</li><li>• 2 - Degraded</li><li>• 3 - Error</li></ul>
RateUnits	Mandatory	uint16	The property value shall be 0 (None).
SensorType	Mandatory	Uint16	The property value shall be 2

Property Name	Requirement	Type	Additional Requirements
			(Temperature).
UnitModifier	Mandatory	sint32	The property shall have the value 0 denoting that the CurrentReading property value need not be multiplied by the UnitModifier property value.
SettableThresholds[]	Mandatory	uint16	An array representing the writable thresholds supported by Sensor. The property shall be “null” value since this is read-only sensor
SupportedThresholds[]	Mandatory	uint16	The array property shall have following values: <ul style="list-style-type: none"> <li>0 - LowerThresholdNonCritical</li> <li>1 - UpperThresholdNonCritical</li> <li>2 - LowerThresholdCritical</li> <li>3 - UpperThresholdCritical</li> </ul>
UpperThresholdCritical	Mandatory	sint32	The property shall have upper critical threshold value in Degree Centigrade.
UpperThresholdNonCritical	Mandatory	sint32	The property shall have upper non-critical threshold value in Degree Centigrade.
LowerThresholdCritical	Mandatory	sint32	The property shall have lower critical threshold value in Degree Centigrade.
LowerThresholdNonCritical	Mandatory	sint32	The property shall have lower non-critical threshold value in Degree Centigrade.

## 7.1.10 PCIeSSDView – DCIM\_PCIeSSDView

This section describes the implementation for the DCIM\_PCIeSSDView class derived from DCIM\_PhysicalDiskView class. This class shall be instantiated in the Implementation Namespace: root/dcim.

### 7.1.10.1 Resource URIs for WinRM®

The class Resource URI shall be “http://schemas.dell.com/wbem/wscim/1/cim-schema/2/DCIM\_PCIeSSDView?\_\_cimnamespace=root/dcim”

The key property shall be the InstanceID.

The instance Resource URI for DCIM\_PCIeSSDView instance shall be:  
“http://schemas.dell.com/wbem/wscim/1/cim-schema/2/DCIM\_PCIeSSDView?\_\_cimnamespace=root/dcim+InstanceID=<FQDD>”

### 7.1.10.2 Operations

The following table lists the implemented operations on DCIM\_PCIeSSDView.

**Table 21 – DCIM\_PCIeSSDView - Operations**

Operation Name	Requirements	Required Input
Get	Mandatory	Instance URI
Enumerate	Mandatory	Class URI

### 7.1.10.3 Class Properties

The following table lists the implemented properties for DCIM\_PClSSDView instance representing the PCIeExtender Controller in a system. The “Requirements” column shall denote whether the property is implemented (for requirement definitions, see section 3). The “Additional Requirements” column shall denote either possible values for the property, or requirements on the value formulation.

**Table 22 – DCIM\_PClSSDView – Properties**

Property Name	Requirements	Type	Requirement and Description
InstanceID	Mandatory	String	The property shall have the value of the FQDD.
FQDD	Mandatory	String	A string containing the Fully Qualified Device Description, a user-friendly name for the object.
PrimaryStatus	Mandatory	String	<p>The property shall contain one of the following values:</p> <p>0(Unknown)</p> <p>1(OK)</p> <p>2(ReadOnly)</p> <p>3(Error).</p> <p>RollupStatus provides a high level status value, intended to align with Red-Yellow-Green type representation of status</p>
Model	Mandatory	string	The property shall represent the model name of the physical disk. In case of PCIeSSD, this property gives the Bay ID and the Slot in which it is installed.
State	Mandatory	Uint16	<p>This property shall display the current status of the sub system. Possible values are:</p> <p>Unknown</p> <p>Ready—the sub system is functioning normally.</p> <p>Degraded—the sub system has encountered a failure and is operating in a degraded state.</p> <p>Failed—the sub system has encountered a failure and is no longer functioning.</p>
SizeInBytes	Mandatory	Uint64	Displays the full capacity of the device.

			<p>The property shall represent the bus protocol and shall have one of the following values:</p> <ul style="list-style-type: none"> <li>• <b>0 - Unknown</b></li> <li>• <b>1 - SCSI</b></li> <li>• <b>2 - PATA</b></li> <li>• <b>3 - FIBRE</b></li> <li>• <b>4 - USB</b></li> <li>• <b>5 - SATA</b></li> <li>• <b>6 - SAS</b></li> <li>• <b>7 - PCIe</b></li> </ul>
BusProtocol	Mandatory	UInt32	
DeviceProtocol	Mandatory	String	Values – NVMe 1.1, NVMe 1.2 etc
DriverVersion	Mandatory	String	Displays the version of the driver that is currently installed on the sub system
			<p>The property shall represent the drive media type and shall be one of the following values:</p> <ul style="list-style-type: none"> <li>• <b>0 - Magnetic Drive</b></li> <li>• <b>1 - Solid State Drive</b></li> </ul>
MediaType	Mandatory	UInt32	
Manufacturer	Mandatory	String	The property shall represent the manufacturer of the SSD. This is nothing but Vendor ID in case of PCIeSSD
ProductID	Mandatory	String	Displays the Device ID of the PCIeSSD.
SerialNumber	Mandatory	String	Displays the serial number of the PCIeSSD.
PCleNegotiatedLinkWidth	Mandatory	String	Possible Values = x1, x2, x4, x8, x12, x16, x32
PCleCapableLinkWidth	Mandatory	String	Possible Values= x1, x2, x4, x8, x12, x16, x32
MaxCapableSpeed	Mandatory	String	Possible Values = 2.5GT/s;5GT/s;8GT/s
NegotiatedSpeed	Mandatory	String	Possible Values = 2.5GT/s;5GT/s;8GT/s
			<p>This property shall represent the physical disk form factor and shall be one of the following values:</p> <ul style="list-style-type: none"> <li>• <b>0 - Unknown</b></li> <li>• <b>1 - 1.8 inch</b></li> <li>• <b>2 - 2.5 inch</b></li> <li>• <b>3 - 3.5 inch</b></li> <li>• <b>4 – 2.5 inch Add-in card</b></li> </ul>
DriveFormFactor	Mandatory	UInt8	

Revision	Mandatory	String	Displays the current running firmware version on the PCIe SSD.
DeviceLifeStatus	Mandatory	String	Drive Health Good Approaching Warranty Coverage Expiry Warranty Coverage Expired Approaching Read Only Read Only Thermal Shutdown Security Lock Failed
RemainingRatedWriteEndurance	Mandatory	Uint16	Displays the wear out percentage of the PCIe SSD Possible Values = 100%,99%.....0%
FailurePredicted	Mandatory	String	Possible Values 0- <b>Yes</b> 1- <b>No</b>

585

#### 586 7.1.11 PCIeSSD BackPlane View – DCIM\_PCIeSSDBackPlaneView

587 This section describes the implementation for the DCIM\_PCIeSSDBackPlaneView class. This class shall  
 588 be instantiated in the Implementation Namespace: root/dcim.

##### 589 7.1.11.1 Resource URIs for WinRM®

590 The class Resource URI shall be “http://schemas.dell.com/wbem/wscim/1/cim-  
 591 schema/2/DCIM\_PCIeSSDBackPlaneView?\_\_cimnamespace=root/dcim”

592 The key property shall be the InstanceID.

593 The instance Resource URI for DCIM\_PCIeSSDView instance shall be:  
 594 “http://schemas.dell.com/wbem/wscim/1/cim-  
 595 schema/2/DCIM\_PCIeSSDBackPlaneView?\_\_cimnamespace=root/dcim+InstanceID=<FQDD>”

##### 596 7.1.11.2 Operations

597 The following table lists the implemented operations on DCIM\_PCIeSSDBackPlaneView.

598 **Table 23 – DCIM\_PCIeSSDBackPlaneView - Operations**

Operation Name	Requirements	Required Input
Get	Mandatory	Instance URI

Enumerate	Mandatory	Class URI
-----------	-----------	-----------

### 7.1.11.3 Class Properties

The following table lists the implemented properties for DCIM\_PClESSDBackPlaneView instance. The “Requirements” column shall denote whether the property is implemented (for requirement definitions, see section 3). The “Additional Requirements” column shall denote either possible values for the property, or requirements on the value formulation.

**Table 24 – DCIM\_PClESSDBackPlaneView – Properties**

Property Name	Requirements	Type	Requirement and Description
InstanceID	Mandatory	String	The property shall have the value of the FQDD.
RollUpStatus	Mandatory	String	<p>The property shall contain one of the following values:</p> <p>0(Unknown)</p> <p>1(OK)</p> <p>2(Degraded)</p> <p>3(Error).</p> <p>RollupStatus provides a high level status value, intended to align with Red-Yellow-Green type representation of status.</p>
FQDD	Mandatory	string	This FQDD string. E.g. Enclosure.Internal.0-1:PCleExtender.Slot.4
DeviceDescription	Mandatory	string	The user-friendly textual representation of the FQDD. E.g. Backplane <BayID#> of PCle Extender in PCle Slot <PciSlot#>
ProductName	Mandatory	Uint16	This property shall display the name of the backplane. E.g. Backplane <BayID#>
MediaType	Mandatory	String	The drive technology/protocol supported – SAS/SATA or PCle
SlotCount	Mandatory	String	No of logical slots present. E.g. 4, 8 etc.
FirmwareVersion	Mandatory	Uint32	This property shall display the SEP firmware version.

608

## 609 7.1.12 PCIeSSDExtenderView – DCIM\_PCIeSSDExtenderView

610 This section describes the implementation for the DCIM\_PCIeSSDExtenderView class. This class shall  
611 be instantiated in the Implementation Namespace: root/dcim.

### 612 7.1.12.1 Resource URIs for WinRM®

613 The class Resource URI shall be “http://schemas.dell.com/wbem/wscim/1/cim-  
614 schema/2/DCIM\_PCIeSSDExtenderView?\_\_cimnamespace=root/dcim”

615 The key property shall be the InstanceID.

616 The instance Resource URI for DCIM\_PCIeSSDView instance shall be:  
617 “http://schemas.dell.com/wbem/wscim/1/cim-  
618 schema/2/DCIM\_PCIeSSDExtenderView?\_\_cimnamespace=root/dcim+InstanceID=<FQDD>”

### 619 7.1.12.2 Operations

620 The following table lists the implemented operations on DCIM\_PCIeSSDExtenderView.

621 **Table 25 – DCIM\_PCIeSSDView - Operations**

Operation Name	Requirements	Required Input
Get	Mandatory	Instance URI
Enumerate	Mandatory	Class URI

### 622 7.1.12.3 Class Properties

623 The following table lists the implemented properties for DCIM\_PCIeSSDExtenderView instance. The  
624 “Requirements” column shall denote whether the property is implemented (for requirement definitions,  
625 see section 3). The “Additional Requirements” column shall denote either possible values for the property,  
626 or requirements on the value formulation.

627 **Table 26 – DCIM\_PCIeSSDExtenderView – Properties**

Property Name	Requirements	Type	Requirement and Description
InstanceID	Mandatory	String	The property shall have the value of the FQDD.
FQDD	Mandatory	String	A string containing the Fully Qualified Device Description, a user-friendly name for the object.



RollUpStatus	Mandatory	String	<p>The property shall contain one of the following values:</p> <p>0(Unknown)</p> <p>1(OK)</p> <p>2(Degraded)</p> <p>3(Error).</p> <p>RollupStatus provides a high level status value, intended to align with Red-Yellow-Green type representation of status.</p>
PrimaryStatus	Mandatory	Uint16	Possible values are Normal/OK, Warning/Non-critical, Critical/Fatal (R/Y/G)
DeviceDescription	Mandatory	String	Friendly device description

628

629

## 630 7.2 Attributes

631 This section details the supported attributes for the storage devices. Not all attributes shall be available  
632 depending on the controller model. Each attribute is separate instance of the attribute class. The FQDD  
633 property correlates all the attributes to a device instance. Attributes can be set using the SetAttribute()  
634 method.

635 **NOTE:** The RAIDdefaultWritePolicy, RAIDdefaultReadPolicy, and DiskCachePolicy attributes are not  
636 applicable for Cachecade Virtual Disk.

### 637 7.2.1 DCIM\_RAIDEnumeration

638 This section describes the implementation for the DCIM\_RAIDEnumeration class.

639 Each DCIM\_RAIDEnumeration instance is logically associated to a DCIM\_ControllerView instance or  
640 DCIM\_EnclosureView instance or DCIM\_PhysicalDiskView instance or DCIM\_VirtualDiskView instance.  
641 The DCIM\_RAIDEnumeration. FQDD property value is equal to the FQDD property value of one of the  
642 View instance.

643 This class shall be instantiated in the Implementation Namespace: root/dcim.

#### 644 7.2.1.1 Resource URIs for WinRM®

645 The class Resource URI shall be "http://schemas.dell.com/wbem/wscim/1/cim-  
646 schema/2/DCIM\_RAIDEnumeration?\_\_cimnamespace=root/dcim"

647 The key property shall be the InstanceID.

648 The instance Resource URI for DCIM\_RAIDEnumeration instance shall be:  
649 "http://schemas.dell.com/wbem/wscim/1/cim-  
650 schema/2/DCIM\_RAIDEnumeration?\_\_cimnamespace=root/dcim+InstanceID=  
651 <FQDD>:<AttributeName>"

### 7.2.1.2 Operations

The following table lists the implemented operations on DCIM\_RAIDEnumeration.

**Table 11 – DCIM\_RAIDEnumeration - Operations**

Operation Name	Requirements	Required Input
Get	Mandatory	Instance URI
Enumerate	Mandatory	Class URI
DCIM_RAIDService.SetAttribute()	Mandatory	See section 8.15.
DCIM_RAIDService.SetAttributes()	Mandatory	See section 8.16.

### 7.2.1.3 Class Properties

The following table lists the implemented properties for DCIM\_RAIDEnumeration instance representing a RAID enumeration attribute. The “Additional Requirements” column shall denote either possible values for the property, or requirements on the value formulation.

**Table 12 – Class: DCIM\_RAIDEnumeration**

Property Name	Requirement	Type	Additional Requirements
InstanceID	Mandatory	string	The property value shall be formed as follows: “<FQDD property value>:<AttributeName property value>”.
AttributeName	Mandatory	string	The property value shall be from the “AttributeName” column in Table 13.
CurrentValue[]	Mandatory	string	The property value shall be one of the values in the “PossibleValues” column at the corresponding row in Table 13.
PendingValue[]	Mandatory	string	The property value shall be one of the values in the “PossibleValues” column at the corresponding row in Table 13.
IsReadOnly	Mandatory	boolean	The property value shall be from the “IsReadOnly” column in Table 13.
FQDD	Mandatory	string	FQDD of the device that the attribute belongs to.
PossibleValues[]	Mandatory	string	The property value shall be equal to the array of the values in “PossibleValues” column at the corresponding row in Table 13.

The following table lists the requirements for the AttributeName, IsReadOnly, and PossibleValues properties. The PossibleValues is an array property represented in the table as comma delimited list.

**Table 13 – DCIM\_RAIDEnumeration Attributes**

AttributeName	Description	IsRead Only	PossibleValue
RAIDSsupportedRAIDLevels	Supported RAID levels. This attribute relates to the controller device.	TRUE	RAID-0, RAID-1, RAID-5, RAID-10, RAID-50, RAID-60
RAIDSsupportedDiskProt	Supported disk protocol. This attribute relates to the controller device.	TRUE	SAS, SATA
RAIDLloadBalancedMode <sup>1</sup>	Load balance mode. This attribute relates to the controller device.	FALSE	Automatic, Disabled

AttributeName	Description	IsRead Only	PossibleValue
RAIDbatteryLearnMode <sup>1</sup>	Battery learn mode. This attribute relates to the controller device.	FALSE	Automatic, Warn only, Disabled
RAIDccMode <sup>1</sup>	Check consistency mode. This attribute relates to the controller device.	FALSE	Normal , StopOnError
RAIDprMode <sup>1</sup>	Patrol read mode. This attribute relates to the controller device.	FALSE	Automatic, Manual, Disabled
RAIDcopybackMode <sup>1</sup>	Copy back mode. This attribute relates to the controller device.	FALSE	On, On with SMART, Off
RAIDMaxCapableSpeed <sup>1</sup>	Transfer speed of the controller.	TRUE	1_5_GBS , 3_GBS, 6_GBS
RAIDdefaultWritePolicy <sup>1</sup>	Desired write policy of the virtual disk.	FALSE	WriteThrough, WriteBack, WriteBackForce
RAIDdefaultReadPolicy <sup>1</sup>	Desired read policy of the virtual disk	FALSE	NoReadAhead, ReadAhead, Adaptive
DiskCachePolicy <sup>1</sup>	Disk cache policy for all member disks. This attribute relates to the virtual disk device.	FALSE	Default, Enabled, Disabled
RAIDPDState	Physical Disk state. This attributes relates to the physical disk.	TRUE	Unknown, Ready, Online, Foreign, Blocked, Failed, Non-RAID, Missing
RAIDHotSpareStatus	Hotspare status. This attribute relates to the physical disk.	TRUE	No, Dedicated, Global
RAIDNegotiatedSpeed	NegotiatedSpeed. This attribute relates to the physical disk.	TRUE	1_5_GBS, 3_GBS, 6_GBS
RAIDSsupportedInitTypes	Supported virtual disk initialization types. This attribute is related to virtual disk.	TRUE	Fast
RAIDEnclosureRequested CfgMode	This attribute is used to read the current value of BP. This attribute is related to Enclosure.	FALSE	UnifiedMode, SplitMode,None
RAIDEnclosureCurrentCfg Mode	This attribute is used to configure the backplane . This attribute is related to Enclosure.	TRUE	UnifiedMode, SplitMode,None
BackplaneType	This attribute is used to retrieve the type of BackPlane.	TRUE	Shared , Not Shared
RAIDCurrentControllerMode	This attribute is used to read the current operating mode of PERC. This attribute is related to Controller.	TRUE	RAID, Non-RAID
RAIDControllerBootMode	Controller Boot Mode setting on the controller. This attribute relates to the controller device.	FALSE	User Mode,Continue Boot On Error,Headless Mode Continue On Error, Headless Safe Mode
RAIDEnhancedAutoImport ForeignConfig	Enhanced Auto Import of Foreign Config setting on the controller. This attribute relates to the controller device.	FALSE	Enabled Disabled

663 NOTE: 1 – The attribute may not always be present.

## 7.2.2 DCIM\_RAIDString

This section describes the implementation for the DCIM\_RAIDString class.

Each DCIM\_RAIDString instance is logically associated to a DCIM\_ControllerView instance or DCIM\_EnclosureView instance or DCIM\_PhysicalDiskView instance or DCIM\_VirtualDiskView instance. The DCIM\_RAIDString.FQDD property value is equal to the FQDD property value of one of the View instance.

This class shall be instantiated in the Implementation Namespace: root/dcim.

### 7.2.2.1 Resource URIs for WinRM®

The class Resource URI shall be "http://schemas.dell.com/wbem/wscim/1/cim-schema/2/DCIM\_RAIDString?\_\_cimnamespace=root/dcim"

The key property shall be the InstanceID.

The instance Resource URI for DCIM\_RAIDString instance shall be:

"http://schemas.dell.com/wbem/wscim/1/cim-schema/2/DCIM\_RAIDString?\_\_cimnamespace=root/dcim+InstanceID=<FQDD>:<AttributeName>"

### 7.2.2.2 Operations

The following table lists the implemented operations on DCIM\_RAIDString.

**Table 14 – DCIM\_RAIDString - Operations**

Operation Name	Requirements	Required Input
Get	Mandatory	Instance URI
Enumerate	Mandatory	Class URI
DCIM_RAIDService.SetAttribute()	Mandatory	See section 8.15.
DCIM_RAIDService.SetAttributes()	Mandatory	See section 8.16.

### 7.2.2.3 Class Properties

The following table lists the implemented properties for DCIM\_RAIDString instance representing a RAID string attribute. The "Additional Requirements" column shall denote either possible values for the property, or requirements on the value formulation.

685

**Table 15 – Class: DCIM\_RAIDString**

Properties	Requirements	Type	Additional Requirements
InstanceID	Mandatory	string	The property value shall be formed as follows: “<FQDD property value>:<AttributeName property value>”.
AttributeName	Mandatory	string	The property value shall be from the “AttributeName” column in Table 16.
CurrentValue[]	Mandatory	string	The property value shall be a string with minimum length specified in “MinLength” column and maximum length specified in “MaxLength” column in Table 16.
PendingValue[]	Mandatory	string	The property value shall be a string with minimum length specified in “MinLength” column and maximum length specified in “MaxLength” column in Table 16.
IsReadOnly	Mandatory	boolean	The property value shall be the value in the “R/RW” column at the corresponding row in Table 16.
FQDD	Mandatory	string	FQDD of the device that the attribute belongs to.
MinLength	Mandatory	uint64	The property value shall be the value in the “MinLength” column at the corresponding row in Table 16.
MaxLength	Mandatory	uint64	The property value shall be the value in the “MaxLength” column at the corresponding row in Table 16.

686 The following table lists possible attributes and the requirements for the AttributeName, IsReadOnly  
 687 MinLength, and MaxLength properties.

688

**Table 16 – DCIM\_RAIDString Attributes**

AttributeName	Description	IsReadOnly	MinLength	MaxLength
RAIDAssetTag	Asset tag of the enclosure.	TRUE	0	12
Name	Virtual disk name	TRUE	0	15
RAIDEffectiveSASAddress	EffectiveSASAddress. This attribute relates to enclosure.	TRUE	16	16

### 689 7.2.3 DCIM\_RAIDInteger

690 This section describes the implementation for the DCIM\_RAIDInteger class.

691 Each DCIM\_RAIDInteger instance is logically associated to a DCIM\_ControllerView instance or  
 692 DCIM\_EnclosureView instance or DCIM\_PhysicalDiskView instance or DCIM\_VirtualDiskView instance.  
 693 The DCIM\_RAIDString. FQDD property value is equal to the FQDD property value of one of the View  
 694 instance.

695 This class shall be instantiated in the Implementation Namespace: root/dcim.

#### 696 7.2.3.1 Resource URIs for WinRM®

697 The class Resource URI shall be “http://schemas.dell.com/wbem/wscim/1/cim-  
 698 schema/2/DCIM\_RAIDInteger?\_\_cimnamespace=root/dcim”

699 The key property shall be the InstanceID.

700 The instance Resource URI for DCIM\_RAIDInteger instance shall be:  
 701 "http://schemas.dell.com/wbem/wscim/1/cim-  
 702 schema/2/DCIM\_RAIDInteger?\_\_cimnamespace=root/dcim+InstanceID= <FQDD>:<AttributeName>"

### 703 7.2.3.2 Operations

704 The following table lists the implemented operations on DCIM\_RAIDInteger.

705 **Table 17 – DCIM\_RAIDInteger - Operations**

Operation Name	Requirements	Required Input
Get	Mandatory	Instance URI
Enumerate	Mandatory	Class URI
DCIM_RAIDService.SetAttribute()	Mandatory	See section 8.15.
DCIM_RAIDService.SetAttributes()	Mandatory	See section 8.16.

### 706 7.2.3.3 Class Properties

707 The following table lists the implemented properties for DCIM\_RAIDInteger instance representing a RAID  
 708 integer attribute. The "Requirements" column shall denote whether the property is implemented (for  
 709 requirement definitions, see section 3). The "Additional Requirements" column shall denote either  
 710 possible values for the property, or requirements on the value formulation.

Property Name	Requirements	Type	Additional Requirements
InstanceID	Mandatory	string	The property value shall be formed as follows: "<FQDD property value>:<AttributeName property value>".
AttributeName	Mandatory	string	The property value shall be from the "AttributeName" column in Table 18.
CurrentValue[]	Mandatory	string	The property value shall be equal or greater than the value in the "LowerBound" column and equal or less than the value in the "UpperBound" column in Table 18.
PendingValue[]	Mandatory	string	The property value shall be equal or greater than the value in the "LowerBound" column and equal or less than the value in the "UpperBound" column in Table 18.
IsReadOnly	Mandatory	Boolean	The property value shall be the value in the "IsReadOnly" column at the corresponding row in Table 18.
FQDD	Mandatory	string	FQDD of the device that the attribute belongs to.
LowerBound	Mandatory	uint64	The property value shall be the value in the "LowerBound" column at the corresponding row in Table 18.
UpperBound	Mandatory	uint64	The property value shall be the value in the "UpperBound" column at the corresponding row in Table 18.

711 **Table 17 – Class: DCIM\_RAIDInteger**

712 The following table lists the requirements for the AttributeName, IsReadOnly, LowerBound, and  
 713 UpperBound properties.

**Table 18 – DCIM\_RAIDInteger Attributes**

AttributeName	Description	IsReadOnly	LowerBound	UpperBound
RAIDmaxSupportedVD	Maximum number of supported virtual disks. The attribute is related to the controller device.	TRUE		
RAIDmaxPDsInSpan	Maximum number of physical disks per span. The attribute is related to the controller device.	TRUE		
RAIDmaxSpansInVD	Maximum number of spans allowed in a virtual disk. The attribute is related to the controller device.	TRUE		
RAIDrebuildRate <sup>1,2</sup>	Rebuild Rate of the controller. The attribute is related to the controller device.	FALSE	1	100
RAIDccRate <sup>1</sup>	Check consistency rate of the controller. The Value ranges form 1-100. The attribute is related to the controller device.	FALSE	1	100
RAIDreconstructRate <sup>1</sup>	Reconstruct rate of the controller. The attribute is related to the controller device.	FALSE	1	100
RAIDbgiRate <sup>1</sup>	Background initialization rate of the controller. The attribute is related to the controller device.	FALSE	1	100
RAIDprRate <sup>1</sup>	Patrol read rate of the controller. The attribute is related to the controller device.	TRUE	1	100
RAIDspinDownIdleTime	Spin down idle time of the controller. This attribute is related to the controller	TRUE	1	65535
RAIDNominalMediumRotationRate	Nominal medium rotation rate. This attribute is related to physical disk.	TRUE	2	4294967295

NOTE: 1 – The attribute may not always be present.

NOTE: 2 – The rebuild rate, configurable between 0% and 100%, represents the percentage of the system resources dedicated to rebuilding failed array disks. At 0%, the rebuild will have the lowest priority for the controller, will take the most time to complete, and will be the setting with the least impact to system performance. A rebuild rate of 0% does not mean that the rebuild is stopped or paused.

### 7.3 DCIM\_RAIDService

This section describes the implementation for the DCIM\_RAIDService class.

This class shall be instantiated in the Implementation Namespace: root/dcim.

The DCIM\_LCElementConformsToProfile association(s)' ManagedElement property shall reference the DCIM\_RAIDService instance(s).

### 7.3.1 Resource URIs for WinRM®

The class Resource URI shall be “http://schemas.dell.com/wbem/wscim/1/cim-schema/2/DCIM\_RAIDService?\_\_cimnamespace=root/dcim”

The key properties shall be the SystemCreationClassName, CreationClassName, SystemName, and Name.

The instance Resource URI for DCIM\_RAIDService instance shall be:  
“http://schemas.dell.com/wbem/wscim/1/cim-schema/2/DCIM\_RAIDService?\_\_cimnamespace=root/dcim+SystemCreationClassName=DCIM\_ComputerSystem+CreationClassName=DCIM\_RAIDService+ SystemName=DCIM:ComputerSystem+Name=DCIM:RAIDService”

### 7.3.2 Operations

The following table de lists tails the implemented operations on DCIM\_RAIDService.

**Table 19 – DCIM\_RAIDService – Operations**

Operation Name	Requirements	Required Input
Get	Mandatory	Instance URI
Enumerate	Mandatory	Class URI
Invoke	Mandatory	Instance URI

### 7.3.3 Class Properties

The following table lists the implemented properties for DCIM\_RAIDService instance representing a storage service in a system. The “Requirements” column shall denote whether the property is implemented (for requirement definitions, see section 3). The “Additional Requirements” column shall denote either possible values for the property, or requirements on the value formulation.

**Table 20 – Class: DCIM\_RAIDService**

Property Name	Requirement	Type	Additional Requirements
SystemCreationClassName	Mandatory	string	The property value shall be “DCIM_ComputerSystem”.
CreationClassName	Mandatory	string	The property value shall be “DCIM_RAIDService”.
SystemName	Mandatory	string	The property value shall be “DCIM:ComputerSystem”.
Name	Mandatory	string	The property value shall be “DCIM:RAIDService”.
ElementName	Mandatory	string	The property value shall be “RAID Service”.

## 7.4 RAID Profile Registration

This section describes the implementation for the DCIM\_LCRegisteredProfile class.

This class shall be instantiated in the Interop Namespace.

The DCIM\_ElementConformsToProfile association(s)’ ConformantStandard property shall reference the DCIM\_LCRegisteredProfile instance.



### 7.4.1 Resource URIs for WinRM®

The class Resource URI shall be "http://schemas.dmtf.org/wbem/wscim/1/cim-schema/2/CIM\_RegisteredProfile?\_\_cimnamespace=root/interop"

The key property shall be the InstanceID property.

The instance Resource URI shall be: "http://schemas.dell.com/wbem/wscim/1/cim-schema/2/DCIM\_LCRegisteredProfile?\_\_cimnamespace=root/interop+InstanceID=DCIM:SimpleRAID:1.0.0"

### 7.4.2 Operations

The following table lists the implemented operations on DCIM\_SystemView.

**Table 21 – DCIM\_LCRegisteredProfile - Operations**

Operation Name	Requirements	Required Input
Get	Mandatory	Instance URI
Enumerate	Mandatory	Class URI

### 7.4.3 Class Properties

The following table lists the implemented properties for DCIM\_LCRegisteredProfile instance representing RAID Profile implementation. The "Requirements" column shall denote whether the property is implemented (for requirement definitions, see section 3). The "Additional Requirements" column shall denote either possible values for the property, or requirements on the value formulation.

**Table 22 – Class: DCIM\_RegisteredProfile**

Property Name	Requirement	Type	Description
InstanceID	Mandatory	String	DCIM:SimpleRAID:1.0.0
RegisteredName	Mandatory	String	This property shall have a value of "Simple RAID".
RegisteredVersion	Mandatory	String	This property shall have a value of "1.3.0".
RegisteredOrganization	Mandatory	Uint16	This property shall have a value of 1 (Other).
OtherRegisteredOrganization	Mandatory	String	This property shall match "DCIM"
AdvertisedTypes[]	Mandatory	Uint16	This property array shall contain [1(Other), 1 (Other)].
AdvertiseTypeDescriptions[]	Mandatory	String	This property array shall contain ["WS-Identify", "Interop Namespace"].
ProfileRequireLicense[]	Mandatory	String	This property array shall describe the required licenses for this profile.  If no license is required for the profile, the property shall have value NULL.

ProfileRequireLicenseStatus[]	Mandatory	String	This property array shall contain the status for the corresponding license in the same element index of the ProfileRequireLicense array property. Each array element shall contain: “LICENSED” “NOT_LICENSED” If no license is required for the profile, the property shall have value NULL.
-------------------------------	-----------	--------	---

## 8 Methods

This section details the requirements for supporting intrinsic operations and extrinsic methods for the CIM elements defined by this profile

### 8.1 DCIM\_RAIDService.AssignSpare()

The AssignSpare() method is used to assign a physical disk as a dedicated hot spare for a virtual disk, or as a global hot spare.

**Table 23 –DCIM\_RAIDService.AssignSpare() Method: Return Code Values**

Value	Description
0	Request was successfully executed.
2	Error occurred

**Table 24 – DCIM\_RAIDService.AssignSpare() Method: Standard Messages**

MessageID (OUT parameter)	Message
STOR003	Missing CIM method parameter
STOR004	Invalid parameter value
STOR006	General failure
STOR007	Resource Allocation Failure
STOR009	Physical disk FQDD did not identify a valid physical disk for the operation
STOR017	Virtual Disk provided is not valid for the operation

**Table 25 – DCIM\_RAIDService.AssignSpare() Method: Parameters**

Qualifiers	Name	Type	Description/Values
IN, REQ	Target	String	FQDD of target device (Physical Disk)
IN	VirtualDiskArray[]	String	Array of ElementName(s) where each ElementName identifies a different virtual disk.
OUT	RebootRequired	string	A value of “Yes” means a reboot is required to set this value, and a value of “No” means a reboot is not required to set this value . “Optional” means it can be set with or without reboot based on the type of job created.

Qualifiers	Name	Type	Description/Values
OUT	MessageID	String	Error MessageID is returned If the method fails to execute.
OUT	Message	String	Error Message in English corresponding to MessageID is returned If the method fails to execute.
OUT	MessageArguments []	string	Substitution variables for dynamic error messages

778

## 779 8.2 DCIM\_RAIDService.ResetConfig()

780 The ResetConfig() method is used to delete all the virtual disks and unassign all hot spare physical disks.

781 **CAUTION:** All data on the existing virtual disks will be lost.

782

783 **Table 26 – DCIM\_RAIDService.ResetConfig() Method: Return Code Values**

Value	Description
0	Request was successfully executed.
2	Error occurred

784

**Table 27 – DCIM\_RAIDService.ResetConfig() Method: Standard Messages**

MessageID (OUT parameter)	Message
STOR003	Missing parameter
STOR004	Invalid parameter value
STOR006	General failure
STOR007	Resource Allocation Failure

785

**Table 28 – DCIM\_RAIDService.ResetConfig() Method: Parameters**

Qualifiers	Name	Type	Description/Values
IN, REQ	Target	String	FQDD of target device (Controller)
OUT	RebootRequired	string	A value of “Yes” means a reboot is required to set this value, and a value of “No” means a reboot is not required to set this value “Optional” means it can be set with or without reboot based on the type of job created.
OUT	MessageID	String	Error MessageID is returned If the method fails to execute.
OUT	Message	String	Error Message in English corresponding to MessageID is returned If the method fails to execute.
OUT	MessageArguments[]	string	Substitution variables for dynamic error messages

786

### 8.3 DCIM\_RAIDService.ClearForeignConfig()

The ClearForeignConfig() method is used to prepare any foreign physical disks for inclusion in the local configuration.

**Table 29 – DCIM\_RAIDService. ClearForeignConfig() Method: Return Code Values**

Value	Description
0	Request was successfully executed.
2	Error occurred

**Table 30 – DCIM\_RAIDService.ClearForeignConfig() Method: Standard Messages**

MessageID (OUT parameter)	Message
STOR003	Missing parameter
STOR004	Invalid parameter value
STOR006	General failure
STOR007	Resource Allocation Failure
STOR018	No foreign drives detected

**Table 31 – DCIM\_RAIDService.ClearForeignConfig() Method: Parameters**

Qualifiers	Name	Type	Description/Values
IN, REQ	Target	String	FQDD of target device (Controller)
OUT	RebootRequired	string	A value of “Yes” means a reboot is required to set this value, and a value of “No” means a reboot is not required to set this value . “Optional” means it can be set with or without reboot based on the type of job created.
OUT	MessageID	string	Error MessageID is returned If the method fails to execute.
OUT	Message	string	Error Message in English corresponding to MessageID is returned If the method fails to execute.
OUT	MessageArguments[]	string	Substitution variables for dynamic error messages

### 8.4 DCIM\_RAIDService.DeleteVirtualDisk()

The DeleteVirtualDisk() method is used to delete a single virtual disk from the targeted controller.

The successful execution of this method results in setting this virtual disk for deletion. The ObjectStatus and PendingOperations property in the Virtual Disk view has the value “PendingDelete”. The Virtual disk is not deleted until a configuration job is scheduled and the system is rebooted.

799 **Table 32 – DCIM\_RAIDService.DeleteVirtualDisk() Method: Return Code Values**

Value	Description
0	Request was successfully executed.
2	Error occurred

800 **Table 33 – DCIM\_RAIDService.DeleteVirtualDisk() Method: Standard Messages**

MessageID (OUT parameter)	Message
STOR003	Missing parameter
STOR004	Invalid parameter value
STOR006	General failure
STOR007	Resource Allocation Failure
STOR017	Virtual Disk provided is not valid for the operation

801 **Table 34 – DCIM\_RAIDService.DeleteVirtualDisk () Method: Parameters**

Qualifiers	Name	Type	Description/Values
IN, REQ	Target	String	FQDD of target device (Virtual disk)
OUT	RebootRequired	string	A value of “Yes” means a reboot is required to set this value, and a value of “No” means a reboot is not required to set this value . “Optional” means it can be set with or with out reboot based on the type of job created.
OUT	MessageID	String	Error MessageID is returned If the method fails to execute.
OUT	Message	String	Error Message in English corresponding to MessageID is returned If the method fails to execute.
OUT	MessageArguments[]	string	Substitution variables for dynamic error messages

802

## 803 **8.5 DCIM\_RAIDService.CreateVirtualDisk()**

804 The CreateVirtualDisk() method is used to create a single virtual disk on the targeted controller.

805 The successful execution of this method results in a pending and unfinished creation of a virtual disk. The  
806 ObjectStatus and PendingOperations property in the Virtual Disk view class has the value  
807 “PendingCreate”. The virtual disk shall not be created until a configuration job has been scheduled and  
808 the system is rebooted. Upon creation of the virtual disk the FQDD of the virtual disk shall change.

809 This method also supports creation of sliced virtual disk. A sliced virtual disk shall be created if the Size  
810 input parameter value is less than total size of the physical disks. Additional sliced virtual disk may be  
811 created using the same set of physical disks and the same RAID level that was used to create the first  
812 virtual disk.

813 **NOTE:** If the set of physical disks already has sliced virtual disks, the CheckVDValues() method should  
814 be used on that set of physical disks to find the exact value for StartingLBA. This value should be used as  
815 the StartingLBA parameter value of the CreateVirtualDisk() method.

This CreateVirtualDisk() method is also used to create a Cachecade Virtual Disk on the targeted controller. This method internally creates a RAID-0 virtual disk. The creation process is same as described earlier. In this scenario, CreateVirtualDisk () method shall only accept the VDPPropNameArray-VDPPropValueArray pairs mentioned in following table.

**Table 35 – DCIM\_RAIDService.CreateVirtualDisk() Method: VDPProp (Cachecade)**

<i>VDPPropNameArray values</i>	<i>VDPPropValueArray Value Description</i>
Cachecade	The valid input value is 1. (required)
VirtualDiskName	Name (optional)

**Table 36 – DCIM\_RAIDService.CreateVirtualDisk() Method: VDPProp**

<b>VDPPropNameArray Name</b>	<b>Requirement</b>	<b>Additional Requirements</b>
Size	Optional	Size (in MB) of the virtual disk.
RAIDLevel	Mandatory	The new RAID level such as 0, 1, 5, or 6
SpanDepth	Optional	Number of spans in virtual disk. This need not be specified if controller supports uneven span for RAID 10 and a RAID 10 VD is being created (RAIDLevel is 2048)
SpanLength	Mandatory only for multispan	Number of disks per span. This need not be specified if controller supports uneven span for RAID 10 and a RAID 10 VD is being created (RAIDLevel is 2048)
StripeSize	Optional	See DCIM_VirtualDiskView class (see section 7.1.3).
ReadPolicy	Optional	See DCIM_VirtualDiskView class (see section 7.1.3).
WritePolicy	Optional	See DCIM_VirtualDiskView class (see section 7.1.3).
DiskCachePolicy	Optional	See DCIM_VirtualDiskView class (see section 7.1.3).
VirtualDiskName	Optional	Name of the virtual disk..
Initialize		0 - Fast
StartingLBA		Starting logical block address of virtual disks in blocks. If 0xFFFFFFFFFFFFFFFF, startingLBA is calculated programmatically. The value can be in hexadecimal or decimal format. For example, in hexadecimal format 0xFFFF. For example, in decimal format 65535.
T10PIStatus	Optional	<ul style="list-style-type: none"> <li>See DCIM_VirtualDiskView (Section 7.1.3.3) for values for this property.</li> <li>Only valid value is <b>Enabled/Disabled</b>.</li> </ul> If not specified then the created VD will not be T10PI enabled.

825

**Table 37 – DCIM\_RAIDService.CreateVirtualDisk () Method: Return Code Values**

Value	Description
0	Request was successfully executed.
2	Error occurred

826

**Table 38 – DCIM\_RAIDService.CreateVirtualDisk () Method: Standard Messages**

MessageID (OUT parameter)	Message
STOR003	Missing parameter
STOR004	Invalid parameter value
STOR006	General failure
STOR007	Resource Allocation Failure
STOR010	RAID level not supported on controller
STOR011	Stripe size not supported on controller
STOR009	Physical disk FQDD did not identify a valid physical disk for the operation
STOR013	One or more Storage device(s) not in a state where the operation can be completed
STOR009	Physical disk provided is not valid for the operation
STOR015	Maximum virtual disks allowed for this controller has been reached
STOR016	Disks provided are too small to create Virtual Disk of this size
STOR043	Physical Disk is part of Virtual Disk that is not Secondary Raid Level 0
STOR044	All Physical Disks specified are not part of the same disk group
STOR045	Physical Disks have holes, StartingLBA and Size parameters are required to create a Virtual Disk
STOR046	Invalid StartingLBA and/or Size
STOR051	StartingLBA and Size combination goes beyond Physical Disk size
STOR052	Unsupported number of Virtual Disks on a controller or disk group
STOR054	Controller is not cachecade capable.

827

828

**Table 39 – DCIM\_RAIDService.CreateVirtualDisk () Method: Parameters**

Qualifiers	Name	Type	Description/Values
IN, REQ	Target	String	FQDD of target device (controller)
IN, REQ	PDArray[]	String	Array of FQDDs where each FQDD identifies a physical disk..
IN, REQ	VDPropNameArray[]	String	Indexed array of Virtual Disk property names with relative values contained in VDPropValueArray parameter.
IN, REQ	VDPropValueArray[]	String	Indexed array of Virtual Disk property values relative to VDPropValueName parameter.
OUT	RebootRequired	string	A value of “Yes” means a reboot is required to set this value, and a value of “No” means a reboot is not required to set this value
OUT	NewVirtualDisk	DCIM_VirtualDiskView REF	Reference to new virtual disk
OUT	MessageID	String	Error MessageID is returned If the method fails to execute.
OUT	Message	String	Error Message in English corresponding to MessageID is returned If the method fails to execute.
OUT	MessageArguments[]	String	Substitution variables for dynamic error messages

## 829 **8.6 DCIM\_RAIDService.InitializeVirtualDisk()**

830 The InitializeVirtualDisk() method is used to initialize a single virtual disk from the targeted controller.

831 The successful execution of this method results in setting this virtual disk for initialization. The  
 832 PendingOperations property in the Virtual Disk view has the value “Fast Init”.

833 **Table 40 – DCIM\_RAIDService.InitializeVirtualDisk() Method: Return Code Values**

Value	Description
0	Request was successfully executed.
2	Error occurred

834

**Table 41 – DCIM\_RAIDService.InitializeVirtualDisk() Method: Standard Messages**

MessageID (OUT parameter)	Message
STOR003	Missing parameter
STOR004	Invalid parameter value
STOR006	General failure
STOR007	Resource Allocation Failure
STOR028	Virtual Disk not found
STOR061	Init mode not supported on RAID controller



835

**Table 42 – DCIM\_RAIDService.InitializeVirtualDisk () Method: Parameters**

Qualifiers	Name	Type	Description/Values
IN, REQ	VirtualDisk	String	FQDD of the virtual disk to initialize
IN, REQ	InitType	uint16	The parameter shall have value 0 (Fast Init) and 1 (Slow Init )
OUT	RebootRequired	string	A value of “Yes” means a reboot is required to set this value, and a value of “No” means a reboot is not required to set this value . “Optional” means it can be set with or with out reboot based on the type of job created.
OUT	MessageID	String	Error MessageID is returned If the method fails to execute.
OUT	Message	String	Error Message in English corresponding to MessageID is returned If the method fails to execute.
OUT	MessageArguments[]	string	Substitution variables for dynamic error messages

836

837

**838 8.7 DCIM\_RAIDService.GetDHSDisks ()**

839 The GetDHSDisks() method is used to determine possible choices of physical drives that can used to set  
 840 a dedicated hotspare for the identified virtual disk. GetDHSDisks() returns success if it has evaluated the  
 841 physical disks for potential hot spares, the PDAArray return list can be empty if no physical disks are  
 842 suitable for hot spares.

843

**Table 43 – DCIM\_RAIDService.GetDHSDisks () Method: Return Code Values**

Value	Description
0	Request was successfully executed.
2	Error occurred

844

**Table 44 – DCIM\_RAIDService.GetDHSDisks() Method: Standard Messages**

MessageID (OUT parameter)	Message
STOR003	Missing parameter
STOR004	Invalid parameter value
STOR006	General failure
STOR007	Resource Allocation Failure
STOR017	Virtual Disk provided is not valid for the operation

845

**Table 45 – DCIM\_RAIDService.GetDHSDisks () Method: Parameters**

Qualifiers	Name	Type	Description/Values
IN, REQ	Target	String	FQDD of target device (Virtual disk)

Qualifiers	Name	Type	Description/Values
OUT	PDArray[]	String	Array of FQDDs where each identifies a physical disk
OUT	MessageID	String	Error MessageID is returned If the method fails to execute
OUT	Message	String	Error Message in English corresponding to MessageID is returned If the method fails to execute
OUT	MessageArguments[]	String	Substitution variables for dynamic error messages

## 8.8 DCIM\_RAIDService.GetRAIDLevels()

The GetRAIDLevels() method is used to determine the possible choices of RAID Levels to create virtual disks. If the list of physical disks is not provided, this method accesses information for all the connected disks.

**Table 46 – DCIM\_RAIDService.GetRAIDLevels() Method: Return Code Values**

Value	Description
0	Request was successfully executed.
2	Error occurred

**Table 42 – DCIM\_RAIDService. GetRAIDLevels() Method: Standard Messages**

MessageID (OUT parameter)	Message
STOR003	Missing parameter
STOR004	Invalid parameter value
STOR006	General failure
STOR007	Resource Allocation Failure

**Table 47 – DCIM\_RAIDService.GetRAIDLevels () Method: Parameters**

Qualifiers	Name	Type	Description/Values
IN, REQ	Target	String	FQDD of target device (Controller)
IN, REQ	DiskType	Unit32	<ul style="list-style-type: none"> <li>0 - Include all Types</li> <li>1- Include Hard Disk only</li> <li>2 - Include Solid State Only</li> </ul>
IN, REQ	Diskprotocol	Unit32	<ul style="list-style-type: none"> <li>0 - Include all protocols</li> <li>1- Include Sata</li> <li>2 Include SAS</li> </ul>
IN	DiskEncrypt	Unit32	<ul style="list-style-type: none"> <li>0 – Include FDE (encryption capable and non-encryption capable) disks</li> <li>1 – Include FDE only or include only non-FDE disks</li> <li>2- Include only non-FDE disks</li> </ul>

Qualifiers	Name	Type	Description/Values
IN	T10PIStatus	uint32	0 – Include all drives,T10PI incapable and capable drives 1 – Include T10PI capable drives only 2 – Include T10PI incapable drives only
IN	PDArray[]	String	Array of FQDD(s) identifies the physical disk(s).
OUT	VDRAIDEnumArray[]	String	Indexed array of Virtual Disk RAID level enum values.
OUT	MessageID	String	Error MessageID is returned If the method fails to execute.
OUT	Message	String	Error Message in English corresponding to MessageID is returned If the method fails to execute.
OUT	MessageArguments[]	String	Substitution variables for dynamic error messages

## 8.9 DCIM\_RAIDService.GetAvailableDisks ()

The GetAvailableDisks () method is used to determine possible the choices of drives to create virtual disks.

**Table 48 –DCIM\_RAIDService.GetAvailableDisks() Method: Return Code Values**

Value	Description
0	Request was successfully executed.
2	Error occurred

**Table 49 – DCIM\_RAIDService.GetAvailableDisks() Method: Standard Messages**

MessageID (OUT parameter)	Message
STOR003	Missing parameter
STOR004	Invalid parameter value
STOR006	General failure
STOR007	Resource Allocation Failure

**Table 50 – DCIM\_RAIDService.GetAvailableDisks() Method: Parameters**

Qualifiers	Name	Type	Description/Values
IN, REQ	Target	String	FQDD of target device (Controller)
IN, REQ	DiskType	Uint32	<ul style="list-style-type: none"> <li>0 - Include all Types</li> <li>1- Include Hard Disk only</li> <li>2 Include Solid State Only</li> </ul>
IN, REQ	Diskprotocol	Uint32	<ul style="list-style-type: none"> <li>0 - Include all protocols</li> <li>1- Include Sata</li> <li>2 - Include SAS</li> </ul>

Qualifiers	Name	Type	Description/Values
IN	DiskEncrypt	UInt32	<ul style="list-style-type: none"> <li>0 – Include FDE (encryption capable and non-encryption capable) disks</li> <li>1 – Include FDE only, include only non-FDE disks</li> <li>2- Include only non-FDE disks</li> </ul>
IN	RaidLevel	UInt32	
IN	T10PIStatus	uint32	0 – Include all drives, T10PI incapable and capable drives 1 – Include T10PI capable drives only 2 – Include T10PI incapable drives only
OUT	PDArray[]	String	Array of FQDD(s) identifies physical disk(s)..
OUT	MessageID	String	Error MessageID is returned If the method fails to execute.
OUT	Message	String	Error Message in English corresponding to MessageID is returned If the method fails to execute.
OUT	MessageArguments[]	String	Substitution variables for dynamic error messages

859

860

## 861 8.10 DCIM\_RAIDService.CheckVDValues()

862 The CheckVDValues() method is used to determine the possible sizes of Virtual disks and the default  
 863 settings, provided a RAID level and set of physical disks.

864 The VDDPropArray property is filled with Size and other values, so that the method is successfully  
 865 executed. If the SpanDepth is not provided, a default value of 2 shall be used for RAID levels 10, 50, and  
 866 60. **NOTE:** For certain numbers of disks such as nine or fifteen, it may be necessary for the user to  
 867 provide another SpanDepth.

868

869 **Table 51 – DCIM\_RAIDService.CheckVDValues() Method:**

VDDPropNameArrayIn Values	Requirement	Description
Size	Optional	Size (in MB) of the virtual disk.
SpanDepth	Optional	Number of spans in a virtual disk (required for multispans RAID level.) The default value is two for Multispans RAID levels and one for basic RAID levels
SpanLength	Optional	Number of disks per span. This need not be specified if controller supports uneven span for RAID 10 and a RAID 10 VD is being created (RAIDLevel is 2048)
RAIDLevel	Mandatory	See RAIDLevel Values and ValueMaps from DCIM_VirtualDiskView MOF.
StartingLBA		Starting logical block address of virtual disks in 512 byte blocks. If input value is 0xFFFFFFFFFFFFFFFF or 18446744073709551615, startingLBA is calculated

		programmatically.
--	--	-------------------

870

871

**Table 52 – DCIM\_RAIDService.CheckVDValues() Method:**

<b>VDPropNameArrayOut values</b>	<b>Description</b>
SizeInBytes	If Input Parameter “Size” is not specified or is specified as zero, then “SizeInBytes” returns the maximum allowed size of the virtual disk. If the input parameter “Size” is non-zero, SizeInBytes is same as Size.
RAIDLevel	See RAIDLevel Values and ValueMaps from DCIM_VirtualDiskView MOF.
SpanDepth	Number of spans in virtual disk.
SpanLength	Number of disks per span.
StripeSize	See DCIM_VirtualDiskView class (see section 7.1.3).
ReadPolicy	See DCIM_VirtualDiskView class (see section 7.1.3).
WritePolicy	See DCIM_VirtualDiskView class (see section 7.1.3).
DiskCachePolicy	See DCIM_VirtualDiskView class (see section 7.1.3).
Name	Virtual disk name.
StartingLBA	Starting logical Block address in 512 byte blocks of the virtual disk.

872

873

**Table 53 – DCIM\_RAIDService.CheckVDValues() Method: Return Code Values**

<b>Value</b>	<b>Description</b>
0	Request was successfully executed.
2	Error occurred

874

**Table 54 –DCIM\_RAIDService.CheckVDValues() Method: Standard Messages**

<b>MessageID (OUT parameter)</b>	<b>Message</b>
STOR003	Missing parameter
STOR004	Invalid parameter value
STOR006	General failure
STOR007	Resource Allocation Failure
STOR010	RAID level not supported on controller
STOR011	Stripe size not supported on controller
STOR009	Physical disk FQDD did not identify a valid physical disk for the operation
STOR013	One or more Storage device(s) not in a state where the operation can be completed
STOR017	Virtual Disk provided is not valid for the operation
STOR035	Not enough Storage objects or Storage objects in incorrect state for this operation

MessageID (OUT parameter)	Message
STOR043	Physical Disk is part of Virtual Disk that is not Secondary Raid Level 0
STOR044	All Physical Disks specified are not part of the same disk group
STOR045	Physical Disks have holes, StartingLBA and Size parameters are required to create a Virtual Disk
STOR046	Invalid StartingLBA and/or Size
STOR051	StartingLBA and Size combination goes beyond Physical Disk size
STOR052	Unsupported number of Virtual Disks on a controller or disk group

875

**Table 55 – DCIM\_RAIDService.CheckVDValues () Method: Parameters**

Qualifiers	Name	Type	Description/Values
IN, REQ	Target	String	FQDD of target device (Controller)
IN, REQ	PDArray[]	String	Array of FQDD(s) identifies physical disk(s).
IN, REQ	VDPropNameArrayIn[]	String	Indexed array of Virtual Disk property names with relative values contained in VDPropValueArray parameter.
IN, REQ	VDPropValueArrayIn[]	String	Indexed array of Virtual Disk property values relative to VDPropValueName parameter.
OUT	VDPropNameArray[]	String	Indexed array of Virtual Disk property names with relative values contained in VDPropValueArray parameter.
OUT	VDPropValueArray[]	String	Indexed array of Virtual Disk property values relative to VDPropValueName parameter.
OUT	MessageID	String	Error MessageID is returned If the method fails to execute.
OUT	Message	String	Error Message in English corresponding to MessageID is returned If the method fails to execute.
OUT	MessageArguments[]	String	Substitution variables for dynamic error messages

876

## 877 8.11 DCIM\_RAIDService.SetControllerKey()

878 The SetControllerKey() method is used to set the key on controllers and set the controller in Local key  
879 Management (LKM) to encrypt the drives.

880

**Table 56 –DCIM\_RAIDService.SetControllerKey() Method: Return Code Values**

Value	Description
0	Request was successfully executed.
2	Error occurred

881

**Table 57 –DCIM\_RAIDService.SetControllerKey() Method: Standard Messages**

MessageID (OUT parameter)	Message
STOR003	Missing parameter
STOR004	Invalid parameter value
STOR006	General failure
STOR007	Resource Allocation Failure
STOR020	Controller Key is already present
STOR022	Controller is not security capable
STOR038	Invalid parameter value for Keyid

882

**Table 58 – DCIM\_RAIDService.SetControllerKey () Method: Parameters**

Qualifiers	Name	Type	Description/Values
IN, REQ	Target	String	FQDD of target device (Controller)
IN, REQ	Key	String	<p>Key passcode. The Key shall be maximum of 32 characters in length, where the expanded form of the special character is counted as a single character..</p> <p>The Key shall have at least one character from each of the following sets.</p> <ul style="list-style-type: none"> <li>• Upper Case</li> <li>• Lower Case</li> <li>• Number</li> <li>• Special Character</li> </ul> <p>The special characters in the following set need to be passed as mentioned below.</p> <ul style="list-style-type: none"> <li>• &amp; → &amp;amp;</li> <li>• &lt; → &amp;lt;</li> <li>• &gt; → &amp;gt;</li> <li>• “ → &amp;quot;</li> <li>• ‘ → &amp;apos;</li> </ul>
IN, REQ	Keyid	String	Key Identifier that describes the key. The Keyid shall be maximum of 32 characters in length and should not have any spaces.
OUT	RebootRequired	string	A value of “Yes” means a reboot is required to set this value, and a value of “No” means a reboot is not required to set this value. “Optional” means it can be set with or with out reboot based on the type of job created.
OUT	MessageID	String	Error MessageID is returned If the method fails to execute.
OUT	Message	String	Error Message in English corresponding to MessageID is returned If the method fails to execute.
OUT	MessageArguments[]	String	Substitution variables for dynamic error messages.

883

## 8.12 DCIM\_RAIDService.LockVirtualDisk ()

The LockVirtualDisk() method encrypts the virtual disk.

**Table 59 – DCIM\_RAIDService.LockVirtualDisk() Method: Return Code Values**

Value	Description
0	Request was successfully executed.
2	Error occurred

**Table 60 – DCIM\_RAIDService.LockVirtualDisk () Method: Standard Messages**

MessageID (OUT parameter)	Message
STOR003	Missing parameter
STOR004	Invalid parameter value
STOR006	General failure
STOR007	Resource Allocation Failure
STOR021	Controller Key is not present

**Table 61 – DCIM\_RAIDService.LockVirtualDisk () Method: Parameters**

Qualifiers	Name	Type	Description/Values
IN, REQ	Target	String	FQDD of target device (Virtual Disk)
OUT	RebootRequired	string	A value of "Yes" means a reboot is required to set this value, and a value of "No" means a reboot is not required to set this value . "Optional" means it can be set with or with out reboot based on the type of job created.
OUT	MessageID	String	Error MessageID is returned If the method fails to execute.
OUT	Message	String	Error Message in English corresponding to MessageID is returned If the method fails to execute.
OUT	MessageArguments[]	String	Substitution variables for dynamic error messages

## 8.13 DCIM\_RAIDService.CreateTargetedConfigJob()

The CreateTargetedConfigJob() method is used to apply the pending values set by different methods under DCIM\_RAIDService class.



893 **Table 62 – DCIM\_RAIDService.CreateTargetedConfigJob() Method: Return Code Values**

Value	Description
2	Error occurred
4096 <sup>1</sup>	Job started: REF returned to started CIM_ConcreteJob <sup>1</sup>

894 **Table 63 – DCIM\_RAIDService.CreateTargetedConfigJob() Method: Parameters**

Qualifiers	Name	Type	Description/Values
IN, REQ	Target	string	FQDD of target device (controller) or FQDD of the PCIeSSDs when Operation is performing on PCIeSSD.
IN	RebootJobType	uint16	<p>Creates a specific reboot job to power cycle the host system. This parameter only creates the RebootJob and does not schedule it.</p> <p>Shall contain the requested reboot type:</p> <p>1 - PowerCycle</p> <p>2 - Graceful Reboot without forced shutdown</p> <p>3 - Graceful Reboot with forced shutdown.</p> <p>NOTE: This parameter only creates the RebootJob and does not schedule it.</p>

Qualifiers	Name	Type	Description/Values
IN	ScheduledStartTime	string	Schedules the configuration job and the optional reboot job at the specified start time. A special value of "TIME_NOW" schedules the job(s) immediately. Start time for the job execution in format: yyyyymmddhhmmss. The string "TIME_NOW" means immediate.
IN	RealTime	string	0: Staged 1: Realtime
IN	UntilTime	string	Defines a time window for scheduling the job(s). However, this parameter is dependent on "ScheduledStartTime" and "ScheduledStartTime" parameters. Once scheduled, jobs will be executed within the time window. End time for the job execution in format: yyyyymmddhhmmss. : If this parameter is not NULL, then ScheduledStartTime parameter shall also be specified.
OUT	Job	CIM_ConcreteJob REF	Reference to the newly created pending value application job. <sup>1</sup>
OUT	MessageID	string	Error Message ID- can be used to index into Dell Message registry files
OUT	Message	string	Error Message in English corresponding to MessageID is returned if the method fails to execute
OUT	MessageArguments[]	string	Substitution variables for dynamic error messages

NOTE: 1 – If return code is 4096 (Job Created), the newly created job will not execute if the LC core services are not running (DCIM\_LCEnumeration with AttributeName equal to "LifecycleControllerState" has the CurrentValue property equal to "Disabled").

NOTE: If CreateTargetedConfigJob method is executed without the 3 optional parameters discussed above, the configuration job is created but not scheduled. However, this configuration job can be scheduled later using the DCIM\_JobService.SetupJobQueue () method from the "Job Control Profile". For more information, see "Job Control Profile".

**Table 64 – DCIM\_RAIDService.CreateTargetedConfigJob() Method: Standard Messages**

MessageID (OUT parameter)	Message
STOR003	Missing parameter
STOR004	Invalid parameter value
STOR006	General failure
STOR007	Resource Allocation Failure
STOR026	Configuration Job not Created, there are no pending Configuration changes
STOR024	Configuration already committed, cannot commit until previous commit succeeds or is cancelled
STOR023	Configuration already committed, cannot set

MessageID (OUT parameter)	Message
	configuration
STOR081	The job could not be created because the reboot type selected for the job creation and the reboot type required for pending operations do not match.
STOR078	The requested operation requires a reboot type that does not match the reboot type required for pending operations
STOR079	The controller does not support this operation or is in a state that does not allow this operation
LC062	An instance of Export or Import System Configuration is already running.

## 8.14 DCIM\_RAIDService.DeletePendingConfiguration()

The DeletePendingConfiguration() method cancels the pending configuration changes made before the configuration job is created with CreateTargetedConfigJob(). This method only operates on the pending changes prior to CreateTargetedConfigJob() being called. After the Configuration job is created the pending changes can only be canceled by calling CancelJob() in the Job Control profile.

**Table 65 – DCIM\_RAIDService.DeletePendingConfiguration() Method: Return Code Values**

Value	Description
0	Request was successfully executed.
2	Error occurred

**Table 66 – DCIM\_RAIDService.DeletePendingConfiguration () Method: Standard Messages**

MessageID (OUT parameter)	Message
STOR003	Missing parameter
STOR004	Invalid parameter value
STOR006	General failure
STOR007	Resource Allocation Failure
STOR025	Configuration already committed, cannot delete pending configuration
LC062	An instance of Export or Import System Configuration is already running.

**Table 67 – DCIM\_RAIDService.DeletePendingConfiguration () Method: Parameters**

Qualifiers	Name	Type	Description/Values
IN, REQ	Target	String	FQDD of target device (Controller) / FQDD of the PCIeSSD device in case of PCIeSSD
OUT	MessageID	String	Error MessageID is returned If the method fails to execute.

Qualifiers	Name	Type	Description/Values
OUT	Message	String	Error Message in English corresponding to MessageID is returned If the method fails to execute.
OUT	MessageArguments[]	String	Substitution variables for dynamic error messages

915

## 916 8.15 DCIM\_RAIDService.SetAttribute()

917 The SetAttribute() method is used to set or change the value of a RAID attribute.

918 Invoking the SetAttribute() method shall change the value of the attribute's CurrentValue or attribute's  
919 PendingValue property to the value specified by the AttributeValue parameter if the attribute's  
920 IsReadOnly property is FALSE. Invoking this method when the attribute's IsReadOnly property is TRUE  
921 shall result in no change to the value of the attribute's CurrentValue property. The results of changing this  
922 value are described with the SetResult parameter.

923

924 **NOTE:** Invoking the SetAttribute() method multiple times can result in the earlier requests being  
925 overwritten or lost.

926 **Table 68 – DCIM\_RAIDService.SetAttribute() Method: Return Code Values**

Value	Description
0	Completed with no error
2	Error occurred

927 Implementation of standard messages is optional. Standard messages defined for this method are  
928 described in Table 69.

929 **Table 69 – DCIM\_RAIDService.SetAttribute() Method: Standard Messages**

MessageID(OUT parameter)	Message
STOR006	General failure
STOR007	Resource Allocation Failure
STOR039	Mismatch in AttributeName and AttributeValue count
STOR037	Missing required parameter <Parameter Name>
STOR038	Invalid parameter value for <Parameter Name>
STOR040	Invalid Attribute Name <Attribute Name>
STOR041	Invalid Attribute Value for Attribute Name <Attribute Name>
STOR042	Unsupported Attribute Value for Attribute Name <Attribute Name>
STOR047	AttributeValue cannot be changed for ReadOnly Attribute Name <Attribute Name>
LC062	An instance of Export or Import System Configuration is already running.

930

**Table 70 – DCIM\_RAIDService.SetAttribute() Method: Parameters**

Qualifiers	Name	Type	Description/Values
IN, REQ	Target	String	FQDD of of target device
IN, REQ	AttributeName[]	String	Shall contain the attribute name representing the attribute to be modified, as specified by Attribute.AttributeName property. The specified attribute shall be unique and shall already exist.
OUT	SetResult[]	String	Returns: <ul style="list-style-type: none"> <li>• "Set CurrentValue" when the attribute's current value is set.</li> <li>• "Set PendingValue" when the attribute's pending value is set.</li> </ul>
IN, REQ	AttributeValue[]	String	Shall contain a new value to assign to the specified attribute. If this value is valid, it is applied to the CurrentValue or PendingValue property of the specified Attribute depending on the system implementation.
OUT	RebootRequired []	String	A value of "Yes" means a reboot is required to set this value, and a value of "No" means a reboot is not required to set this value. "Optional" means it can be set with or without reboot based on the type of job created.
OUT	MessageID[]	String	Error MessageID is returned If the method fails to execute.
OUT	Message[]	String	Error Message in English corresponding to MessageID is returned If the method fails to execute.
OUT	MessageArguments[]	String	Substitution variables for dynamic error messages

931

## 932 8.16 DCIM\_RAIDService.SetAttributes()

933 The SetAttributes() method is used to set or change the values of a group of attributes.

934 Invocation of the SetAttributes() method shall change the values of the CIM\_Attribute.CurrentValue or  
935 PendingValue properties that correspond to the names specified by the AttributeName parameter and the  
936 values specified by the AttributeValue parameter if the respective CIM\_Attribute.IsReadOnly property is  
937 FALSE. Invocation of this method when the respective CIM\_Attribute.IsReadOnly property is TRUE shall  
938 result in no change to the corresponding value of the CIM\_Attribute.CurrentValue property.

939 **NOTE:** If more than one value is specified for a particular attribute, the AttributeName parameter shall  
940 contain multiple identical array entries that represent the attribute name that corresponds to each  
941 respective attribute value described by the AttributeValue parameter.

942 **NOTE:** Invoking the SetAttributes() method multiple times can result in the earlier requests being  
943 overwritten or lost.

944 **Table 71 –DCIM\_RAIDService.SetAttributes() Method: Return Code Values**

Value	Description
0	Completed with no error
2	Error occurred

945

**Table 72 – DCIM\_RAIDService.SetAttributes() Method: Standard Messages**

MessageID(OUT parameter)	Message
STOR006	General failure
STOR007	Resource Allocation Failure
STOR039	Mismatch in AttributeName and AttributeValue count
STOR037	Missing required parameter <Parameter Name>
STOR038	Invalid parameter value for <Parameter Name>
STOR040	Invalid Attribute Name <Attribute Name>
STOR041	Invalid Attribute Value for Attribute Name <Attribute Name>
STOR042	Unsupported Attribute Value for Attribute Name <Attribute Name>
STOR047	AttributeValue cannot be changed for ReadOnly Attribute Name <Attribute Name>
LC062	An instance of Export or Import System Configuration is already running.

946

**Table 73 – DCIM\_RAIDService.SetAttributes() Method: Parameters**

Qualifiers	Name	Type	Description/Values
IN, REQ	Target	String	FQDD of of target device
IN, REQ	AttributeName[ ]	String	The array parameter shall contain the AttributeName property values for the attributes to be modified.
IN, REQ	AttributeValue[ ]	String	The array parameter shall contain the desired attribute values. If the value is valid, the CurrentValue or PendingValue property of the specified attribute will be modified.
OUT	SetResult[ ]	String	Returns: <ul style="list-style-type: none"> <li>• "Set CurrentValue" when the attribute's current value is set.</li> <li>• "Set PendingValue" when the attribute's pending value is set.</li> </ul>
OUT	RebootRequired[]	String	Returns: <ul style="list-style-type: none"> <li>• "Yes" if reboot is required.</li> <li>• "No" if reboot is not required.</li> <li>• "Optional" means it can be set with or with out reboot based on the type of job created.</li> </ul>
OUT	MessageID[]	String	Error MessageID
OUT	Message[]	String	Error Message
OUT	MessageArguments[]	String	Error MessageArguments

947

## 948 **8.17 DCIM\_RAIDService.RemoveControllerKey()**

949 The RemoveControllerKey() method erases the encryption key on controller.

950 **CAUTION:** All encrypted drives shall be erased.

951 **Table 74 – DCIM\_RAIDService.RemoveControllerKey() Method: Return Code Values**

Value	Description
0	Request was successfully executed.
2	Error occurred

952 **Table 75 – DCIM\_RAIDService.RemoveControllerKey ( ) Method: Standard Messages**

MessageID(OUT parameter)	Message
STOR003	Missing parameter
STOR004	Invalid parameter value
STOR006	General failure
STOR007	Resource Allocation Failure
STOR021	Controller Key is not present
STOR022	Controller is not security capable

953 **Table 76 – DCIM\_RAIDService.RemoveControllerKey ( ) Method: Parameters**

Qualifiers	Name	Type	Description/Values
IN, REQ	Target	String	FQDD of of target device (Controller)
OUT	RebootRequired	string	A value of “Yes” means a reboot is required to set this value, and a value of “No” means a reboot is not required to set this value . “Optional” means it can be set with or with out reboot based on the type of job created.
OUT	MessageID	String	Error MessageID is returned If the method fails to execute.
OUT	Message	String	Error Message in English corresponding to MessageID is returned If the method fails to execute.

954

## 955 **8.18 DCIM\_RAIDService.EnableControllerEncryption()**

956 The EnableControllerEncryption() method sets either Local Key Management (LKM) or Dell Key  
957 Management (DKM) on controllers that support encryption of the drives.

958 **Table 77 – DCIM\_RAIDService.EnableControllerEncryption ( ) Method: Return Code Values**

Value	Description
0	Request was successfully executed.
2	Error occurred

959 **Table 78 – DCIM\_RAIDService.EnableControllerEncryption() Method: Standard Messages**

MessageID(OUT parameter)	Message
STOR0003	Missing parameter
STOR004	Invalid parameter value
STOR006	General failure
STOR007	Resource Allocation Failure
STOR019	Provided passphrase is not valid
STOR022	Controller is not security capable

MessageID(OUT parameter)	Message
STOR038	Invalid parameter value for Keyid
STOR020	Controller Key is already present

960

**Table 79 – DCIM\_RAIDService.EnableControllerEncryption() Method: Parameters**

Qualifiers	Name	Type	Description/Values
IN, REQ	Target	String	FQDD of of target device (Controller)
IN, REQ	Mode	Uint16	Mode of the controller 1 - Local Key Management (LKM) 2 – Dell Key Management (DKM)
IN	Key	String	Key is the passcode. This parameter is required if the mode is set to Local Key Management. The Key shall be maximum of 32 characters in length, where the expanded form of the special character is counted as a single character. The Key shall have one character from each of the following set. <ul style="list-style-type: none"> <li>• Upper Case</li> <li>• Lower Case</li> <li>• Number</li> <li>• Special Character.</li> </ul> The special characters in the following set need to be passed as mentioned below. <ul style="list-style-type: none"> <li>• &amp; → &amp;amp;</li> <li>• &lt; → &amp;lt;</li> <li>• &gt; → &amp;gt;</li> <li>• “ → &amp;quot;</li> <li>• ‘ → &amp;apos;</li> </ul>
IN	Keyid	String	Key Identifier describes the Key. This parameter is required if the mode is set to Local Key Management. The Keyid shall be maximum of 32 characters in length and should not have any spaces.
OUT	RebootRequired	string	A value of “Yes” means a reboot is required to set this value, and a value of “No” means a reboot is not required to set this value . “Optional” means it can be set with or without reboot based on the type of job created.
OUT	MessageID	String	Error MessageID is returned If the method fails to execute.
OUT	Message	String	Error Message in English corresponding to MessageID is returned If the method fails to execute.
OUT	MessageArguments[]	String	Substitution variables for dynamic error messages

961

## 962 8.19 DCIM\_RAIDService.ReKey()

963 The ReKey () method resets the key on the controller that support encryption of the of drives. This  
964 method switches the controller mode.



965

**Table 80 – DCIM\_RAIDService.ReKey () Method: Return Code Values**

Value	Description
0	Request was successfully executed.
2	Error occurred

966

**Table 81 – DCIM\_RAIDService.ReKey () Method: Standard Messages**

MessageID(OUT parameter)	Message
STOR003	Missing parameter
STOR004	Invalid parameter value
STOR006	General failure
STOR007	Resource Allocation Failure
STOR0019	Provided passphrase is not valid
STOR048	Controller is not Dell Key Management capable
STOR050	Controller is in Dell Key Management mode
STOR053	Controller key not present, controller needs key from Dell Key Management Server
STOR038	Invalid parameter value for Keyid
STOR020	Controller Key is already present

967

**Table 82 – DCIM\_RAIDService.ReKey () Method: Parameters**

Qualifiers	Name	Type	Description/Values
IN, REQ	Target	String	FQDD of of target device (Controller)
IN, REQ	Mode	Uint16	Mode of the controller: <ul style="list-style-type: none"> <li>1 - Local Key Management (LKM)</li> </ul>
IN	Newkey	String	New controller key. The key shall be maximum of 32 characters in length, where the expanded form of the special character is counted as a single character. The Key shall have one character from each of the following set. <ul style="list-style-type: none"> <li>Upper Case</li> <li>Lower Case</li> <li>Number</li> <li>Special Character.</li> </ul> The special characters in the following set need to be passed as mentioned below and are counted as a single character for the maximum length of the key. <ul style="list-style-type: none"> <li>&amp; → &amp;amp;</li> <li>&lt; → &amp;lt;</li> <li>&gt; → &amp;gt;</li> <li>“ → &amp;quot;</li> <li>‘ → &amp;apos;</li> </ul>
IN	Oldkey	String	Old controller key.
IN	Keyid	String	Key identifier describes the key. The Keyid shall be maximum 32 characters in length and should not have any spaces.

Qualifiers	Name	Type	Description/Values
OUT	RebootRequired	string	A value of “Yes” means a reboot is required to set this value, and a value of “No” means a reboot is not required to set this value. “Optional” means it can be set with or with out reboot based on the type of job created.
OUT	MessageID	String	Error MessageID is returned If the method fails to execute.
OUT	Message	String	Error Message in English corresponding to MessageID is returned If the method fails to execute.
OUT	MessageArguments[]	String	Substitution variables for dynamic error messages

968

## 969 8.20 DCIM\_RAIDService.UnassignSpare()

970 The UnassignSpare() method is used to unassign a physical disk as a dedicated hot spare from a virtual  
 971 disk, or as a global hot spare. After the method executes successfully the physical disk shall be available  
 972 for use.

973 **Table 83 – DCIM\_RAIDService.UnassignSpare() Method: Return Code Values**

Value	Description
0	Request was successfully executed.
2	Error occurred

974

**Table 84 – DCIM\_RAIDService.UnassignSpare() Method: Standard Messages**

MessageID(OUT parameter)	Message
STOR003	Missing parameter
STOR004	Invalid parameter value
STOR006	General failure
STOR007	Resource Allocation Failure
STOR009	Physical disk FQDD did not identify a valid physical disk for the operation

975

976 **Table 85 – DCIM\_RAIDService.UnassignSpare() Method: Parameters**

Qualifiers	Name	Type	Description/Values
IN, REQ	Target	String	FQDD of target device (Physical Disk)
OUT	RebootRequired	String	A value of “Yes” means a reboot is required to set this value, and a value of “No” means a reboot is not required to set this value. “Optional” means it can be set with or with out reboot based on the type of job created.
OUT	MessageID	String	Error MessageID is returned If the method fails to execute.
OUT	Message	String	Error Message in English corresponding to MessageID is returned If the method fails to execute.

Qualifiers	Name	Type	Description/Values
OUT	MessageArguments[]	String	Substitution variables for dynamic error messages

## 8.21 DCIM\_RAIDService.ConvertToRAID()

The ConvertToRAID() method is used to convert a physical disks in Non-RAID state to a state usable for RAID. After the method is successfully executed the PendingValue property of RAIDPDState should reflect the pending changes. After the CreateTargetedConfigJob method is successfully executed the DCIM\_PhysicalDiskView.RAIDStatus property of that physical disk should reflect the new state.

**Table 83 – DCIM\_RAIDService.ConvertToRAID() Method: Return Code Values**

Value	Description
0	Request was successfully executed.
2	Error occurred

**Table 84 – DCIM\_RAIDService.ConvertToRAID() Method: Standard Messages**

MessageID(OUT parameter)	Message
STOR003	Missing parameter
STOR004	Invalid parameter value
STOR006	General failure

**Table 85 – DCIM\_RAIDService.ConvertToRAID() Method: Parameters**

Qualifiers	Name	Type	Description/Values
IN, REQ	PDArray[]	String	This is an array of FQDDs of target devices (PhysicalDisk.)
OUT	RebootRequired	UInt8	This parameter shall indicate if reboot is required to set the value and shall have following values: <ul style="list-style-type: none"> <li>0 – No</li> <li>1 – Yes</li> </ul>
OUT	MessageID[]	String	Error MessageID is returned If the method fails to execute.
OUT	Message[]	String	Error Message in English corresponding to MessageID is returned If the method fails to execute.
OUT	MessageArguments[]	String	Substitution variables for dynamic error messages

## 8.22 DCIM\_RAIDService.ConvertToNonRAID()

The ConvertToNonRAID() method is used to convert a physical disks in RAID state of “Ready” to a Non-RAID state. After the method is successfully executed, the PendingValue property of RAIDPDState should reflect the pending changes. After the CreateTargetedConfigJob method is successfully executed, the DCIM\_PhysicalDiskView.RAIDStatus property of that physical disk should reflect the new state.

990 **Table 86 – DCIM\_RAIDService.ConvertToNonRAID() Method: Return Code Values**

Value	Description
0	Request was successfully executed.
2	Error occurred

991 **Table 87 – DCIM\_RAIDService.ConvertToNonRAID() Method: Standard Messages**

MessageID(OUT parameter)	Message
STOR003	Missing parameter
STOR004	Invalid parameter value
STOR006	General failure
STOR074	The requested RAID configuration operation is not allowed because the controller is currently in Non-RAID mode

992 **Table 88 – DCIM\_RAIDService.ConvertToNonRAID() Method: Parameters**

Qualifiers	Name	Type	Description/Values
IN, REQ	PDArray[]	String	This is an array of FQDDs of target devices (PhysicalDisk)
OUT	RebootRequired	UInt8	This parameter shall indicate if reboot is required to set the value and shall be one of the following values: <ul style="list-style-type: none"> <li>0 – No</li> <li>1 – Yes</li> </ul>
OUT	MessageID[]	String	Error MessageID is returned If the method fails to execute.
OUT	Message[]	String	Error Message in English corresponding to MessageID is returned If the method fails to execute.
OUT	MessageArguments[]	String	Substitution variables for dynamic error messages

## 993 **8.23 DCIM\_RAIDService.ImportForeignConfig()**

994 **Table 86 – DCIM\_RAIDService.ImportForeignConfig() Method: Return Code Values**

Value	Description
0	Request was successfully executed.
2	Error occurred

995 **Table 87 – DCIM\_RAIDService.ImportForeignConfig() Method: Standard Messages**

MessageID(OUT parameter)	Message
STOR003	Missing parameter
STOR004	Invalid parameter value
STOR006	General failure
STOR007	Resource Allocation Failure

996

**Table 88 – DCIM\_RAIDService.ImportForeignConfig() Method: Parameters**

Qualifiers	Name	Type	Description/Values
IN, REQ	Target	String	FQDD of target device (Controller)
OUT	RebootRequired	string	A value of “Yes” means a reboot is required to set this value, and a value of “No” means a reboot is not required to set this value . “Optional” means it can be set with or with out reboot based on the type of job created.
OUT	MessageID	String	Error MessageID is returned If the method fails to execute.
OUT	Message	String	Error Message in English corresponding to MessageID is returned If the method fails to execute.

**997 8.24 DCIM\_RAIDService.BlinkTarget()**

998 The BlinkTarget() method is used to Identify a single physical disk by blinking the disk slot LED for the  
999 physical disk / Virtual disk.

1000 The successful execution of this method results in setting the LED to blink the identify pattern or turns off  
1001 the blinking of the identify pattern.

1002 The method is real time, blink cannot be scheduled as part of a job.

**1003 DCIM\_RAIDService.BlinkTarget() Method: Return Code Values**

Value	Description
0	Request was successfully executed.
2	Error occurred

**1004 DCIM\_RAIDService.BlinkTarget() Method: Standard Messages**

MessageID (OUT parameter)	Message
STOR003	Missing parameter
STOR004	Invalid parameter value
STOR006	General failure
STOR007	Resource Allocation Failure
STORXXX	Physical Disk has no associated LED to blink
STOR072	iDRAC Service Module (ISM) is either not present or not running on the server OS

1005

**1006 DCIM\_RAIDService.BlinkTarget() Method: Parameters**

Qualifiers	Name	Type	Description/Values
IN, REQ	Target	String	FQDD of target device (Physical Disk/Virtual disk)

Qualifiers	Name	Type	Description/Values
OUT	RebootRequired	string	A value of “Yes” means a reboot is required to set this value, and a value of “No” means a reboot is not required to set this value . Here the value should be 0. “Optional” means it can be set with or without reboot based on the type of job created.
OUT	MessageID	String	Error MessageID is returned If the method fails to execute.
OUT	Message	String	Error Message in English corresponding to MessageID is returned If the method fails to execute.
OUT	MessageArguments[]	String	Substitution variables for dynamic error messages

1007

## 1008 8.25 DCIM\_RAIDService.UnBlinkTarget()

1009 This feature will be implemented in WSMAN as method on the central class DCIM\_RAIDService.

1010 The UnblinkTarget () method is used to stop blinking the light present on the physical disk represented by the Target FQDD.

1012 The method is real time, blink cannot be scheduled as part of a job.

### 1013 DCIM\_RAIDService.UnblinkTarget() Method: Return Code Values

Value	Description
0	Request was successfully executed.
2	Error occurred

### 1014 DCIM\_RAIDService.UnblinkTarget() Method: Standard Messages

MessageID (OUT parameter)	Message
STOR003	Missing parameter
STOR004	Invalid parameter value
STOR006	General failure
STOR007	Resource Allocation Failure
STOR072	iDRAC Service Module (ISM) is either not present or not running on the server OS

### 1015 DCIM\_RAIDService.UnblinkTarget() Method: Parameters

Qualifiers	Name	Type	Description/Values
IN, REQ	Target	string	FQDD of Physical disk or Virtual Disk

Qualifiers	Name	Type	Description/Values
OUT	RebootRequired	uint8	A value of “Yes” means a reboot is required to set this value, and a value of “No” means a reboot is not required to set this value . Here the value should be 0. “Optional” means it can be set with or without reboot based on the type of job created.
OUT	MessageID	string	Error MessageID is returned If the method fails to execute.
OUT	Message	string	Error Message in English corresponding to MessageID is returned If the method fails to execute.
OUT	MessageArguments[]	string	Substitution variables for dynamic error messages

## 1016 8.26 DCIM\_RAIDService.CheckConsistency ()

### 1017 DCIM\_RAIDService.CheckConsistency() Method: Return Code Values

Value	Description
0	Request was successfully executed.
2	Error occurred

### 1018 DCIM\_RAIDService.CheckConsistency () Method: Standard Messages

MessageID(OUT parameter)	Message
STOR003	Missing parameter
STOR004	Invalid parameter value
STOR006	General failure
STOR007	Resource Allocation Failure
STOR009	Physical disk FQDD did not identify a valid physical disk for the operation

1019

### 1020 DCIM\_RAIDService.CheckConsistency() Method: Parameters

Qualifiers	Name	Type	Description/Values
IN, REQ	Target	String	FQDD of target device ( Virtual disk )
OUT	RebootRequired	String	A value of “Yes” means a reboot is required to set this value, and a value of “No” means a reboot is not required to set this value
OUT	MessageID	String	Error MessageID is returned If the method fails to execute.
OUT	Message	String	Error Message in English corresponding to MessageID is returned If the method fails to execute.

Qualifiers	Name	Type	Description/Values
OUT	MessageArguments[]	String	Substitution variables for dynamic error messages

## 1021 8.27 DCIM\_RAIDService.CancelCheckConsistency ()

### 1022 DCIM\_RAIDService.CancelCheckConsistency() Method: Return Code Values

Value	Description
0	Request was successfully executed.
2	Error occurred

### 1023 DCIM\_RAIDService.CancelCheckConsistency () Method: Standard Messages

MessageID(OUT parameter)	Message
STOR003	Missing parameter
STOR004	Invalid parameter value
STOR006	General failure
STOR007	Resource Allocation Failure
STOR009	Physical disk FQDD did not identify a valid physical disk for the operation

1024

### 1025 DCIM\_RAIDService. CancelCheckConsistency () Method: Parameters

Qualifiers	Name	Type	Description/Values
IN, REQ	Target	String	FQDD of target device ( Virtual Disk )
OUT	RebootRequired	String	A value of "Yes" means a reboot is required to set this value, and a value of "No" means a reboot is not required to set this value . Here the value should be 0. "Optional" means it can be set with or with out reboot based on the type of job created.
OUT	MessageID	String	Error MessageID is returned If the method fails to execute.
OUT	Message	String	Error Message in English corresponding to MessageID is returned If the method fails to execute.
OUT	MessageArguments[]	String	Substitution variables for dynamic error messages

## 1026 8.28 DCIM\_RAIDService.StartPatrolRead ()

1027 StartPatrolRead() Method is used to Start the Patrol Read Operation Manually.

### 1028 DCIM\_RAIDService.StartPatrolRead() Method : Return Code values .



Value	Description
0	Request was successfully executed.
2	Error occurred

1029

#### DCIM\_RAIDService. StartPatrolRead () Method: Standard Messages

MessageID(OUT parameter)	Message
STOR003	Missing parameter
STOR004	Invalid parameter value
STOR006	General failure
STOR007	Resource Allocation Failure
STOR009	Physical disk FQDD did not identify a valid physical disk for the operation
STOR077	Unable to change Patrol Read State since Patrol Read Mode is not set to Manual

1030

1031

#### DCIM\_RAIDService. StartPatrolRead () Method: Parameters

Qualifiers	Name	Type	Description/Values
IN, REQ	Target	String	FQDD of RAID Controller device.
OUT	RebootRequired	String	A value of "Yes" means a reboot is required to set this value, and a value of "No" means a reboot is not required to set this value . Here the value should be 0. "Optional" means it can be set with or with out reboot based on the type of job created.
OUT	MessageID	String	Error MessageID is returned If the method fails to execute.
OUT	Message	String	Error Message in English corresponding to MessageID is returned If the method fails to execute.
OUT	MessageArguments[]	String	Substitution variables for dynamic error messages

1032

## 8.29 DCIM\_RAIDService.StopPatrolRead ()

1033

StopPatrolRead() Method is used to Stop the Patrol Read Operation Manually.

1034

#### DCIM\_RAIDService.StopPatrolRead() Method : Return Code values .

Value	Description
0	Request was successfully executed.
2	Error occurred

1035

#### DCIM\_RAIDService. StopPatrolRead () Method: Standard Messages

MessageID(OUT parameter)	Message
STOR003	Missing parameter
STOR004	Invalid parameter value
STOR006	General failure

MessageID(OUT parameter)	Message
STOR007	Resource Allocation Failure
STOR009	Physical disk FQDD did not identify a valid physical disk for the operation
STOR077	Unable to change Patrol Read State since Patrol Read Mode is not set to Manual

1036

1037

#### DCIM\_RAIDService. StopPatrolRead () Method: Parameters

Qualifiers	Name	Type	Description/Values
IN, REQ	Target	String	FQDD of RAID Controller device.
OUT	RebootRequired	String	A value of "Yes" means a reboot is required to set this value, and a value of "No" means a reboot is not required to set this value . Here the value should be 0. "Optional" means it can be set with or with out reboot based on the type of job created.
OUT	MessageID	String	Error MessageID is returned If the method fails to execute.
OUT	Message	String	Error Message in English corresponding to MessageID is returned If the method fails to execute.
OUT	MessageArguments[]	String	Substitution variables for dynamic error messages

1038

### 1039 8.30 DCIM\_RAIDService.SecureErase ()

1040 The Secure Erase operation or full initialization on a PCIe SSD overwrites all blocks in an  
1041 encrypted way and all the data on the PCIe SSD device will be permanently lost.

1042 The CreateTargetedConfigJob () method is used to apply the pending values set by different  
1043 methods under DCIM\_RAIDService class

1044

#### DCIM\_RAIDService. SecureErase() Method: Return Code Values

Value	Description
0	Request was successfully executed.
2	Error occurred

1045

1046

#### DCIM\_RAIDService . SecureErase () Method: Standard Messages

MessageID (OUT parameter)	Message
STOR003	Missing parameter
STOR004	Invalid parameter value
STOR006	General failure

MessageID (OUT parameter)	Message
STOR007	Resource Allocation Failure
STOR073	The iDRAC Service Module version present on the server OS does not support the requested PCIe SSD (NVMe) device operation

1047

1048

**DCIM\_RAIDService . SecureErase () Method: Parameters**

Qualifiers	Name	Type	Description/Values
IN, REQ	Target	String	FQDD of target device (Physical Disk)
OUT	RebootRequired	string	A value of “Yes” means a reboot is required to set this value, and a value of “No” means a reboot is not required to set this value . Here the value should be 0. “Optional” means it can be set with or with out reboot based on the type of job created.
OUT	MessageID	String	Error MessageID is returned If the method fails to execute.
OUT	Message	String	Error Message in English corresponding to MessageID is returned If the method fails to execute.
OUT	MessageArguments[]	string	Substitution variables for dynamic error messages

### 1049 8.31 DCIM\_RAIDService.ExportLog ()

1050 The ExportLog () method is used to export the SSD's Debug Log to a remote share.

1051 On successful completion of the method, a JobID is returned to the user.

1052 The CreateTargetedConfigJob () method is used to apply the pending values set by different methods  
1053 under DCIM\_RAIDService class. The user can enumerate “DCIM\_LifecycleJob” class and monitor the  
1054 status of the Job. Once the Job has successfully completed, the TTY log can found on the share location.

1055 **Table 11 – DCIM\_RAIDService.ExportLog() Method: Return Code Values**

Value	Description
2	Error occurred
4096	Job started: REF returned to started CIM_ConcreteJob

1056

**Table 12 – DCIM\_RAIDService.ExportLog () Method: Standard Messages**

MessageID(OUT parameter)	Message
STOR003	Missing parameter

MessageID(OUT parameter)	Message
STOR004	Invalid parameter value
STOR006	General failure
STOR007	Resource Allocation Failure
STOR013	One or more Storage device(s) not in a state where the operation can be completed
LC023	Cannot access network share
LC030	Filepath is a read-only file system
STORXXX	An instance of ExportLog is already running on the specified target
STOR058	This operation is not supported on this device.
JCP017	Maximum job limit reached, cannot create new jobs
JCP018	Backup Job is running, cannot create new jobs until the existing Backup job is completed or is cancelled

1057

**Table 13 – DCIM\_RAIDService.ExportLog () Method: Parameters**

Qualifiers	Name	Type	Description/Values
IN, REQ	Target	String	FQDD of target device
IN, REQ	IPAddress	String	The IP address of the target export server.
IN, REQ	ShareName	String	The directory path to the mount point.
IN, REQ	FileName	String	The target output file name.
IN	ShareType	uint16	Type of share: NFS=0, CIFS=2
IN	Username	String	User name for the target export server.
IN	Password	String	Password for the target export server.
IN	Workgroup	String	The applicable workgroup.
			[1]
OUT	MessageID	String	Error Message ID- can be used to index into Dell Message registry files.
OUT	Message	String	Error Message in English corresponding to MessageID is returned if the method fails to execute.
OUT	MessageArguments[]	String	Substitution variables for dynamic error messages.

1058

### **8.32 DCIM\_RAIDService.PrepareToRemove()**

1059

PCIe SSDs support hot plug of devices allowing the user to add or remove a device without halting or rebooting the system in which the devices are installed.

1060

1061 When a PCIe SSDs device is getting removed, to prevent data loss, it is mandatory to use the prepare to  
1062 remove operation before physically removing a device.

1063 The CreateTargetedConfigJob() method is used to apply the pending values set by different methods  
1064 under DCIM\_RAIDService class

1065 **DCIM\_RAIDService.PrepareToRemove() Method: Return Code Values**

Value	Description
0	Request was successfully executed.
2	Error occurred

1066

1067 **DCIM\_RAIDService .PrepareToRemove() Method: Standard Messages**

MessageID (OUT parameter)	Message
STOR003	Missing parameter
STOR004	Invalid parameter value
STOR006	General failure
STOR007	Resource Allocation Failure

1068

1069

1070 **DCIM\_RAIDService . PrepareToRemove () Method: Parameters**

Qualifiers	Name	Type	Description/Values
IN, REQ	Target	String	FQDD of target device (Physical Disk)
OUT	RebootRequired	string	A value of "Yes" means a reboot is required to set this value, and a value of "No" means a reboot is not required to set this value . Here the value should be 0. "Optional" means it can be set with or with out reboot based on the type of job created.
OUT	MessageID	String	Error MessageID is returned If the method fails to execute.
OUT	Message	String	Error Message in English corresponding to MessageID is returned If the method fails to execute.
OUT	MessageArguments[]	string	Substitution variables for dynamic error messages

1071

1072 **9 Use Cases**1073 See *Lifecycle Controller (LC) Integration Best Practices Guide*.1074 **10 CIM Elements**

1075 No additional details specified.

1076 **11 Privilege and License Requirement**

1077 The following table lists the privilege and license requirements for the listed operations. For the detailed  
 1078 explanation of the privileges and licenses, refer to the Dell WSMAN Licenses and Privileges specification.

1079 **Table 89 – Privilege and License Requirements**

Class and Method	Operation	User Privilege Required	License Required
DCIM_ControllerView	ENUMERATE, GET	Login	LM_REMOTE_ASSET_INVENTORY
DCIM_EnclosureView	ENUMERATE, GET	Login	LM_REMOTE_ASSET_INVENTORY
DCIM_PhysicalDiskView	ENUMERATE, GET	Login	LM_REMOTE_ASSET_INVENTORY
DCIM_VirtualDiskView	ENUMERATE, GET	Login	LM_REMOTE_ASSET_INVENTORY
DCIM_RAIDInteger	ENUMERATE, GET	Login	LM_REMOTE_CONFIGURATION
DCIM_RAIDString	ENUMERATE, GET	Login	LM_REMOTE_CONFIGURATION
DCIM_RAIDEnumeration	ENUMERATE, GET	Login	LM_REMOTE_CONFIGURATION
DCIM_ControllerBatteryView	ENUMERATE, GET	Login	LM_REMOTE_ASSET_INVENTORY
DCIM_EnclosureEMMView	ENUMERATE, GET	Login	LM_REMOTE_ASSET_INVENTORY
DCIM_EnclosureFanSensor	ENUMERATE, GET	Login	LM_REMOTE_ASSET_INVENTORY
DCIM_EnclosurePSUView	ENUMERATE, GET	Login	LM_REMOTE_ASSET_INVENTORY
DCIM_EnclosureTemperatureSensor	ENUMERATE, GET	Login	LM_REMOTE_ASSET_INVENTORY
DCIM_RAIDService	ENUMERATE, GET	Login	NONE
DCIM_RAIDService. CreateTargetedConfigJob()	INVOKE	Login, System Control	LM_REMOTE_CONFIGURATION
DCIM_RAIDService. DeletePendingConfiguration()	INVOKE	Login, System Control	LM_REMOTE_CONFIGURATION
DCIM_RAIDService.ResetConfig()	INVOKE	Login, System	LM_REMOTE_CONFIGURATION

Class and Method	Operation	User Privilege Required	License Required
		Control	
DCIM_RAIDService. CreateVirtualDisk()	INVOKE	Login, System Control	LM_REMOTE_CONFIGURATION
DCIM_RAIDService. ClearForeignConfig()	INVOKE	Login, System Control	LM_REMOTE_CONFIGURATION
DCIM_RAIDService. GetAvailableDisks()	INVOKE	Login	LM_REMOTE_CONFIGURATION
DCIM_RAIDService. GetRAIDLevels()	INVOKE	Login	LM_REMOTE_CONFIGURATION
DCIM_RAIDService. GetDHSDisks()	INVOKE	Login	LM_REMOTE_CONFIGURATION
DCIM_RAIDService. CheckVDValues()	INVOKE	Login	LM_REMOTE_CONFIGURATION
DCIM_RAIDService.AssignSpare()	INVOKE	Login, System Control	LM_REMOTE_CONFIGURATION
DCIM_RAIDService.InitializeVirtualDisk()	INVOKE	Login, System Control	LM_REMOTE_CONFIGURATION
DCIM_RAIDService. DeleteVirtualDisk()	INVOKE	Login, System Control	LM_REMOTE_CONFIGURATION
DCIM_RAIDService. LockVirtualDisk()	INVOKE	Login, System Control	LM_REMOTE_CONFIGURATION
DCIM_RAIDService. SetControllerKey()	INVOKE	Login, System Control	LM_REMOTE_CONFIGURATION
DCIM_RAIDService.SetAttribute()	INVOKE	Login, System Control	LM_REMOTE_CONFIGURATION
DCIM_RAIDService.SetAttributes()	INVOKE	Login, System Control	LM_REMOTE_CONFIGURATION
DCIM_RegisteredProfile. EnableControllerEncryption()	INVOKE	Login, System Control	LM_REMOTE_CONFIGURATION
DCIM_RegisteredProfile. RemoveControllerKey()	INVOKE	Login, System Control	LM_REMOTE_CONFIGURATION
DCIM_RegisteredProfile.ReKey()	INVOKE	Login, System Control	LM_REMOTE_CONFIGURATION
DCIM_RegisteredProfile. UnassignSpare()	INVOKE	Login, System Control	LM_REMOTE_CONFIGURATION
DCIM_RegisteredProfile. ConvertToRAID()	INVOKE	Login, System Control	LM_REMOTE_CONFIGURATION
DCIM_RegisteredProfile. ConvertToNonRAID()	INVOKE	Login, System Control	LM_REMOTE_CONFIGURATION
DCIM_LCRegisteredProfile	ENUMERATE, GET	Login	None.
DCIM_LCElementConformsToProfile	ENUMERATE, GET	Login	None.

Class and Method	Operation	User Privilege Required	License Required
DCIM_RAIDService.ImportConfig()	INVOKE	Login, System Control	LM_REMOTE_CONFIGURATION
DCIM_RAIDService.BlinkTarget()	INVOKE	Login, System Control	LM_REMOTE_CONFIGURATION
DCIM_RAIDService.UnBlinkTarget ()	INVOKE	Login, System Control	LM_REMOTE_CONFIGURATION
DCIM_RAIDService.CheckConsistency()	INVOKE	Login, System Control	LM_REMOTE_CONFIGURATION
DCIM_RAIDService.CancelCheckConsistency()	INVOKE	Login, System Control	LM_REMOTE_CONFIGURATION
DCIM_RAIDService.StartPatrolRead()	INVOKE	Login, System Control	LM_REMOTE_CONFIGURATION
DCIM_RAIDService.StopPatrolRead()	INVOKE	Login, System Control	LM_REMOTE_CONFIGURATION
DCIM_RAIDService.SecureErase()	INVOKE	Login, System Control	LM_REMOTE_CONFIGURATION
DCIM_RAIDService.ExportLog()	INVOKE	Login, System Control	LM_REMOTE_CONFIGURATION
DCIM_RAIDService.PrepareToRemove()	INVOKE	Login, System Control	LM_REMOTE_CONFIGURATION



## ANNEX A (informative)

### Change Log

Version	Date	Description
1.3.0		Added the InitializeVirtualDisk() method Added RAIDSupportedInitTypes as DCIM_RAIDEnumeration attribute instance. Added the PendingOperations property to the DCIM_VirtualDiskView. Added LC062 error message to the SetAttribute(), SetAttributes(), CreateTargetedConfigJob(), and DeletePendingConfiguration() methods.
1.4.0	3/11/13	Section 7.1.1.3 DCIM_ControllerView properties table has updated.
1.5.0	13 <sup>th</sup> Dec 2013	PCIeSSD Classes and Method has been added .
1.6.0	11 <sup>th</sup> July 2014	New Raid attributes has been added . Updated the Error codes .
1.6.0	7/15/2014	Added RT CEM capabilities