

1 **Lifecycle Controller**
2 **(LC) Management Profile**

3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23 **Document Number: DCIM1039**
24 **Document Type: Specification**
25 **Document Status: Published**
26 **Document Language: E**
27 **Date: 2015-04-0619**
28
29
30

Version: 1.9.1



31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52 THIS PROFILE IS FOR INFORMATIONAL PURPOSES ONLY, AND MAY CONTAIN TYPOGRAPHICAL
53 ERRORS AND TECHNICAL INACCURACIES. THE CONTENT IS PROVIDED AS IS, WITHOUT
54 EXPRESS OR IMPLIED WARRANTIES OF ANY KIND. ABSENT A SEPARATE AGREEMENT
55 BETWEEN YOU AND DELL™ WITH REGARD TO FEEDBACK TO DELL ON THIS PROFILE
56 SPECIFICATION, YOU AGREE ANY FEEDBACK YOU PROVIDE TO DELL REGARDING THIS
57 PROFILE SPECIFICATION WILL BE OWNED AND CAN BE FREELY USED BY DELL.
58
59 © 2011 - 2012 Dell Inc. All rights reserved. Reproduction in any manner whatsoever without the express
60 written permission of Dell, Inc. is strictly forbidden. For more information, contact Dell.
61
62 *Dell* and the *DELL* logo are trademarks of Dell Inc. *Microsoft* and *WinRM* are either trademarks or
63 registered trademarks of Microsoft Corporation in the United States and/or other countries. Other
64 trademarks and trade names may be used in this document to refer to either the entities claiming the
65 marks and names or their products. Dell disclaims proprietary interest in the marks and names of others.
66

CONTENTS

67			
68	1	Scope	7
69	2	Normative References.....	7
70	3	Terms and Definitions	7
71	4	Symbols and Abbreviated Terms	9
72	5	Synopsis	9
73	6	Description	10
74	7	Implementation Requirements	11
75	7.1	DCIM_LCService	11
76	7.2	DCIM_LCEnumeration.....	12
77	7.3	DCIM_LCString.....	15
78	7.4	Lifecycle Controller (LC) Management Registration – DCIM_LCRegistered Profile	18
79	8	Methods.....	19
80	8.1	DCIM_LCService.SetAttribute()	20
81	8.2	DCIM_LCService.SetAttributes()	21
82	8.3	DCIM_LCService.CreateConfigJob()	24
83	8.4	DCIM_LCService.ReInitiateDHS()	25
84	8.5	DCIM_LCService.ReInitiateAutoDiscovery()	27
85	8.6	DCIM_LCService.ClearProvisioningServer()	30
86	8.7	DCIM_LCService.DownloadServerPublicKey()	30
87	8.8	DCIM_LCService.DownloadClientCerts()	31
88	8.9	DCIM_LCService.DeleteAutoDiscoveryClientCerts ()	32
89	8.10	DCIM_LCService.SetCertificateAndPrivateKey()	34
90	8.11	DCIM_LCService.SetPublicCertificate()	35
91	8.12	DCIM_LCService.DeleteAutoDiscoveryServerPublicKey()	35
92	8.13	DCIM_LCService.InsertCommentInLCLog()	36
93	8.14	DCIM_LCService.ExportLCLog()	37
94	8.15	DCIM_LCService.ExportCompleteLCLog()	38
95	8.16	DCIM_LCService.ExportHWInventory()	40
96	8.17	DCIM_LCService.ExportFactoryConfiguration()	42
97	8.18	DCIM_LCService.ExportSystemConfiguration()	44
98	8.19	DCIM_LCService.ImportSystemConfiguration()	46
99	8.20	DCIM_LCService.LCWipe()	48
100	8.21	DCIM_LCService.TestNetworkShare()	49
101	8.22	DCIM_LCService.BackupImage()	50
102	8.23	DCIM_LCService.RestoreImage()	52
103	8.24	DCIM_LCService.GetRSStatus()	54
104	8.25	DCIM_LCService.GetRemoteServicesAPIStatus ()	55
105	8.26	DCIM_LCService.ExportCertificate()	57
106	8.27	DCIM_LCService.ImportSystemConfigurationPreview()	58
107	8.28	DCIM_LCService. RunePSADiagnostics ()	60
108	8.29	DCIM_LCService. ExportePSADiagnosticsResult ()	62
109	8.30	DCIM_LCService. ExportTechSupportReport ()	63
110	8.31	DCIM_LCService. UpdateOSAppHealthData ()	64
111	8.32	DCIM_LCService. SystemErase()	65
112	8.33	DCIM_LCService. SetBackupSchedule()	67
113	8.34	DCIM_LCService. GetBackupSchedule()	68
114	8.35	DCIM_LCService. ClearBackupSchedule()	70
115	9	Use Cases.....	70
116	10	CIM Elements.....	71
117	11	Privilege and License Requirement	71
118		ANNEX A (informative) Change Log.....	75
119			

120	Figures	
121	Figure 1 – LC Management Profile: Class Diagram	10
122		
123	Tables	
124	Table 1 – Related Profiles.....	10
125	Table 2 – Class Requirements: Power State Management Profile.....	11
126	Table 3 – DCIM_LCService - Operations	12
127	Table 4 – DCIM_LCService - Properties.....	12
128	Table 5 – DCIM_LCEnumeration - Operations	12
129	Table 6 – Class: DCIM_LCEnumeration.....	13
130	Table 7 – DCIM_LCEnumeration Attributes.....	13
131	Table 8 – DCIM_LCString - Operations	15
132	Table 9 – Class: DCIM_LCString	17
133	Table 10 – DCIM_LCString Attributes.....	18
134	Table 11 – DCIM_LCRegisteredProfile - Operations.....	19
135	Table 12 – Class: DCIM_LCRegisteredProfile.....	19
136	Table 13 – DCIM_LCService.SetAttribute() Method: Return Code Values	20
137	Table 14 – DCIM_LCService.SetAttribute() Method: Parameters	20
138	Table 15 – DCIM_LCService.SetAttribute() Method: Standard Messages.....	21
139	Table 16 – DCIM_LCService.SetAttributes() Method: Return Code Values	22
140	Table 17 – DCIM_LCService.SetAttributes() Method: Parameters	22
141	Table 18 – DCIM_LCService.SetAttributes() Method: Standard Messages	23
142	Table 19 – DCIM_LCService.CreateConfigJob() Method: Return Code Values	24
143	Table 20 – DCIM_LCService.CreateConfigJob() Method: Parameters	24
144	Table 21 – DCIM_LCService.CreateConfigJob() Method: Standard Messages	24
145	Table 22 – DCIM_LCService.RelInitiateDHS() Method: Return Code Values	26
146	Table 23 – DCIM_LCService.RelInitiateDHS() Method: Parameters	26
147	Table 24 – DCIM_LCService.RelInitiateDHS() Method: Standard Messages.....	26
148	Table 25 – DCIM_LCService.RelInitiateAutoDiscovery() Method: Return Code Values.....	28
149	Table 26 – DCIM_LCService.RelInitiateAutoDiscovery() Method: Parameters	28
150	Table 27 – DCIM_LCService.RelInitiateAutoDiscovery() Method: Standard Messages	29
151	Table 28 – DCIM_LCService.ClearProvisioningServer() Method: Return Code Values	30
152	Table 29 – DCIM_LCService.ClearProvisioningServer() Method: Parameters	30
153	Table 30 – DCIM_LCService.ClearProvisioningServer() Method: Standard Messages.....	30
154	Table 31 – DCIM_LCService.DownloadServerPublicKey() Method: Return Code Values	30
155	Table 32 – DCIM_LCService.DownloadServerPublicKey() Method: Parameters	30
156	Table 33 – DCIM_LCService.DownloadServerPublicKey() Method: Standard Messages.....	31
157	Table 34 – DCIM_LCService.DownloadClientCerts() Method: Return Code Values	32
158	Table 35 – DCIM_LCService.DownloadClientCerts() Method: Parameters	32
159	Table 36 – DCIM_LCService.DownloadClientCerts() Method: Standard Messages.....	32
160	Table 37 – DCIM_LCService.DeleteAutoDiscoveryClientCerts() Method: Return Code Values	33
161	Table 38 – DCIM_LCService.DeleteAutoDiscoveryClientCerts() Method: Parameters	33
162	Table 39 – DCIM_LCService.DeleteAutoDiscoveryClientCerts() Method: Standard Messages	33
163	Table 40 – DCIM_LCService.SetCertificateAndPrivateKey() Method: Return Code Values	34
164	Table 41 – DCIM_LCService.SetCertificateAndPrivateKey() Method: Parameters	34
165	Table 42 – DCIM_LCService.SetCertificateAndPrivateKey() Method: Standard Messages	34

166	Table 43 – DCIM_LCService.SetPublicCertificate() Method: Return Code Values.....	35
167	Table 44 – DCIM_LCService.SetPublicCertificate() Method: Parameters	35
168	Table 45 – DCIM_LCService.SetPublicCertificate() Method: Standard Messages	35
169	Table 46 – DCIM_LCService.DeleteAutoDiscoveryServerPublicKey() Method: Return Code Values.....	36
170	Table 47 – DCIM_LCService.DeleteAutoDiscoveryServerPublicKey() Method: Parameters	36
171	Table 48 – DCIM_LCService.DeleteAutoDiscoveryServerPublicKey() Method: Standard Messages	36
172	Table 49 – DCIM_LCService.InsertCommentInLCLog() Method: Return Code Values.....	36
173	Table 50 – DCIM_LCService.InsertCommentInLCLog() Method: Parameters.....	36
174	Table 51 – DCIM_LCService.InsertCommentInLCLog() Method: Standard Messages	37
175	Table 52 – DCIM_LCService.ExportLCLog() Method: Return Code Values	37
176	Table 53 – DCIM_LCService.ExportLCLog() Method: Parameters	37
177	Table 54 – DCIM_LCService.ExportLCLog() Method: Standard Messages	38
178	Table 55 – DCIM_LCService.ExportCompleteLCLog() Method: Return Code Values.....	39
179	Table 56 – DCIM_LCService.ExportCompleteLCLog() Method: Parameters	39
180	Table 57 – DCIM_LCService.ExportCompleteLCLog() Method: Standard Messages	40
181	Table 58 – DCIM_LCService.ExportHWInventory() Method: Return Code Values	41
182	Table 59 – DCIM_LCService.ExportHWInventory() Method: Parameters.....	41
183	Table 60 – DCIM_LCService.ExportHWInventory() Method: Standard Messages	41
184	Table 61 – DCIM_LCService.ExportFactoryConfiguration() Method: Return Code Values	43
185	Table 62 – DCIM_LCService.ExportFactoryConfiguration() Method: Parameters	43
186	Table 63 – DCIM_LCService.ExportFactoryConfiguration() Method: Standard Messages.....	43
187	Table 64 – DCIM_LCService.ExportSystemConfiguration() Method: Return Code Values	45
188	Table 65 – DCIM_LCService.ExportSystemConfiguration() Method: Parameters	45
189	Table 66 – DCIM_LCService.ExportSystemConfiguration() Method: Standard Messages.....	45
190	Table 67 – DCIM_LCService.ImportSystemConfiguration() Method: Return Code Values	47
191	Table 68 – DCIM_LCService.ImportSystemConfiguration() Method: Parameters	47
192	Table 69 – DCIM_LCService.ImportSystemConfiguration() Method: Standard Messages.....	47
193	Table 70 – DCIM_LCService.LCWipe() Method: Return Code Values	49
194	Table 71 – DCIM_LCService.LCWipe() Method: Parameters	49
195	Table 72 - DCIM_LCService.LCWipe() Method: Standard Messages	49
196	Table 73 – DCIM_LCService.TestNetworkShare() Method: Return Code Values	49
197	Table 74 – DCIM_LCService.TestNetworkShare() Method: Parameters	50
198	Table 75 – DCIM_LCService.TestNetworkShare() Method: Standard Messages.....	50
199	Table 76 – DCIM_LCService.BackupImage() Method: Return Code Values	51
200	Table 77 – DCIM_LCService.BackupImage() Method: Return Code Values	52
201	Table 78 – DCIM_LCService.BackupImage() Method: Standard Messages	52
202	Table 79 – DCIM_LCService.RestoreImage() Method: Return Code Values	53
203	Table 80 – DCIM_LCService.RestoreImage() Method: Parameters	53
204	Table 81 – DCIM_LCService.RestoreImage() Method: Standard Messages.....	54
205	Table 82 – DCIM_LCService.GetRSStatus() Method: Return Code Values	55
206	Table 83 – DCIM_LCService.GetRSStatus() Method: Parameters	55
207	Table 84 – DCIM_LCService.GetRSStatus() Method: Standard Messages	55
208	Table 85 – DCIM_LCService.GetRemoteServicesAPIStatus() Method: Return Code Values.....	56
209	Table 86 – DCIM_LCService.GetRemoteServicesAPIStatus() Method: Parameters.....	56
210	Table 87 – DCIM_LCService.GetRemoteServicesAPIStatus() Method: Standard Messages	56
211	Table 88 – DCIM_LCService.ExportCertificate() Method: Return Code Values	57
212	Table 89 – DCIM_LCService.ExportCertificate() Method: Parameters	57
213	Table 90 – DCIM_LCService.ExportCertificate() Method: Standard Messages	57

214	Table 91 – DCIM_LCService.ImportSystemConfigurationPreview() Method: Return Code Values	59
215	Table 92 – DCIM_LCService.ImportSystemConfigurationPreview() Method: Parameters	59
216	Table 93 – DCIM_LCService.ImportSystemConfigurationPreview() Method: Standard Messages.....	59
217	Table 94 – DCIM_LCService. RunePSADiagnostics () Method: Return Code Values.....	61
218	Table 95 – DCIM_LCService. RunePSADiagnostics () Method: Parameters	61
219	Table 96 – DCIM_LCService. RunePSADiagnostics () Method: Standard Messages	62
220	Table 97 – DCIM_LCService. ExportePSADiagnosticsResult() Method: Return Code Values	63
221	Table 98 – DCIM_LCService. ExportePSADiagnosticsResult() Method: Parameters	63
222	Table 99 – DCIM_LCService. ExportePSADiagnosticsResult() Method: Standard Messages	63
223	Table 100 – DCIM_LCService. ExportTechSupportReport() Method: Return Code Values	64
224	Table 101 – DCIM_LCService. ExportTechSupportReport () Method: Parameters	64
225	Table 102 – DCIM_LCService. ExportTechSupportReport () Method: Standard Messages	64
226	Table 103 – DCIM_LCService. UpdateOSAppHealthData() Method: Return Code Values	65
227	Table 104 – DCIM_LCService. UpdateOSAppHealthData () Method: Parameters.....	65
228	Table 105 – DCIM_LCService. UpdateOSAppHealthData () Method: Standard Messages	65
229	Table 106 - DCIM_ LCService : SystemErase() Method: Return code values	65
230	Table 107- DCIM_ LCService : SystemErase() Method: Parameters	66
231	Table 108 – DCIM_LCService. SystemErase () Method: Standard Messages	67
232	Table 109 – DCIM_LCService. SetBackupSchedule() Method: Return Code Values	67
233	Table 110 – DCIM_LCService. SetBackupSchedule() Method: Parameters	68
234	Table 111 – DCIM_LCService. SetBackupSchedule() Method: Standard Messages	68
235	Table 112 – DCIM_LCService.GetBackupSchedule() Method: Return Code Values	69
236	Table 113 – DCIM_LCService.GetBackupSchedule() Method: Parameters	69
237	Table 114 – DCIM_LCService. GetBackupSchedule() Method: Standard Messages.....	70
238	Table 115 – DCIM_LCService. ClearBackupSchedule() Method: Return Code Values	70
239	Table 116 – DCIM_LCService. ClearBackupSchedule() Method: Parameters	70
240	Table 117 – DCIM_LCService. ClearBackupSchedule() Method: Standard Messages.....	70
241	Table 118 – Privilege and License Requirements	71

242

243

Lifecycle Controller (LC) Management

244

1 Scope

245
246
247
248

The Lifecycle Controller (LC) Management Profile describes the management of the Dell Lifecycle Controller and its configuration attributes. The profile details certificate management and the LC configuration services that are necessary for the LC's proper functionality. The LC configuration attributes are modeled as attribute collections for an individual LC; typically there is one LC per system platform.

249

2 Normative References

250

Refer to the following documents for more information.

251
252

NOTE: For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments) applies.

253
254
255
256
257
258
259
260
261
262
263
264
265
266
267
268
269
270
271

- DMTF DSP1033, *Profile Registration Profile 1.0*
- DMTF DSP1061, *BIOS Management Profile 1.0*
- *Dell Job Control Profile 1.0.0*
- DMTF DSP0004, *CIM Infrastructure Specification 2.3*
- *Dell Lifecycle Controller Best Practices Guide 1.0*,
http://en.community.dell.com/techcenter/extras/m/white_papers/20066173.aspx
- *Dell WSMAN Licenses and Privileges 1.0*
- ISO/IEC Directives, Part 2, *Rules for the structure and drafting of International Standards*,
<http://isotc.iso.org/livelink/livelink.exe?func=ll&objId=4230456&objAction=browse&sort=subtype>
- Unified Modeling Language (UML) from the Open Management Group (OMG),
<http://www.uml.org>
- Dell Tech Center MOF Library: <http://www.delltechcenter.com/page/DCIM.Library.MOF>
- Related Managed Object Format (MOF) files:
 - DCIM_LCAttribute.mof
 - DCIM_LCElementConformsToProfile.mof
 - DCIM_LCEnumeration.mof
 - DCIM_LCRegisteredProfile.mof
 - DCIM_LCService.mof
 - DCIM_LCString.mof

272

3 Terms and Definitions

273

For the purposes of this document, the following terms and definitions apply.

- 274 **3.1**
- 275 **Conditional** – Indicates requirements to be followed strictly in order to conform to the document when the
276 specified conditions are met.
- 277 **3.2**
- 278 **Mandatory** – Indicates requirements to be followed strictly in order to conform to the document and from
279 which no deviation is permitted.
- 280 **3.3**
- 281 **May** – Indicates a course of action permissible within the limits of the document.
- 282 **3.4**
- 283 **Optional** – Indicates a course of action permissible within the limits of the document.
- 284 **3.5**
- 285 **can** – Used for statements of possibility and capability, whether material, physical, or causal.
- 286 **3.6**
- 287 **cannot** – Used for statements of possibility and capability, whether material, physical, or causal.
- 288 **3.7**
- 289 **need not** – Indicates a course of action permissible within the limits of the document.
- 290 **3.8**
- 291 **referencing profile** – Indicates a profile that owns the definition of this class and can include a reference
292 to this profile in its “Related Profiles” table.
- 293 **3.9**
- 294 **shall** – Indicates requirements to be followed strictly in order to conform to the document and from which
295 no deviation is permitted.

- 296 **3.10**
297 **shall not** – Indicates requirements to be followed strictly in order to conform to the document and from
298 which no deviation is permitted.
- 299 **3.11**
300 **should** – Indicates that among several possibilities, one is recommended as particularly suitable, without
301 mentioning or excluding others, or that a certain course of action is preferred but not necessarily required.
- 302 **3.12**
303 **should not** – Indicates that a certain possibility or course of action is deprecated but not prohibited
- 304 **3.13**
305 **FQDD** – Fully Qualified Device Descriptor is used to identify a particular component in a system.
- 306 **3.14**
307 **Interop Namespace** – Interop Namespace is where instrumentation instantiates classes to advertise its
308 capabilities for client discovery.
- 309 **3.15**
310 **Implementation Namespace** – Implementation Namespace is where instrumentation instantiates
311 classes relevant to executing core management tasks.
- 312 **3.16**
313 **ENUMERATE** – Refers to WS-MAN ENUMERATE operation as described in Section 8.2 of
314 DSP0226_V1.1 and Section 9.1 of DSP0227_V1.0
- 315 **3.17**
316 **GET** – Refers to WS-MAN GET operation as defined in Section 7.3 of DSP0226_V1.1 and Section 7.1
317 of DSP0227_V1.0

318 **4 Symbols and Abbreviated Terms**

- 319 **4.1**
320 **CIM** – Common Information Model
- 321 **4.2**
322 **LC** – Lifecycle Controller
- 323 **4.3**
324 **VD** – Virtual Disk

325 **5 Synopsis**

- 326 **Profile Name:** LC Management
- 327 **Version:** 1.6.0
- 328 **Organization:** DCIM
- 329 **CIM Schema Version:** 2.26 Experimental
- 330 **Central Class:** DCIM_LCService

331 **Scoping Class:** CIM_ComputerSystem

332 The LC Management Profile extends the management capability of the referencing profiles by adding the
333 capability to describe lifecycle controller (LC) through its attributes. Each DCIM_LCAttribute derived
334 instance represents an LC configuration-related attribute.

335 The DCIM_LCService class shall be the Central Class. The DCIM_ComputerSystem class shall be the
336 Scoping Class. The DCIM_LCService instance shall be the Central Instance. The
337 DCIM_ComputerSystem instance shall be the Scoping Instance.

338 Table 1 identifies profiles that are related to this profile.

339 **Table 1 – Related Profiles**


Profile Name	Organization	Version	Relationship
Profile Registration	DCIM	1.0	Reference

340 **6 Description**

341 The LC Management Profile describes the LC attribute configuration service and the attributes instances
342 that the service manages. The profile also describes the relationship of the LC attribute service to the Dell
343 profile version information.

344 Figure 1 represents the class schema for the Lifecycle Controller (LC) Management. The LC service in a
345 managed system is represented by the instance of the DCIM_LCService class. The LC attributes are
346 represented by the DCIM_LCAttribute class derivation: DCIM_LCEnumeration and DCIM_LCString
347 classes.

348 The LC Management Profile information is represented with the instance of the
349 DCIM_LCRegisteredProfile.

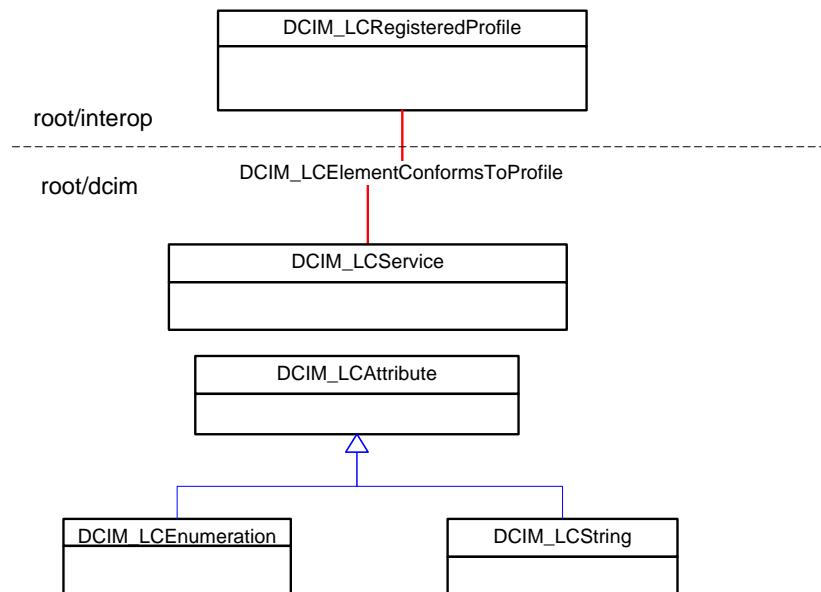

350

351 **Figure 1 – LC Management Profile: Class Diagram**

352 **7 Implementation Requirements**

353 This section describes the implementation of Dell LC Management.

354 **Table 2 – Class Requirements: Power State Management Profile**

Element Name	Requirement	Description
Classes		
DCIM_LCService	Mandatory	The class shall be implemented in the <i>Implementation Namespace</i> . See section 7.1.
DCIM_LCEnumeration	Mandatory	The class shall be implemented in the <i>Implementation Namespace</i> . See section 7.2.
DCIM_LCString	Mandatory	The class shall be implemented in the <i>Implementation Namespace</i> . See section 7.3.
DCIM_LCElementConformsToProfile	Mandatory	The class shall be implemented in both the <i>Interop</i> and <i>Implementation Namespaces</i> . See section 7.1 and 7.4.
DCIM_LCRegisteredProfile	Mandatory	The class shall be implemented in the <i>Interop Namespace</i> . See section 7.4.
Indications		
None defined in this profile		

355 **7.1 DCIM_LCService**

356 This section describes the implementation for the DCIM_LCService class.

357 This class is instantiated in the Implementation Namespace.

358 The DCIM_LCElementConformsToProfile association's ManagedElement property shall reference the
359 DCIM_LCService instance(s).

360 **7.1.1 Resource URIs for WinRM®**

361 The class Resource URI is:

362 "http://schemas.dell.com/wbem/wscim/1/cim-schema/2/DCIM_LCService?__cimnamespace=root/dcim"

363 The key properties are the SystemCreationClassName, CreationClassName, SystemName, Name

364 The instance Resource URI for DCIM_LCService instance is:

365 "http://schemas.dell.com/wbem/wscim/1/cim-schema/2/DCIM_LCService?__cimnamespace=root/dcim+SystemCreationClassName=DCIM_ComputerSystem+SystemName=DCIM:ComputerSystem+CreationClassName=DCIM_LCService+Name=DCIM:LCServ"

369 **7.1.2 Operations**

370 The following table lists the operations implemented on DCIM_LCService.

371 **Table 3 – DCIM_LCService - Operations**

Operation Name	Requirements	Required Input
Get	Mandatory	Instance URI
Enumerate	Mandatory	Class URI
Invoke	Mandatory	Instance URI and Method parameters

372

373 **7.1.3 Class Properties**

374 The following table lists the implemented properties for DCIM_LCService instance in a system. The
375 “Requirements” column shall denote whether the property is implemented (for requirement definitions,
376 see section 3.1, 3.2, and 3.4). The “Additional Requirements” column shall denote either possible values
377 for the property, or requirements on the value formulation.

378 **Table 4 – DCIM_LCService - Properties**

Property Name	Type	Requirement	Additional Requirement
CreationClassName	String	Mandatory	The property value shall be “DCIM_LCService”
Name	String	Mandatory	The property value shall be “DCIM:LCService”
ElementName	String	Mandatory	The property value shall be “LC Service”
SystemCreationClassName	String	Mandatory	The property value shall be “DCIM_ComputerSystem”
SystemName	String	Mandatory	The property value shall be “DCIM:ComputerSystem”

379 **7.2 DCIM_LCEnumeration**

380 This section describes the implementation for the DCIM_LCEnumeration class.

381 This class shall be instantiated in the Implementation Namespace.

382 **7.2.1 Resource URIs for WinRM®**

383 The class Resource URI shall be “http://schemas.dell.com/wbem/wscim/1/cim-schema/2/DCIM_LCEnumeration?__cimnamespace=root/dcim”

385 The key property shall be the InstanceID.

386 The instance Resource URI for DCIM_LCEnumeration instance shall be:
387 “http://schemas.dell.com/wbem/wscim/1/cim-schema/2/DCIM_LCEnumeration?__cimnamespace=root/dcim+InstanceId=<InstanceId>”

389 **7.2.2 Operations**

390 The following table lists the operations implemented on DCIM_LCEnumeration.

391 **Table 5 – DCIM_LCEnumeration - Operations**

Operation Name	Requirements	Required Input
Get	Mandatory	Instance URI
Enumerate	Mandatory	Class URI

DCIM_LCService.SetAttributte()	Mandatory	See section 8.1
DCIM_LCService.SetAttributes()	Mandatory	See section 8.2

392

393 **7.2.3 Class Properties**

394 The following table lists the implemented properties for DCIM_LCEnumeration instance representing an
 395 LC enumeration attribute. The “Requirements” column shall denote whether the property is implemented
 396 (for requirement definitions, see section 3). The “Additional Requirement” column shall denote either
 397 possible values for the property, or requirements on the value formulation.

398

Table 6 – Class: DCIM_LCEnumeration

Properties	Type	Requirement	Additional Requirements
InstanceId	string	Mandatory	The property value shall have a unique value.
AttributeName	String	Mandatory	The property value shall be from the “AttributeName” column in Table 7.
CurrentValue[]	string	Mandatory	The property value shall be one of the values in the “PossibleValues” column at the corresponding row in Table 7.
PendingValue[]	string	Mandatory	The property value shall be one of the values in the “PossibleValues” column at the corresponding row in Table 7.
DefaultValue[]	string	Mandatory	The property value shall represent the default value of the attribute and shall be one of the values in the “PossibleValues” column at the corresponding row in Table 7
IsReadOnly	boolean	Mandatory	The property value shall the value in the “IsReadOnly” column at the corresponding row in Table 7.
ElementName	string	Mandatory	The property value shall be the FQDD of the LC.
PossibleValues[]	string	Mandatory	The property value shall be equal to the array of the values in “PossibleValues” column at the corresponding row in Table 7.

399 The following table describes the requirements for the AttributeName, and PossibleValues properties for
 400 the DCIM_LCEnumeration class.

401

Table 7 – DCIM_LCEnumeration Attributes

AttributeName	IsReadOnly	PossibleValues	Description
---------------	------------	----------------	-------------

AttributeName	IsReadOnly	PossibleValues	Description
Licensed	True	<ul style="list-style-type: none"> Yes No 	Whether the Part Replacement feature is licensed.
Part Configuration Update	False	<ul style="list-style-type: none"> Disabled Apply always Apply only if firmware match 	Part configuration update method.
Part Firmware Update	False	<ul style="list-style-type: none"> Disable Allow version upgrade only Match firmware of replaced part 	<ul style="list-style-type: none"> Disable (default) – firmware update is not allowed. Allow version upgrade only – Allow firmware update only on up-revision. Match firmware of replaced part – Always update firmware.
Collect System Inventory on Restart	False	<ul style="list-style-type: none"> Disabled Enabled 	<ul style="list-style-type: none"> Enabled (default) – Enable collecting system inventory on restart Disabled – Disable collecting inventory on restart
AutoDiscovery	True	<ul style="list-style-type: none"> On Off 	<ul style="list-style-type: none"> Whether Auto Discovery feature is turned on or off.
Discovery Factory Defaults	True	<ul style="list-style-type: none"> On Off 	<ul style="list-style-type: none"> Off (default) – Do not reset to factory defaults when performing auto discovery On – Reset to factory defaults when performing auto discovery.
IPChangeNotifyPS	False	<ul style="list-style-type: none"> On Off 	<ul style="list-style-type: none"> On – Notify provisioning server of an IP change. Off – Do not notify provisioning server of an IP change.
VirtualAddressManagement	False	<ul style="list-style-type: none"> Console FlexAddress 	<ul style="list-style-type: none"> Console – Console manages the virtual addresses FlexAddress – (Blade only) Virtual addresses are managed through the flex addressing. <p>Note: If this attribute is configured through console, see to section “Setting virtual address attributes on CNA” in Simple NIC Profile.</p>

AttributeName	IsReadOnly	PossibleValues	Description
LifecycleControllerState	False	<ul style="list-style-type: none"> Enabled Disabled Recovery 	Enabled (Default) The LC core services shall be enabled to enable the update and inventory collection features.
BIOS Reset To Defaults Requested	False	<ul style="list-style-type: none"> True False 	<ul style="list-style-type: none"> False (default) – Do not reset the BIOS to defaults True – Reset the BIOS to defaults. <p>Note: This action needs the system reboot.</p>
AutoBackup	False	<ul style="list-style-type: none"> Enabled Disabled 	<ul style="list-style-type: none"> Enables or disables the automatic backup scheduler.
AutoRestore	False	<ul style="list-style-type: none"> Enabled Disabled 	<ul style="list-style-type: none"> Enables or disables the automatic restore scheduler.
AutoUpdate	False	<ul style="list-style-type: none"> Enabled Disabled 	<ul style="list-style-type: none"> Enables or disables the automatic update scheduler.
DiagsJobScheduled	False	<ul style="list-style-type: none"> False True 	<ul style="list-style-type: none"> Specifies if Diagnostics Job is scheduled

402 7.3 DCIM_LCString

403 This section describes the implementation for the DCIM_LCString class.

404 This class shall be instantiated in the Implementation Namespace.

405 7.3.1 Resource URIs for WinRM®

406 The class Resource URI shall be “http://schemas.dell.com/wbem/wscim/1/cim-schema/2/DCIM_LCString?__cimnamespace=root/dcim”

408 The key property shall be the InstanceID.

409 The instance Resource URI for DCIM_LCString instance shall be:
 410 “http://schemas.dell.com/wbem/wscim/1/cim-schema/2/DCIM_LCString?__cimnamespace=root/dcim+InstanceId=<InstanceId>”

412 7.3.2 Operations

413 The following table details the implemented operations on DCIM_LCString.

414 **Table 8 – DCIM_LCString - Operations**

Operation Name	Requirements	Required Input
Get	Mandatory	Instance URI
Enumerate	Mandatory	Class URI
DCIM_LCService.SetAttributte()	Mandatory	See section 8.1
DCIM_LCService.SetAttributes()	Mandatory	See section 8.2

415 **7.3.3 Class Properties**

416 The following table lists the implemented properties for DCIM_LCString instance representing an LC
417 string attribute. The “Requirements” column shall denote whether the property is implemented (for
418 requirement definitions, see section 3). The “Additional Requirement” column shall denote either possible
419 values for the property, or requirements on the value formulation.

Table 9 – Class: DCIM_LCString

Properties	Type	Requirement	Additional Requirements
InstanceId	string	Mandatory	The property value shall have unique value.
AttributeName	string	Mandatory	The property value shall be from the "AttributeName" column in Table 10
CurrentValue[]	string	Mandatory	The property shall represent the current value of the attribute.
PendingValue[]	string	Mandatory	The property value shall represent the pending value of the attribute.
DefaultValue[]	string	Mandatory	The property value shall represent the default value of the attribute.
IsReadOnly	boolean	Mandatory	The property value shall be the value in the "IsReadOnly" column at the corresponding row in Table 10
ElementName	string	Mandatory	The property value shall be the FQDD of the LC.
MinLength	uint64	Mandatory	<p>The property value shall be the value in the "MinLength" column at the corresponding row in Table 10</p> <p>The CurrentValue and PendingValue shall have equal or higher number of characters than the MinLength property value from the corresponding row.</p> <p>The omission or NULL shall denote that no known constraint exists on the CurrentValue and PendingValue properties.</p>
MaxLength	uint64	Mandatory	<p>The property value shall be the value in the "MaxLength" column at the corresponding row in Table 10.</p> <p>The CurrentValue and PendingValue shall have equal or lower number of characters than the MaxLength property value.</p> <p>The omission or NULL shall denote that no known constraint exists on the CurrentValue and PendingValue properties.</p>
StringType	uint32	Mandatory	<p>The property shall describe the type of string in the CurrentValue, PendingValue, and DefaultValue properties and have one of the following values:</p> <ul style="list-style-type: none"> • 0 - "Unknown", • 2 - "ASCII", • 3 - "hex", • 4 - "unicode", • 5 - "regex"

421 The following table describes possible DCIM_LCString attributes and the requirements for the
 422 AttributeName, MinLength, and MaxLength properties. The column headers represent the properties of
 423 the DCIM_LCString class. Each of the cells represents the values of the properties.

Table 10 – DCIM_LCString Attributes

AttributeName	IsRead Only	MinLength	MaxLength	Description
SYSID	TRUE	N/A	N/A	Dell System ID.
Provisioning Server	FALSE	0	255	Provisioning server address and port. Attribute value examples: <ul style="list-style-type: none">• Hostname• hostname.domain.com• 1.1.1.1• Mypc:8080• Myps.dell.com(1.2.3.4):8080• Host1:80,host2:8080,• Hostname[2001:db8:0000:1428:57ab]:443 [2001:db8:0000:1428:57ab]:443
VirtualAddressManagementApplication*	FALSE*	0	32	The console name of the Virtual Address Management Application, if the DCIM_LCEnumeration VirtualAddressManagement attribute is set to CurrentValue equals “Console”.
CMCIP	TRUE	0	64	CMC IP address

425 * - Note that VirtualAddressManagementApplication attribute is settable only if the
 426 VirtualAddressManagement DCIM_LCEnumeration instance's CurrentValue is set to “Console”.

427

428

429 **7.4 Lifecycle Controller (LC) Management Registration – DCIM_LCRegistered 430 Profile**

431 This section describes the implementation for the DCIM_LCRegisteredProfile class.

432 This class shall be instantiated in the Interop Namespace.

433 The DCIM_LCElementConformsToProfile association(s)' ConformantStandard property shall reference
 434 the DCIM_LCRegisteredProfile instance.

435 **7.4.1 Resource URIs for WinRM®**

436 The class WBEM URI shall be "http://schemas.dmtf.org/wbem/wscim/1/cim-
 437 schema/2/CIM_RegisteredProfile?__cimnamespace=root/interop"

438 The key property shall be the InstanceID property.

439 The instance WBEM URI shall be: "http://schemas.dell.com/wbem/wscim/1/cim-
 440 schema/2/DCIM_LCRegisteredProfile?__cimnamespace=root/interop+InstanceId=
 441 DCIM:LCManagement:1.1.0"

442 **7.4.2 Operations**

443 The following table lists the operations implemented on DCIM_LCRegisteredProfile.

444

Table 11 – DCIM_LCRegisteredProfile - Operations

Operation Name	Requirements	Required Input
Get	Mandatory	Instance URI
Enumerate	Mandatory	Class URI

445

446 **7.4.3 Class Properties**

447 The following table details the properties implemented for the DCIM_LCRegisteredProfile instance
 448 representing Lifecycle Controller (LC) Management implementation. The “Requirements” column shall
 449 denote whether the property is implemented (for requirement definitions, see section 3). The “Additional
 450 Requirements” column shall denote either possible values for the property, or requirements on the value
 451 formulation.

452

Table 12 – Class: DCIM_LCRegisteredProfile

Properties	Type	Requirement	Additional Requirements
InstanceID	String	Mandatory	This property shall have a value of “DCIM:LCManagement:1.1.0”
RegisteredName	String	Mandatory	This property shall have a value of “LC Management”.
RegisteredVersion	String	Mandatory	This property shall have a value of “1.6.0”.
RegisteredOrganization	uint16	Mandatory	This property shall have a value of 1 (Other).
OtherRegisteredOrganization	String	Mandatory	This property shall match “DCIM”
AdvertiseTypes[]	uint16	Mandatory	This property array shall have values “1(Other)” and “1(Other)”
AdvertiseTypeDescriptions[]	String	Mandatory	This property array shall have values “WS-Identify” and “Interop Namespace”
ProfileRequireLicense[]	String	Mandatory	This property array shall describe the required licenses for this profile. If no license is required for the profile, the property shall have value NULL.
ProfileRequireLicenseStatus[]	string	Mandatory	This property array shall contain the status for the corresponding license in the same element index of the ProfileRequireLicense array property. Each array element shall contain: <ul style="list-style-type: none">• “LICENSED”• “NOT_LICENSED” If no license is required for the profile, the property shall have value NULL.

453

454 **8 Methods**

455 This section details the requirements for supporting intrinsic operations and extrinsic methods for the CIM
 456 elements defined by this profile.

457 8.1 DCIM_LCService.SetAttribute()

458 The SetAttribute() method is used to set or change the value of an LC attribute.
459 Invoking the SetAttribute() method shall change the value of the DCIM_LCAttribute.CurrentValue or
460 DCIM_LCAttribute.PendingValue property to the value specified by the AttributeValue parameter if the
461 DCIM_LCAttribute.IsReadOnly property is FALSE. Invoking this method when the
462 DCIM_LCAttribute.IsReadOnly property is TRUE shall result in no change to the value of the
463 DCIM_LCAttribute.CurrentValue property. The results of changing this value is described with the
464 SetResult parameter.

465 Return code values for the SetAttribute() method are specified in tables below.

466 **NOTE:** Invoking the SetAttribute() method multiple times can result in the earlier requests being
467 overwritten or lost.

468 **Table 13 – DCIM_LCService.SetAttribute() Method: Return Code Values**

Value	Description
0	Request was successfully executed.
2	Error occurred

469 **Table 14 – DCIM_LCService.SetAttribute() Method: Parameters**

Qualifiers	Name	Type	Description/Values
IN, REQ	AttributeName	string	DCIM_LCAttribute.AttributeName
IN, REQ	AttributeValue[]	string	Pending or Current value to be set.
OUT	SetResult	string	Invoking the SetAttribute may result in the CurrentValue or PendingValue property being set. A value of: <ul style="list-style-type: none">• “Set CurrentValue” means CurrentValue property is set.• “Set PendingValue” means PendingValue property is set.
OUT	RebootRequired	string	A value of <ul style="list-style-type: none">• “Yes” means a reboot is required to set this value.• “No” means a reboot is not required to set this value.
OUT	MessageID	string	Error Message ID may be used to look-up in the Dell Message registry files. For more information, see Error Message Registry.
OUT	Message	string	Error Message in English corresponding to MessageID is returned if the method fails to execute.
OUT	MessageArguments	string	Substitution variables for dynamic error messages.

471

Table 15 – DCIM_LCService.SetAttribute() Method: Standard Messages

MessageID (OUT parameter)	Message	MessageArguments[]
LC002	General failure	NA
LC003	Failed to change the FW Update mode	NA
LC004	PS info not formatted correctly	NA
LC005	Invalid FW update mode	NA
LC007	Invalid parameter	NA
LC008	Unsupported method parameter value	NA
LC012	Lifecycle Controller is being used by another process	NA
LC015	Invalid Part Configuration Update	NA
LC016	Missing required parameter	<parameter>
LC036	System Services is disabled	NA
LC041	Virtual Address Mgmt file error	NA
LC042	Virtual Address Mgmt using FlexAddr	NA
LC048	Invalid value of IPChangeNotifyPS	NA
LC049	Invalid value of VirtualAddressManagement	NA
LC057	Invalid AttributeName.	NA
LC058	InvalidAttributeValue for AttributeName.	<parameter>
LC059	Cannot set ReadOnly AttributeName.	<parameter>
LC062	An instance of Export or Import System Configuration is already running.	

472

473 8.2 DCIM_LCService.SetAttributes()

474 The SetAttributes() method is used to set or change the values of a group of attributes.

475 Invoking the SetAttributes() method shall change the values of the DCIM_LCAttribute.CurrentValue or
 476 PendingValue properties that correspond to the names specified by the AttributeName parameter and the
 477 values specified by the AttributeValue parameter if the respective DCIM_LCAttribute.IsReadOnly property
 478 is FALSE. Invoking the method when the respective DCIM_LCAttribute.IsReadOnly property is TRUE
 479 shall result in no change to the corresponding value of the DCIM_LCAttribute.CurrentValue property.

480 Return code values for the SetAttributes() method are specified in tables below.

481 **NOTE:** Invoking the SetAttributes() method multiple times can result in the earlier requests being
 482 overwritten or lost.

483

Table 16 – DCIM_LCService.SetAttributes() Method: Return Code Values

Value	Description
0	Request was successfully executed.
2	Error occurred

484

Table 17 – DCIM_LCService.SetAttributes() Method: Parameters

Qualifiers	Name	Type	Description/Values
IN, REQ	AttributeName[]	string	The array parameter shall contain the AttributeName property values for the attributes to be modified.
IN, REQ	AttributeValue[]	string	<p>The array parameter shall contain the desired attribute values at the corresponding array element with the attribute name in the AttributeName array parameter.</p> <p>For example, if there are two attributes in the AttributeName array: AttributeName1 and AttributeName2, the array index 1 shall contain the value for AttributeName1 and array index 2 shall contain the value for AttributeName2.</p> <p>Attributes with array values shall not be set using this method, rather the SetAttribute() method shall be used to set the array attributes one at a time..</p> <p>If the value is valid, the CurrentValue or PendingValue property of the specified attribute shall be modified.</p>
OUT	SetResult[]	string	<p>Invoking the SetAttributes may result in the CurrentValue or PendingValue property of each input element being set.</p> <p>AttributeValue array shall have a corresponding SetResult value in the SetResult array.</p> <p>A return value of:</p> <ul style="list-style-type: none"> • “Set CurrentValue” means CurrentValue property is set. • “Set PendingValue” means PendingValue property is set.
OUT	RebootRequired[]	string	<p>Each input element's AttributeValue array shall have a corresponding RebootRequired value in the RebootRequired array. A value of:</p> <ul style="list-style-type: none"> • “Yes” means a reboot is required to set this value. • “No” means a reboot is not required to set this value

Qualifiers	Name	Type	Description/Values
OUT	MessageID[]	string	Error Message ID may be used to look-up in the Dell Message registry files. For more information, see Error Message Registry.
OUT	Message[]	string	Error Message in English corresponding to MessageID is returned if the method fails to execute
OUT	MessageArguments[]	string	Substitution variables for dynamic error messages

485

Table 18 – DCIM_LCService.SetAttributes() Method: Standard Messages

MessageID (OUT parameter)	Message	MessageArguments[]
LC002	General failure	NA
LC003	Failed to change the FW Update mode	NA
LC004	PS info not formatted correctly	NA
LC005	Invalid FW update mode	NA
LC007	Invalid parameter	NA
LC008	Unsupported method parameter value	NA
LC012	Lifecycle Controller is being used by another process	NA
LC015	Invalid Part Configuration Update	NA
LC016	Missing required parameter	<parameter>
LC036	System Services is disabled	NA
LC041	Virtual Address Mgmt file error	NA
LC042	Virtual Address Mgmt using FlexAddr	NA
LC048	Invalid value of IPChangeNotifyPS	NA
LC049	Invalid value of VirtualAddressManagement	NA
LC057	Invalid AttributeName.	NA
LC058	InvalidAttributeValue for AttributeName.	<parameter>
LC059	Cannot set ReadOnly AttributeName.	<parameter>
LC062	An instance of Export or Import System Configuration is already running.	

486

487 **8.3 DCIM_LCService.CreateConfigJob()**

488 The CreateConfigJob() method is used to apply the pending values created by the SetAttribute and
489 SetAttributes methods. The successful execution of this method creates a job for application of pending
490 attribute values.

491 Return code values for the CreateConfigJob() method are specified in tables below.

492 **NOTE:** Subsequent calls to CreateConfigJob after the first CreateConfigJob will result in error until the
493 first job is completed.

494 **Table 19 – DCIM_LCService.CreateConfigJob() Method: Return Code Values**

Value	Description
2	Error occurred
4096	Job started: REF returned to started CIM_ConcreteJob

495 **Table 20 – DCIM_LCService.CreateConfigJob() Method: Parameters**

Qualifiers	Name	Type	Description/Values
OUT	Job	CIM_ConcreteJob REF	Returned to keep track of config job status
OUT	MessageID	string	Error Message ID may be used to look-up in the Dell Message registry files. For more information, see Error Message Registry.
OUT	Message	string	Error Message in English corresponding to MessageID is returned if the method fails to execute
OUT	MessageArguments []	string	Substitution variables for dynamic error messages

496

497 **Table 21 – DCIM_LCService.CreateConfigJob() Method: Standard Messages**

MessageID (OUT parameter)	Message	MessageArguments[]
LC002	General failure	
LC012	Lifecycle Controller is being used by another process	NA
LC013	There are no pending values to set	NA
LC045	An instance of CreateConfigJob is already running	NA
JCP017	Maximum job limit reached, cannot create new jobs	NA
JCP018	Backup Job is running, cannot create new jobs until the	NA

MessageID (OUT parameter)	Message	MessageArguments[]
	existing Backup job is completed or is cancelled	
JCP019	Restore Job is running, cannot create new jobs until the existing Restore job is completed or is cancelled	NA
LC062	An instance of Export or Import System Configuration is already running.	

498

499 **8.4 DCIM_LCService.ReInitiateDHS()**

500 The ReInitiateDHS() method is used to reinitiate the provisioning server discovery and handshake.

501

Table 22 – DCIM_LCService.ReInitiateDHS() Method: Return Code Values

Value	Description
0	Request was successfully executed.
2	Error occurred

502

Table 23 – DCIM_LCService.ReInitiateDHS() Method: Parameters

Qualifiers	Name	Type	Description/Values
IN	ProvisioningServer	string	An optional parameter to specify provisioning server addresses and ports used for auto discovery. If omitted, the Lifecycle Controller shall get the value from DHCP or DNS.
IN, REQ	ResetToFactoryDefaults	boolean	If set to “true”, all configuration information is replaced with the auto discovery factory defaults. If set to “false”, an error will be returned
IN, REQ	PerformAutoDiscovery	uint16	<ul style="list-style-type: none"> • A value of "Off = 1" disables auto discovery. • A value of "Now = 2" enables and initiates auto discovery immediately. • A value of "NextBoot = 3" will delay reconfiguration and auto discovery until next A/C cycle. <p>NOTE: If NextBoot has value 3, then upon successful execution, the Discovery Factory Defaults attribute shall be set to “On”.</p>
OUT	MessageID	string	Error Message ID may be used to look-up in the Dell Message registry files. For more information, see Error Message Registry.
OUT	Message	string	Error Message in English corresponding to MessageID is returned if the method fails to execute
OUT	MessageArguments[]	string	Substitution variables for dynamic error messages

503

Table 24 – DCIM_LCService.ReInitiateDHS() Method: Standard Messages

MessageID (OUT parameter)	Message	MessageArguments[]
LC002	General failure	NA
LC004	PS info not formatted correctly	NA
LC008	Unsupported method parameter value	NA
LC009	Insufficient method parameters	NA

504

505 **8.5 DCIM_LCService.RelInitiateAutoDiscovery()**

- 506 The RelInitiateAutoDiscovery() method is used to reinitiate the discovery and handshake with static IP
507 configuration. If the method successfully executes, the iDRAC shall be in the static IP mode after the
508 auto-discovery is initiated and thus, shall not require DHCP setup. The static IP information for auto-
509 discovery can be set either through the optional input parameters of this method or through the iDRAC
510 attributes in the iDRAC Card Profile.
- 511 After the successful auto-discovery initiation, if the IPAddress parameter has non-NULL value, then the
512 iDRAC IPv4 address shall be set to that parameter's value, otherwise the iDRAC IPv4 Address shall be
513 set to the Address attribute in the IPv4 Information group in the iDRAC Card Profile.
- 514 After the successful auto-discovery initiation, if the Mask parameter has non-NULL value, then the iDRAC
515 IPv4 address net mask shall be set to that parameter's value, otherwise the iDRAC IPv4 address net
516 mask shall be set to the to the Netmask attribute in the IPv4 Information group in the iDRAC Card Profile.
- 517 After the successful auto-discovery initiation, if the Gateway parameter has non-NULL value, then the
518 iDRAC IPv4 gateway address shall be set to that parameter's value, otherwise the iDRAC IPv4 gateway
519 shall be set to the to the Gateway attribute in the IPv4 Information group in the iDRAC Card Profile.
- 520 After the successful auto-discovery initiation, if the DNS parameter has non-NULL value, then the iDRAC
521 IPv4 DNS address shall be set to that parameter's value, otherwise the iDRAC IPv4 DNS address shall
522 be set to the to the DNS1 attribute in the IPv4 Information group in the iDRAC Card Profile.
- 523 After the successful auto-discovery initiation, if the Domain parameter has non-NULL value, then the
524 iDRAC domain name shall be set to that parameter's value, otherwise the iDRAC domain name shall be
525 set to the to the DNSDomainName attribute in the NIC Information group in the iDRAC Card Profile.

Table 25 – DCIM_LCService.ReInitiateAutoDiscovery() Method: Return Code Values

Value	Description
0	Request was successfully executed.
2	Error occurred

Table 26 – DCIM_LCService.ReInitiateAutoDiscovery() Method: Parameters

Qualifiers	Name	Type	Description/Values
IN	ProvisioningServer	string	An optional parameter to specify provisioning server addresses and ports used for auto discovery. If omitted, the Lifecycle Controller shall get the value from DNS.
IN, REQ	PerformAutoDiscovery	uint16	<ul style="list-style-type: none"> • A value of "Off = 1" disables auto discovery. • A value of "Now = 2" enables and initiates auto discovery immediately. • A value of "NextBoot = 3" will delay reconfiguration and auto discovery until next A/C cycle. <p>NOTE: If NextBoot has value 3, then upon successful execution, the Discovery Factory Defaults attribute shall be set to "On".</p>
IN	IPAddress	string	<p>An optional parameter for specifying the iDRAC static IP configuration after the reset to the factory defaults occurs.</p> <p>The parameter shall be IPv4 address.</p> <p>The iDRAC IPv4 address shall be set to this parameter value after the reset occurs.</p> <p>NOTE: If this parameter is not specified then iDRAC shall be set to the value of the Address attribute in the IPv4 Information group in the iDRAC Card Profile.</p>
IN	Mask	string	<p>An optional parameter for specifying the iDRAC static IP configuration after the reset to the factory defaults occurs.</p> <p>The iDRAC shall be set to this net mask after the reset of iDRAC configuration.</p> <p>NOTE: If this parameter is not specified then iDRAC shall be set to the value of the Netmask attribute in the IPv4 Information group in the iDRAC Card Profile.</p>

Qualifiers	Name	Type	Description/Values
IN	Gateway	string	<p>An optional parameter for specifying the iDRAC static IP configuration after the reset to the factory defaults occurs.</p> <p>The parameter shall be IPv4 address.</p> <p>The iDRAC shall be set to this gateway IP address after the reset of iDRAC configuration.</p> <p>NOTE: If this parameter is not specified then iDRAC shall be set to the value of the Gateway attribute in the IPv4 Information group in the iDRAC Card Profile.</p>
IN	DNS	string	<p>An optional parameter for specifying the iDRAC static IP configuration after the reset to the factory defaults occurs.</p> <p>The parameter shall be IPv4 address.</p> <p>The iDRAC shall be set to this DNS IP address after the reset of iDRAC configuration.</p> <p>NOTE: If this parameter is not specified then iDRAC shall be set to the value of the DNS1 attribute in the IPv4 Information group in the iDRAC Card Profile.</p>
IN	Domain	string	<p>An optional parameter for specifying the iDRAC static IP configuration after the reset to the factory defaults occurs.</p> <p>The iDRAC shall be set to this domain after the reset of iDRAC configuration.</p> <p>NOTE: If this parameter is not specified then iDRAC shall be set to the value of the DNSDomainName attribute in the NIC Information group in the iDRAC Card Profile.</p>
OUT	MessageID	string	Error Message ID may be used to look-up in the Dell Message registry files. For more information, see Error Message Registry.
OUT	Message	string	Error Message in English corresponding to MessageID is returned if the method fails to execute
OUT	MessageArguments[]	string	Substitution variables for dynamic error messages

528

Table 27 – DCIM_LCService.RelinitiateAutoDiscovery() Method: Standard Messages

MessageID (OUT parameter)	Message	MessageArguments[]
LC002	General failure	NA
LC004	PS info not formatted correctly	NA
LC008	Unsupported method parameter value	NA

MessageID (OUT parameter)	Message	MessageArguments[]
LC009	Insufficient method parameters	NA
LC065	Static IP information is not configured correctly <attribute key>.	attribute key

529 **8.6 DCIM_LCService.ClearProvisioningServer()**

530 The ClearProvisioningServer() method is used to clear the provisioning server values.

531 **Table 28 – DCIM_LCService.ClearProvisioningServer() Method: Return Code Values**

Value	Description
0	Request was successfully executed.
2	Error occurred

532 **Table 29 – DCIM_LCService.ClearProvisioningServer() Method: Parameters**

Qualifiers	Name	Type	Description/Values
OUT	MessageID	string	Error MessageID is returned if the method fails to execute
OUT	Message	string	Error Message in English corresponding to MessageID is returned if the method fails to execute
OUT	MessageArguments[]	string	Substitution variables for dynamic error messages

533 **Table 30 – DCIM_LCService.ClearProvisioningServer() Method: Standard Messages**

MessageID (OUT parameter)	Message	MessageArguments[]
LC002	General failure	

534 **8.7 DCIM_LCService.DownloadServerPublicKey()**

535 The DownloadServerPublicKey() method is used to set a public certificate in the chain of trust for
 536 provisioning server. The successful invocation of this method shall set the certificate inside the
 537 KeyContent parameter to the iDRAC trusted Root CA list. The certificate will be used to authenticate the
 538 provisioning server access to iDRAC.

539 **Table 31 – DCIM_LCService.DownloadServerPublicKey() Method: Return Code Values**

Value	Description
2	Error occurred
4096	Job started

540 **Table 32 – DCIM_LCService.DownloadServerPublicKey() Method: Parameters**

Qualifiers	Name	Type	Description/Values
IN, OctetString, REQ	KeyContent	string	Base64 encoded public CA certificate.

Qualifiers	Name	Type	Description/Values
OUT	Job	CIM_ConcreteJob REF	Returned to track the setting of the public key.
OUT	MessageID	string	Error Message ID can be used to index into Dell Message registry files.
OUT	Message	string	Error Message ID may be used to look-up in the Dell Message registry files. For more information, see Error Message Registry.
OUT	MessageArguments[]	string	Substitution variables for dynamic error messages.

541

542 **Table 33 – DCIM_LCService.DownloadServerPublicKey() Method: Standard Messages**

MessageID (OUT parameter)	Message	MessageArguments[]
LC002	General failure	NA
LC016	Missing required parameter	<parameter>
LC017	Invalid value of parameter	<parameter>
LC040	Resource Allocation Failure	
LC046	An instance of DownloadServerPublicKey is already running	
JCP017	Maximum job limit reached, cannot create new jobs	
JCP018	Backup Job is running, cannot create new jobs until the existing Backup job is completed or is cancelled	
JCP019	Restore Job is running, cannot create new jobs until the existing Restore job is completed or is cancelled	NA

543

544 **8.8 DCIM_LCService.DownloadClientCerts()**

545 DCIM_LCService.DownloadClientCerts() is used to copy a CA cert and private key to the iDRAC to sign
 546 the iDRAC certificate. When this command is issued the iDRAC will generate a new auto-discovery client
 547 certificate and sign it using the CA cert and private key. The CA cert then needs to be added to the
 548 provisioning server trusted Root CA list before performing auto-discovery.

549

Table 34 – DCIM_LCService.DownloadClientCerts() Method: Return Code Values

Value	Description
2	Error occurred
4096	Job started

550

Table 35 – DCIM_LCService.DownloadClientCerts() Method: Parameters

Qualifiers	Name	Type	Description/Values
IN, OctetString, REQ	KeyContent	string	Base64 encoded private key content.
IN, REQ	Password	string	Private key password.
IN, OctetString, REQ	CAContent	string	Base64 encoded root certificate content.
OUT	Job	CIM_ConcreteJob REF	Returned to track the setting of the public key.
OUT	MessageID	string	Error Message ID can be used to index into Dell Message registry files.
OUT	Message	string	Error Message ID may be used to look-up in the Dell Message registry files. For more information, see Error Message Registry.
OUT	MessageArguments[]	string	Substitution variables for dynamic error messages.

551

Table 36 – DCIM_LCService.DownloadClientCerts() Method: Standard Messages

MessageID (OUT parameter)	Message	MessageArguments[]
LC002	General failure	NA
LC016	Missing required parameter	<parameter>
LC017	Invalid value of parameter	<parameter>
LC040	Resource Allocation Failure	
LC047	An instance of DownloadClientCerts is already running	
JCP017	Maximum job limit reached, cannot create new jobs	
JCP018	Backup Job is running, cannot create new jobs until the existing Backup job is completed or is cancelled	
JCP019	Restore Job is running, cannot create new jobs until the existing Restore job is completed or is cancelled	NA

552

8.9 DCIM_LCService.DeleteAutoDiscoveryClientCerts ()

553

The DeleteAutoDiscoveryClientCerts() method is used to wipe all configurations from the Lifecycle controller before the system is retired.

554

555

Table 37 – DCIM_LCService.DeleteAutoDiscoveryClientCerts() Method: Return Code Values

Value	Description
0	Request was successfully executed.
2	Error occurred

556

Table 38 – DCIM_LCService.DeleteAutoDiscoveryClientCerts() Method: Parameters

Qualifiers	Name	Type	Description/Values
OUT	MessageID	string	Error Message ID may be used to look-up in the Dell Message registry files. For more information, see Error Message Registry.
OUT	Message	string	Error Message in English corresponding to MessageID is returned if the method fails to execute
OUT	MessageArguments[]	string	Substitution variables for dynamic error messages

557

Table 39 – DCIM_LCService.DeleteAutoDiscoveryClientCerts() Method: Standard Messages

MessageID (OUT parameter)	Message	MessageArguments[]
LC002	General failure	

558

559 **8.10 DCIM_LCService.SetCertificateAndPrivateKey()**

560 The SetCertificateAndPrivateKey() method is used to set iDRAC owned server certificate and public and
 561 private key pairs using the contents of a PKCS#12 file. iDRAC will serve the certificate to identify itself
 562 during web server based connections such as for iDRAC's web application and WSMAN instrumentation
 563 connections. The certificate will also be served for connections with directory services.

564 **Table 40 – DCIM_LCService.SetCertificateAndPrivateKey() Method: Return Code Values**

Value	Description
0	Request was successfully executed.
2	Error occurred

565 **Table 41 – DCIM_LCService.SetCertificateAndPrivateKey() Method: Parameters**

Qualifiers	Name	Type	Description/Values
IN, REQ	Type	string	This parameter specifies the certificate use. Note: The parameter shall have “server” value.
IN, REQ	PKCS12	string	An input parameter that represents the Base64 encoded contents of PKCS#12 file to set. Note this is the content of the file and not a file name.
IN, REQ	PKCS12pin	string	Password to decode the PKCS12.
OUT	MessageID	String	Error Message ID can be used to index into Dell Message registry files.
OUT	Message	String	Error Message in English corresponding to MessageID is returned if the method fails to execute.
OUT	MessageArguments[]	String	Substitution variables for dynamic error messages.

566 **Table 42 – DCIM_LCService.SetCertificateAndPrivateKey() Method: Standard Messages**

MessageID (OUT parameter)	Message	MessageArguments[]
LC002	General failure	
LC016	Missing required parameter	"Type", "PKCS12", "PKCS12pin"
LC017	Invalid value of parameter	"Type", "PKCS12", "PKCS12pin"

567

568

569 **8.11 DCIM_LCService.SetPublicCertificate()**

570 The SetPublicCertificate() method is used to set a public certificate in the chain of trust for directory
571 services. The successful invocation of this method shall set the certificate inside the Certificate parameter
572 to the iDRAC trusted Root CA list. The certificate will be used to authenticate the directory service access
573 to iDRAC.

574 **Table 43 – DCIM_LCService.SetPublicCertificate() Method: Return Code Values**

Value	Description
0	Request was successfully executed.
2	Error occurred

575 **Table 44 – DCIM_LCService.SetPublicCertificate() Method: Parameters**

Qualifiers	Name	Type	Description/Values
IN, REQ	Type	string	This parameter specifies the service the certificate is for. "directoryCA" = CA certificate for Active Directory or LDAP server
IN, REQ	Certificate	string	An input parameter that represents the certificate to set. The certificate must be in X509 format and Base64 encoded.
OUT	MessageID	string	Error Message ID may be used to look-up in the Dell Message registry files. For more information, see Error Message Registry.
OUT	Message	string	Error Message in English corresponding to MessageID is returned if the method fails to execute
OUT	MessageArguments[]	string	Substitution variables for dynamic error messages

576 **Table 45 – DCIM_LCService.SetPublicCertificate() Method: Standard Messages**

MessageID (OUT parameter)	Message	MessageArguments[]
LC002	General failure	
LC016	Missing required parameter %s	"Type", "Certificate"
LC017	Invalid value of parameter %s	"Type", "Certificate"

577 **8.12 DCIM_LCService.DeleteAutoDiscoveryServerPublicKey()**

578 The DeleteAutoDiscoveryServerPublicKey() method is used to delete the server public key set previously
579 by the auto discovery method.

580 **Table 46 – DCIM_LCService.DeleteAutoDiscoveryServerPublicKey() Method: Return Code Values**

Value	Description
0	Request was successfully executed.
2	Error occurred

581 **Table 47 – DCIM_LCService.DeleteAutoDiscoveryServerPublicKey() Method: Parameters**

Qualifiers	Name	Type	Description/Values
OUT	MessageID	String	Error Message ID may be used to look-up in the Dell Message registry files. For more information, see Error Message Registry.
OUT	Message	String	Error Message in English corresponding to MessageID is returned if the method fails to execute
OUT	MessageArguments[]	string	Substitution variables for dynamic error messages

582 **Table 48 – DCIM_LCService.DeleteAutoDiscoveryServerPublicKey() Method: Standard Messages**

MessageID (OUT parameter)	Message	MessageArguments[]
LC002	General failure	

583

8.13 DCIM_LCService.InsertCommentInLCLog()

585 The InsertCommentInLCLog() method is used to insert additional user comments into the Lifecycle
586 Controller log.

587 **Table 49 – DCIM_LCService.InsertCommentInLCLog() Method: Return Code Values**

Value	Description
0	Request was successfully executed.
2	Error occurred

588 **Table 50 – DCIM_LCService.InsertCommentInLCLog() Method: Parameters**

Qualifiers	Name	Type	Description/Values
IN, REQ	Comment	string	This parameter holds the text that shall be inserted into the LC log Comment field.
OUT	MessageID	string	Error Message ID may be used to look-up in the Dell Message registry files. For more information, see Error Message Registry.
OUT	Message	string	Error Message in English corresponding to MessageID is returned if the method fails to execute
OUT	MessageArguments[]	string	Substitution variables for dynamic error messages

589

590

591

Table 51 – DCIM_LCService.InsertCommentInLCLog() Method: Standard Messages

MessageID (OUT parameter)	Message	MessageArguments[]
LC002	General failure	
LC008	Unsupported method parameter value	
LC014	Comment length must be between 1 and 255 characters	

592

8.14 DCIM_LCService.ExportLCLog()

593 The ExportLCLog() method is used to export the log from the Lifecycle Controller to a remote share.

594

Table 52 – DCIM_LCService.ExportLCLog() Method: Return Code Values

Value	Description
2	Error occurred
4096	Job started: REF returned to started CIM_ConcreteJob

595

Table 53 – DCIM_LCService.ExportLCLog() Method: Parameters

Qualifiers	Name	Type	Description/Values
IN, REQ	IPAddress	string	The IP address of the target export server.
IN, REQ	ShareName	string	The directory path to the mount point.
IN, REQ	FileName	string	The target output file name.
IN, REQ	ShareType	uint16	Type of share: NFS=0, CIFS=2
IN	Username	String	User name for the target export server.
IN	Password	String	Password for the target export server.
IN	Workgroup	String	The applicable workgroup.
OUT	Job	CIM_ConcreteJob REF	[1] Returned to keep track of config job status ¹ .
OUT	MessageID	String	Error Message ID- can be used to index into Dell Message registry files.
OUT	Message	String	Error Message in English corresponding to MessageID is returned if the method fails to execute.
OUT	MessageArguments[]	string	Substitution variables for dynamic error messages.

596

597

598

Table 54 – DCIM_LCService.ExportLCLog() Method: Standard Messages

MessageID (OUT parameter)	Message	MessageArguments[]
LC016	Missing required parameter <parameter name>	Parameter name, see Table 53
LC017	Invalid value of parameter <parameter name>	Parameter name, see Table 53
LC022	LCL Export was successful	
LC023	Cannot access network share	
LC030	Filepath is a read-only file system	
LC037	An instance of LCExport is already running	
LC040	Resource Allocation Failure	
JCP017	Maximum job limit reached, cannot create new jobs	
JCP018	Backup Job is running, cannot create new jobs until the existing Backup job is completed or is cancelled	
JCP019	Restore Job is running, cannot create new jobs until the existing Restore job is completed or is cancelled	NA

599

600 **8.15 DCIM_LCService.ExportCompleteLCLog()**

601 The ExportLCLog() method is used to export the log from the Lifecycle Controller to a remote share.

602

Table 55 – DCIM_LCService.ExportCompleteLCLog() Method: Return Code Values

Value	Description
1	Not Supported
2	Error occurred
4096	Job started: REF returned to started CIM_ConcreteJob

603

Table 56 – DCIM_LCService.ExportCompleteLCLog() Method: Parameters

Qualifiers	Name	Type	Description/Values
IN, REQ	IPAddress	string	The IP address of the target export server.
IN, REQ	ShareName	string	The directory path to the mount point.
IN, REQ	FileName	string	The target output file name.
IN, REQ	ShareType	uint16	Type of share: NFS=0, CIFS=2
IN	Username	String	User name for the target export server.
IN	Password	String	Password for the target export server.
IN	Workgroup	String	The applicable workgroup.
OUT	Job	CIM_ConcreteJob REF	[2] Returned to keep track of config job status ¹ .
OUT	MessageID	String	Error Message ID- can be used to index into Dell Message registry files.
OUT	Message	String	Error Message in English corresponding to MessageID is returned if the method fails to execute.
OUT	MessageArguments[]	string	Substitution variables for dynamic error messages.

604

605

Table 57 – DCIM_LCService.ExportCompleteLCLog() Method: Standard Messages

MessageID (OUT parameter)	Message	MessageArguments[]
LC016	Missing required parameter <parameter name>	Parameter name, see Table 56
LC017	Invalid value of parameter <parameter name>	Parameter name, see Table 56
LC022	LCL Export was successful	
LC023	Cannot access network share	
LC030	Filepath is a read-only file system	
LC037	An instance of LCExport is already running	
LC040	Resource Allocation Failure	
JCP017	Maximum job limit reached, cannot create new jobs	
JCP018	Backup Job is running, cannot create new jobs until the existing Backup job is completed or is cancelled	
JCP019	Restore Job is running, cannot create new jobs until the existing Restore job is completed or is cancelled	NA

609 Note: Exporting of log files will be in tar.gz format. Users are at their liberty to change the extension.

8.16 DCIM_LCService.ExportHWInventory()

612 The ExportHWInventory() method is used to export the hardware inventory from the Lifecycle Controller to a remote share.

613

Table 58 – DCIM_LCService.ExportHWInventory() Method: Return Code Values

Value	Description
2	Error occurred
4096	Job started: REF returned to started CIM_ConcreteJob

614

Table 59 – DCIM_LCService.ExportHWInventory() Method: Parameters

Qualifiers	Name	Type	Description/Values
IN, REQ	IPAddress	string	The IP address of the target export server.
IN, REQ	ShareName	string	The directory path to the mount point.
IN, REQ	FileName	string	The target output file name.
IN, REQ	ShareType	uint16	Type of share: NFS=0, CIFS=2
IN	XMLSchema	uint8	The schema to be used for the Hardware Inventory XML output: 0 (CIM-XML), 1(Simple). If this parameter is not specified, then the output shall be in CIM-XML schema XML.
IN	Username	String	User name for the target export server.
IN	Password	String	Password for the target export server.
IN	Workgroup	String	The applicable workgroup.
OUT	Job	CIM_ConcreteJob REF	Returned to keep track of config job status ¹
OUT	MessageID	String	Error Message ID may be used to look-up in the Dell Message registry files. For more information, see Error Message Registry.
OUT	Message	String	Error Message in English corresponding to MessageID is returned if the method fails to execute.
OUT	MessageArguments[]	string	Substitution variables for dynamic error messages.

615

616

617

Table 60 – DCIM_LCService.ExportHWInventory() Method: Standard Messages

MessageID (OUT parameter)	Message	MessageArguments[]
LC016	Missing required parameter <parameter name>	Parameter name, see table 59
LC017	Invalid value of parameter <parameter name>	Parameter name, see table 59
LC023	Cannot access network share	
LC025	Insufficient space on network share	
LC027	Hardware Inventory Export was	

MessageID (OUT parameter)	Message	MessageArguments[]
	successful	
LC029	Filepath is invalid	
LC030	Filepath is a read-only file system	
LC038	An instance of Hardware Inventory is already running	
LC040	Resource Allocation Failure	
JCP017	Maximum job limit reached, cannot create new jobs	
JCP018	Backup Job is running, cannot create new jobs until the existing Backup job is completed or is cancelled	
JCP019	Restore Job is running, cannot create new jobs until the existing Restore job is completed or is cancelled	NA

618 **8.17 DCIM_LCService.ExportFactoryConfiguration()**

619 The ExportFactoryConfiguration() method is used to export the factory configuration from the Lifecycle
 620 Controller to a remote share.

621

Table 61 – DCIM_LCService.ExportFactoryConfiguration() Method: Return Code Values

Value	Description
2	Error occurred
4096	Job started: REF returned to started CIM_ConcreteJob

622

Table 62 – DCIM_LCService.ExportFactoryConfiguration() Method: Parameters

Qualifiers	Name	Type	Description/Values
IN, REQ	IPAddress	string	The IP address of the target export server.
IN, REQ	ShareName	string	The directory path to the mount point.
IN, REQ	FileName	string	The target output file name.
IN, REQ	ShareType	uint16	Type of share: NFS=0, CIFS=2
IN	Username	String	User name for the target export server.
IN	Password	String	Password for the target export server.
IN	Workgroup	String	The applicable workgroup.
OUT	Job	CIM_ConcreteJob REF	Returned to keep track of config job status.
OUT	MessageID	String	Error Message ID may be used to look-up in the Dell Message registry files. For more information, see Error Message Registry.
OUT	Message	String	Error Message in English corresponding to MessageID is returned if the method fails to execute.
OUT	MessageArguments[]	string	Substitution variables for dynamic error messages.

623

Table 63 – DCIM_LCService.ExportFactoryConfiguration() Method: Standard Messages

MessageID (OUT parameter)	Message	MessageArguments[]
LC016	Missing required parameter <parameter name>	Parameter name, see table 62
LC017	Invalid value of parameter <parameter name>	Parameter name, see table 62
LC023	Cannot access network share	
LC025	Insufficient space on network share	
LC029	Filepath is invalid	
LC030	Filepath is a read-only file system	
LC033	Factory Configuration Export was successful	
LC034	Factory Configuration was not found on the system	
LC039	An instance of Factory Configuration is already running	

MessageID (OUT parameter)	Message	MessageArguments[]
LC040	Resource Allocation Failure	
JCP017	Maximum job limit reached, cannot create new jobs	
JCP018	Backup Job is running, cannot create new jobs until the existing Backup job is completed or is cancelled	
JCP019	Restore Job is running, cannot create new jobs until the existing Restore job is completed or is cancelled	NA

624

625 **8.18 DCIM_LCService.ExportSystemConfiguration()**

626 This method is used to export the system configuration from the Lifecycle Controller to a file on a remote share.

628

Table 64 – DCIM_LCService.ExportSystemConfiguration() Method: Return Code Values

Value	Description
2	Error occurred
4096	Job started: REF returned to started CIM_ConcreteJob

629

Table 65 – DCIM_LCService.ExportSystemConfiguration() Method: Parameters

Qualifiers	Name	Type	Description/Values
IN, REQ	IPAddress	string	The IP address of the target export server.
IN, REQ	ShareName	string	The directory path to the mount point.
IN, REQ	FileName	string	The target output file name.
IN, REQ	ShareType	uint16	Type of share: NFS=0, CIFS=2
IN	Username	String	User name for the target export server.
IN	Password	String	Password for the target export server.
IN	Workgroup	String	WorkGroup name if it is needed.
IN	Target	String	To identify the component for Export. It identifies the one or more FQDDs .Selective list of FQDDs should be given in comma separated format . Default = “All” .
IN	ExportUse	uint16	Type of Export intended for use : Default =0, Clone=1 , Replace=2.
IN	IncludeInExport	uint16	Extra information to include in the export: Default=0, Include read only = 1, Include password hash values = 2, Include read only and password hash values=3.
OUT	Job	CIM_ConcreteJob REF	Returned to keep track of config job status.
OUT	MessageID	String	Error Message ID may be used to look-up in the Dell Message registry files. For more information, see Error Message Registry.
OUT	Message	String	Error Message in English corresponding to MessageID is returned if the method fails to execute.
OUT	MessageArguments[]	string	Substitution variables for dynamic error messages.

630

Table 66 – DCIM_LCService.ExportSystemConfiguration() Method: Standard Messages

MessageID (OUT parameter)	Message	MessageArguments[]
LC016	Missing required parameter <parameter name>	Parameter name, see Table 65
LC017	Invalid value of parameter <parameter name>	Parameter name, see Table 65
LC023	Cannot access network share	
LC040	Resource Allocation Failure	
LC062	An instance of Export or Import	

MessageID (OUT parameter)	Message	MessageArguments[]
	System Configuration is already running.	
LC063	Cannot create new jobs until the existing running jobs are completed or deleted.	
LC064	Parameter exceeds maximum length <max parameter length> for <parameter name>	Parameter name, see Table 65
JCP017	Maximum job limit reached, cannot create new jobs	

631

632 **8.19 DCIM_LCService.ImportSystemConfiguration()**

633 This method is used to import the system configuration from the Lifecycle Controller from a file on a
 634 remote share. The successful invocation of this method shall return a job. The job execution results shall
 635 be logged in the Lifecycle log as part of configuration results. The Dell Record Log Profile provides the
 636 DCIM_LCRecordLog.GetConfigResults() method to retrieve the configuration results from the lifecycle
 637 logs based on the returned job's JobID (see Dell Record Log Profile for more details).

638

Table 67 – DCIM_LCService.ImportSystemConfiguration() Method: Return Code Values

Value	Description
2	Error occurred
4096	Job started: REF returned to started CIM_ConcreteJob

639

Table 68 – DCIM_LCService.ImportSystemConfiguration() Method: Parameters

Qualifiers	Name	Type	Description/Values
IN, REQ	IPAddress	string	The IP address of the target import server.
IN, REQ	ShareName	string	The directory path to the mount point.
IN, REQ	FileName	string	The target output file name.
IN, REQ	ShareType	uint16	Type of share: NFS=0, CIFS=2
IN	Target	String	To identify the component for Import. It identifies the one or more FQDDs .Selective list of FQDDs should be given in comma separated format . Default = “All” .
IN	ShutdownType	uint16	Type of the host shut down before perform the import operation. Type of shut down: Graceful=0, Forced =1
IN	TimeToWait	uint16	The time to wait for the host to shut down. Default and minimum value is 300 seconds. Maximum value is 3600 seconds.
IN	EndHostPowerState	uint16	The desired host power state after the import operation is finished. Default value is 1 - On. Type of state: Off=0, On=1
IN	Username	String	User name for the target import server.
IN	Password	String	Password for the target import server.
OUT	Job	CIM_ConcreteJob REF	Returned to keep track of config job status.
OUT	MessageID	String	Error Message ID may be used to look-up in the Dell Message registry files. For more information, see Error Message Registry.
OUT	Message	String	Error Message in English corresponding to MessageID is returned if the method fails to execute.
OUT	MessageArguments[]	string	Substitution variables for dynamic error messages.

640

Table 69 – DCIM_LCService.ImportSystemConfiguration() Method: Standard Messages

MessageID (OUT parameter)	Message	MessageArguments[]
LC016	Missing required parameter <parameter name>	Parameter name, see Table 68
LC017	Invalid value of parameter <parameter name>	Parameter name, see Table 68
LC023	Cannot access network share	

MessageID (OUT parameter)	Message	MessageArguments[]
LC040	Resource Allocation Failure	
LC062	An instance of Export or Import System Configuration is already running.	
LC063	Cannot create new jobs until the existing running jobs are completed or deleted.	
LC064	Parameter exceeds maximum length <max parameter length> for <parameter name>	Parameter name, see Table 68
JCP017	Maximum job limit reached, cannot create new jobs	

641

642

8.20 DCIM_LCService.LCWipe()

644 This LCWipe() method is used to delete all configurations from the Lifecycle controller before the system
645 is retired.

646

647

Table 70 – DCIM_LCService.LCWipe() Method: Return Code Values

Value	Description
0	Request was successfully executed.
2	Error occurred

648

Table 71 – DCIM_LCService.LCWipe() Method: Parameters

Qualifiers	Name	Type	Description/Values
OUT	MessageID	String	Error Message ID may be used to look-up in the Dell Message registry files. For more information, see Error Message Registry.
OUT	Message	String	Error Message in English corresponding to MessageID is returned if the method fails to execute
OUT	MessageArguments[]	string	Substitution variables for dynamic error messages

649

Table 72 - DCIM_LCService.LCWipe() Method: Standard Messages

MessageID (OUT parameter)	Message	MessageArguments[]
LC012	Lifecycle Controller is being used by another process	
LC044	An instance of LCWipe is already running	

650

8.21 DCIM_LCService.TestNetworkShare()

651 The TestNetworkShare() method is used to test network connection for the Lifecycle Controller.

Table 73 – DCIM_LCService.TestNetworkShare() Method: Return Code Values

Value	Description
0	Request was successfully executed.
2	Error occurred

653

Table 74 – DCIM_LCService.TestNetworkShare() Method: Parameters

Qualifiers	Name	Type	Description/Values
IN	IPAddress	String	IP address of the NFS or CIFS share such as 192.168.10.12. The parameter shall be required, if the ShareType parameter has value 0 (NFS), 2 (CIFS), 3-TFTP,5-HTTP or not specified. In case of ftp, ftp.dell.com is the default IP taken
IN	ShareName	String	Share name for the network share such as "imageshare". The parameter shall be required, if the ShareType parameter has value 0 (NFS), 2 (CIFS), or not specified.
IN	ShareType	Unit16	Type of the share or storage. <ul style="list-style-type: none"> • 0 – NFS • 2 – CIFS • 1-FTP • 3-TFTP • 5-HTTP If ShareType is blank or null, it shall be considered as NFS type. The parameter shall be required, if the ShareType parameter has value 0 (NFS), 2 (CIFS), or not specified.
IN	Username	String	User name for the remote share
IN	Password	String	Password for the remote share
OUT	MessageID	String	Error Message ID may be used to look-up in the Dell Message registry files. For more information, see Error Message Registry.
OUT	Message	String	Error Message in English corresponding to MessageID is returned if the method fails to execute
OUT	MessageArguments[]	string	Substitution variables for dynamic error messages

654

Table 75 – DCIM_LCService.TestNetworkShare() Method: Standard Messages

MessageID (OUT parameter)	Message	MessageArguments[]
LC016	Missing required parameter	<parameter>
LC017	Invalid value of parameter	"ShareType"
LC023	Cannot access network share	NA

655

8.22 DCIM_LCService.BackupImage()

656 The BackupImage() method is used to backup firmware and configurations for the Lifecycle Controller.

Table 76 – DCIM_LCService.BackupImage() Method: Return Code Values

Value	Description
2	Error occurred
4096 ¹	A DCIM_ConcreteJob is returned ¹

658 NOTE: 1 – If return code is 4096 (Job Created), the newly created job will not execute if the LC core services are not
 659 running (DCIM_LCEnumeration with AttributeName equal to “LifecycleControllerState” has the CurrentValue property
 660 equal to “Disabled”).

Qualifiers	Name	Type	Description/Values
IN	IPAddress	String	IP address of the NFS or CIFS share such as 192.168.10.12. The parameter shall be required, if the ShareType parameter has value 0 (NFS), 2 (CIFS), or not specified.
IN	ShareName	String	Share name for the network share such as “imageshare”. The parameter shall be required, if the ShareType parameter has value 0 (NFS), 2 (CIFS), or not specified.
IN	ShareType	Unit16	Type of the share or storage. <ul style="list-style-type: none"> • 0 – NFS • 2 – CIFS • 4 – VFLASH If ShareType is blank or null, it shall be considered as NFS type. The parameter shall be required, if the ShareType parameter has value 0 (NFS), 2 (CIFS), or not specified.
IN	Passphrase	String	The passphrase for the image. The parameter shall be required, if the ShareType parameter has value 0 (NFS), or 2 (CIFS) or not specified.
IN	ImageName	String	The name of the backup file. The parameter shall be required, if the ShareType parameter has value 0 (NFS), 2 (CIFS), or not specified.
IN	Username	String	User name for the remote share
IN	Password	String	Password for the remote share
IN	Workgroup	String	Workgroup for the share
IN	ScheduledStartTime	String	Start time for the job execution in format: yyyyymmddhhmmss. The string "TIME_NOW" means immediate.
IN	UntilTime	String	End time for the job execution in format: yyyyymmddhhmmss. : If this parameter is not NULL, then ScheduledStartTime parameter shall also be specified.
OUT	MessageID	String	Error Message ID may be used to look-up in the Dell Message registry files. For more information, see Error Message Registry.
OUT	Job	DCIM_ConcreteJob Ref	The job that represents this operation ¹
Version 1.9.1	Message	String	Error Message in English corresponding to MessageID is returned if the method fails to execute
OUT	MssageArguments[]	string	Substitution variables for dynamic error messages

661 **Table 77 – DCIM_LCService.BackupImage() Method: Return Code Values**

662

663 **Table 78 – DCIM_LCService.BackupImage() Method: Standard Messages**

MessageID (OUT parameter)	Message	MessageArguments[]
LC002	General failure	
LC017	Invalid value of parameter	"ShareType"
LC023	Cannot access network share	NA
LC051	Cannot create multiple Export jobs.	NA
SUP017	Invalid start time.	
SUP018	Invalid until time.	
JCP017	Maximum job limit reached, cannot create new jobs	
JCP019	Restore Job is running, cannot create new jobs until the existing Restore job is completed or is cancelled	
JCP018	Backup Job is running, cannot create new jobs until the existing Backup job is completed or is cancelled	

664 **8.23 DCIM_LCService.RestoreImage()**

665 This RestoreImage() method is used to restore firmware and configurations.

666

Table 79 – DCIM_LCService.RestoreImage() Method: Return Code Values

Value	Description
2	Error occurred
4096 ¹	A DCIM_ConcreteJob is returned ¹

667

Table 80 – DCIM_LCService.RestoreImage() Method: Parameters

Qualifiers	Name	Type	Description/Values
IN	IPAddress	String	IP address of the NFS or CIFS share. The parameter shall be required, if the ShareType parameter has value 0 (NFS), 2 (CIFS), or not specified.
IN.	ShareName	String	Share name for the network share, The parameter shall be required, if the ShareType parameter has value 0 (NFS), 2 (CIFS), or not specified.
IN	ShareType	Uint16	Type of the share or storage. <ul style="list-style-type: none"> • 0 – NFS • 2 – CIFS • 4 – VFLASH If ShareType is blank or null, it shall be considered as NFS type
IN	Passphrase	String	The passphrase for the image. The parameter shall be required, if the ShareType parameter has value 0 (NFS), 2 (CIFS), or not specified.
IN	ImageName	String	The name of the backup file. The parameter shall be required, if the ShareType parameter has value 0 (NFS), 2 (CIFS), or not specified.
IN	Username	String	User name for the remote share
IN	Password	String	Password for the remote share
IN	Workgroup	String	Workgroup for the share
IN, REQ	PreserveVDConfig	Uint16	Whether to preserve the VD (Virtual Disk) configuration.
IN	ScheduledStartTime	String	Start time for the job execution in format: yyyymmddhhmmss. The string "TIME_NOW" means immediate.
IN	UntilTime	String	End time for the job execution in format: yyyymmddhhmmss. : If this parameter is not NULL, then ScheduledStartTime parameter shall also be specified.
OUT	Job	DCIM_ConcreteJob Ref	The job that represents this operation ¹
OUT	MessageID	String	Error Message ID may be used to look-up in the Dell Message registry files. For more information, see Error Message Registry.

Qualifiers	Name	Type	Description/Values
OUT	Message	String	Error Message in English corresponding to MessageID is returned if the method fails to execute
OUT	MessageArguments[]	string	Substitution variables for dynamic error messages

668 NOTE: 1 – If return code is 4096 (Job Created), the newly created job will not execute if the LC core services are not
 669 running (DCIM_LCEnumeration with AttributeName equal to “LifecycleControllerState” has the CurrentValue property
 670 equal to “Disabled”).

671 **Table 81 – DCIM_LCService.RestoreImage() Method: Standard Messages**

MessageID (OUT parameter)	Message	MessageArguments[]
LC002	General failure	LC002
LC017	Invalid value of parameter	“ShareType”, “PreserveVDConfig”
LC023	Cannot access network share	NA
LC052	Cannot create multiple Import jobs.	NA
SUP017	Invalid start time	
SUP018	Invalid until time	
JCP017	Maximum job limit reached, cannot create new jobs	
JCP018	Backup Job is running, cannot create new jobs until the existing Backup job is completed or is cancelled	
JCP019	Restore Job is running, cannot create new jobs until the existing Restore job is completed or is cancelled	

672 **8.24 DCIM_LCService.GetRSStatus()**

673 The GetRSStatus() method is used to obtain the Data Manager (Remote Services) status.

674 **NOTE:** The GetRemoteServicesAPIStatus() method execution reports more granular and detailed status
 675 of the Remote Services API.

676

Table 82 – DCIM_LCService.GetRSStatus() Method: Return Code Values

Value	Description
0	Request was successfully executed.
2	Error occurred

677

Table 83 – DCIM_LCService.GetRSStatus() Method: Parameters

Qualifiers	Name	Type	Description/Values
OUT	Status	string	The status for the Data Manager: Ready Not Ready Reloading
OUT	MessageID	string	Error Message ID may be used to look-up in the Dell Message registry files. For more information, see Error Message Registry.
OUT	Message	string	Error Message in English corresponding to MessageID is returned if the method fails to execute
OUT	MessageArguments[]	string	Substitution variables for dynamic error messages

678

Table 84 – DCIM_LCService.GetRSStatus() Method: Standard Messages

MessageID (OUT parameter)	Message	MessageArguments[]
RSI0001	The remote service is available	
RSI0002	The remote service is currently not available	
RSI0003	The remote service is reloading data	
RSI0004	The remote service is unavailable	

679

8.25 DCIM_LCService.GetRemoteServicesAPIStatus ()

680 The GetRemoteServicesAPIStatus() method is used to obtain the overall remote services API status that
 681 includes both the host system status as well as the remote services (Data Manager) status. The overall
 682 rolled up status shall be reflected in the Status output parameter.

683 **NOTE:** The LCStatus output parameter value includes the status reported by the DMStatus output
 684 parameter in the GetRSStatus() method and the Lifecycle Controller status. Thus, GetRSStatus() method
 685 invocation is redundant.

686

Table 85 – DCIM_LCService.GetRemoteServicesAPIStatus() Method: Return Code Values

Value	Description
0	Request was successfully executed.
2	Error occurred

687

Table 86 – DCIM_LCService.GetRemoteServicesAPIStatus() Method: Parameters

Qualifiers	Name	Type	Description/Values
OUT	ServerStatus	uint8	The host system status: <ul style="list-style-type: none">• 0 – Powered Off• 1 – In POST• 2 – Out of POST• 3 – Collecting System Inventory• 4 – Automated Task Execution• 5 – Lifecycle Controller Unified Server Configurator• 6 – Server has halted at F1/F2 error prompt because of a POST error• 7 – Server has halted at F1/F2/F11 prompt because there are no bootable devices available• 8 – Server has entered F2 setup menu• 9 – Server has entered F11 Boot Manager menu
OUT	LCStatus	uint8	The Lifecycle Controller status that includes the Data Manager status: <ul style="list-style-type: none">• 0 – Ready• 1 – Not Initialized• 2 – Reloading data• 3 – Disabled• 4 – In Recovery• 5 – In Use
OUT	Status	uint8	The overall status of the Remote Services API: <ul style="list-style-type: none">• 0 – Ready• 1 – Not Ready
OUT	MessageID	string	Error Message ID may be used to look-up in the Dell Message registry files. For more information, see Error Message Registry.
OUT	Message	string	Error Message in English corresponding to MessageID is returned if the method fails to execute
OUT	MessageArguments[]	string	Substitution variables for dynamic error messages

688

Table 87 – DCIM_LCService.GetRemoteServicesAPIStatus() Method: Standard Messages

MessageID (OUT parameter)	Message	MessageArguments[]
LC060	Lifecycle Controller Remote Services is not ready.	NA

MessageID (OUT parameter)	Message	MessageArguments[]
LC061	Lifecycle Controller Remote Services is ready.	NA

689 8.26 DCIM_LCService.ExportCertificate()

690 The ExportCertificate() method is used to export unique generated SSL Certificates from the Lifecycle
691 Controller to a file in remote share.

692 **Table 88 – DCIM_LCService.ExportCertificate() Method: Return Code Values**

Value	Description
2	Error occurred
4096	Job started: REF returned to started CIM_ConcreteJob

693 **Table 89 – DCIM_LCService.ExportCertificate() Method: Parameters**

Qualifiers	Name	Type	Description/Values
IN, REQ	Type	uint16	The type of the certificate 2 = Custom Signing Certificate
IN, REQ	IPAddress	string	The IP address of the target export server.
IN, REQ	ShareName	string	The directory path to the mount point.
IN, REQ	ShareType	uint16	Type of share: NFS=0, CIFS=2
IN	Username	String	User name for the target export server.
IN	Password	String	Password for the target export server.
IN	Workgroup	String	The applicable workgroup.
OUT	Job	CIM_ConcreteJob REF	Returned to keep track of config job status.
OUT	MessageID	String	Error Message ID may be used to look-up in the Dell Message registry files. For more information, see Error Message Registry.
OUT	Message	String	Error Message in English corresponding to MessageID is returned if the method fails to execute.
OUT	MessageArguments[]	string	Substitution variables for dynamic error messages.

694 **Table 90 – DCIM_LCService.ExportCertificate() Method: Standard Messages**

MessageID (OUT parameter)	Message	MessageArguments[]
LC016	Missing required parameter <parameter name>	Parameter name, see Table 89
LC017	Invalid value of parameter <parameter name>	Parameter name, see Table 89
LC023	Cannot access network share	
LC025	Insufficient space on network share	

MessageID (OUT parameter)	Message	MessageArguments[]
LC029	Filepath is invalid	
LC030	Filepath is a read-only file system	
LC040	Resource Allocation Failure	
LC064	The value exceeds the maximum length of %d characters for %s	
LC065	Static IP information is not configured correctly	
LC066	An instance of Export Certificate is already running	
LC067	Export SSL Certificate success	
LC069	Certificate does not Exist on the System.	
JCP017	Maximum job limit reached, cannot create new jobs	
JCP018	Backup Job is running, cannot create new jobs until the existing Backup job is completed or is cancelled	
JCP019	Restore Job is running, cannot create new jobs until the existing Restore job is completed or is cancelled	NA

695 **8.27 DCIM_LCService.ImportSystemConfigurationPreview()**

696 This method is used to preview the results of the application of the XML template ahead of the actual
 697 application with out any reboot. It also gives the information about the failure. [The successful invocation of](#)
 698 [this method shall return a job.](#)

699 **Table 91 – DCIM_LCService.ImportSystemConfigurationPreview() Method: Return Code Values**

Value	Description
2	Error occurred
4096	Job started: REF returned to started CIM_ConcreteJob

700 **Table 92 – DCIM_LCService.ImportSystemConfigurationPreview() Method: Parameters**

Qualifiers	Name	Type	Description/Values
IN, REQ	IPAddress	string	The IP address of the target import server.
IN, REQ	ShareName	string	The directory path to the mount point.
IN, REQ	FileName	string	The target output file name.
IN, REQ	ShareType	uint16	Type of share: NFS=0, CIFS=2
IN	Username	String	User name for the target import server.
IN	Password	String	Password for the target import server.
IN	Workgroup	String	WorkGroup name if it is needed.
IN	Target	String	To identify the component for ImportPreview. Default = "All". Selective list of FQDD's is not supported in this release. Target by default takes only All FQDDs.
OUT	Job	CIM_ConcreteJob REF	Returned to keep track of config job status.
OUT	MessageID	String	Error Message ID may be used to look-up in the Dell Message registry files. For more information, see Error Message Registry.
OUT	Message	String	Error Message in English corresponding to MessageID is returned if the method fails to execute.
OUT	MessageArguments[]	string	Substitution variables for dynamic error messages.

701 **Table 93 – DCIM_LCService.ImportSystemConfigurationPreview() Method: Standard Messages**

MessageID (OUT parameter)	Message	MessageArguments[]
LC016	Missing required parameter <parameter name>	Parameter name, see Table 92
LC017	Invalid value of parameter <parameter name>	Parameter name, see Table 92
LC023	Cannot access network share	
LC040	Resource Allocation Failure	
LC062	An instance of Export or Import System Configuration is already running.	
LC063	Cannot create new jobs until the existing running jobs are completed or deleted.	
LC064	Parameter exceeds maximum	Parameter name, see Table 92

MessageID (OUT parameter)	Message	MessageArguments[]
	length <max parameter length> for <parameter name>	
JCP017	Maximum job limit reached, cannot create new jobs	

702 **8.28 DCIM_LCService. RunePSADiagnostics ()**

703 The method is used to run the diagnostics based on the runmode switch and save the report in the Maser
 704 partition (MAS002). The diagnostics can be run in either express or extended mode or as a long run
 705 which encompasses all diagnostic tests.

706

Table 94 – DCIM_LCService. RunePSADiagnostics () Method: Return Code Values

Value	Description
2	Error occurred
4096	Job started: REF returned to started CIM_ConcreteJob

707

Table 95 – DCIM_LCService. RunePSADiagnostics () Method: Parameters

Qualifiers	Name	Type	Description/Values
IN	RunMode	Uint32	<p>Type of diagnostic to run.</p> <p>0 – is the express tests()</p> <p>1- is extended set of tests()</p> <p>2 – run (long)all tests</p> <p>NOTE: Default value is 0 (express tests)</p>
IN,REQ	RebootJobType	Uint32	<p>Creates a specific reboot job to power cycle the host system. This parameter only creates the RebootJob and does not schedule it.</p> <p>Shall contain the requested reboot type:</p> <p>1 - PowerCycle</p> <p>2 - Graceful Reboot without forced shutdown</p> <p>3 - Graceful Reboot with forced shutdown.</p> <p>NOTE: This parameter only creates the RebootJob and does not schedule it.</p>
IN	ScheduledStartTime	String	<p>Schedules the configuration job and the optional reboot job at the specified start time. A special value of “TIME_NOW” schedules the job(s) immediately.</p> <p>Start time for the job execution in format: yyyyymmddhhmmss. The string “TIME_NOW” means immediate.</p>
IN	UntilTime	String	<p>Defines a time window for scheduling the job(s). However, this parameter is dependent on “ScheduledStartTime” and “ScheduledStartTime” parameters. Once scheduled, jobs will be executed within the time window.</p> <p>End time for the job execution in format: yyyyymmddhhmmss. :</p> <p>If this parameter is not NULL, then ScheduledStartTime parameter shall also be specified.</p>
OUT	Job	CIM_ConcreteJob REF	a reference to the ConcreteJob is returned
OUT	MessageID	String	Error MessageID is returned if the method fails to execute

Qualifiers	Name	Type	Description/Values
OUT	Message	String	Error Message in English corresponding to the MessageID
OUT	MessageArguments	String[]	Any dynamic string substitutions for the Message

708

Table 96 – DCIM_LCService. RunePSADiagnostics () Method: Standard Messages

MessageID (OUT parameter)	Message	MessageArguments[]
SYS083	Export of Diagnostics results failed as no MASER session could be acquired.	Parameter name, see Table 95
SYS084	Export of Diagnostics results failed as the partition containing the results could not be mounted.	
SYS085	Successfully exported diagnostics results.	
SYS095	Unable to unmount a MASER partition.	

709

8.29 DCIM_LCService. ExportePSADiagnosticsResult ()

710 This method will export the result file of the last completed diagnostics into the respective remote
 711 share path (cifs/nfs).The result file will have time stamps to show when the diagnostics was run.

712

713

Table 97 – DCIM_LCService. ExportePSADiagnosticsResult() Method: Return Code Values

Value	Description
2	Error occurred
4096	Job started: REF returned to started CIM_ConcreteJob

714

Table 98 – DCIM_LCService. ExportePSADiagnosticsResult() Method: Parameters

Qualifiers	Name	Type	Description/Values
IN, REQ	IPAddress	String	IP address of network share
IN, REQ	ShareName	String	Network sharepoint address
IN, REQ	FileName	String	Diagnostic Result File name
IN, REQ	ShareType	Uint8	Type of network share (NFS=0 and CIFS=2)
IN	Username	String	The username to be used to access the network share for the export result
IN	Password	String	The password to be used to access the network share
OUT	Job	CIM_ConcreteJob REF	a reference to the ConcreteJob is returned
OUT	MessageID	String	Error MessageID is returned if the method fails to execute
OUT	Message	String	Error Message in English corresponding to the MessageID
OUT	MessageArguments	String[]	Any dynamic string substitutions for the Message
OUT	MessageID	String	Error MessageID is returned if the method fails to execute

715

Table 99 – DCIM_LCService. ExportePSADiagnosticsResult() Method: Standard Messages

MessageID (OUT parameter)	Message	MessageArguments[]
SYS083	Export of Diagnostics results failed as no MASER session could be acquired.	Parameter name, see Table 98
SYS084	Export of Diagnostics results failed as the partition containing the results could not be mounted.	
SYS085	Successfully exported diagnostics results.	
SYS086	Unable to copy the diagnostics results file to the network share.	
SYS095	Unable to unmount a MASER partition.	

716

8.30 DCIM_LCService. ExportTechSupportReport ()

717
718

This method is used to collects the TSR i.e hardware, OS and App data, then compressed the zip file saves into the respective remote share path (cifs/nfs).

719 Note: Collecting and exporting of OS App data is not supporting in ES1.4 release.

720 **Table 100 – DCIM_LCService. ExportTechSupportReport() Method: Return Code Values**

Value	Description
2	Error occurred
4096	Job started: REF returned to started CIM_ConcreteJob

721 **Table 101 – DCIM_LCService. ExportTechSupportReport () Method: Parameters**

Qualifiers	Name	Type	Description/Values
IN	DataSelectorArrayIn	Uint16[]	DataSelectorArrayIn to select the data", "0" - For HW Data "1" – For OSApp Data Without PII "2" – For OSApp Data "3" – For TTY Logs <i>Note: Default value is "HW Data". And MUT data be part of every TSR report.</i>
IN, REQ	IPAddress	String	IP address of network share
IN, REQ	ShareName	String	Network sharepoint address
IN, REQ	ShareType	Uint8	Type of network share (NFS=0 and CIFS=2)
IN	Username	String	The username to be used to access the network share for the export result
IN	Password	String	The password to be used to access the network share
OUT	Job	CIM_ConcreteJob REF	a reference to the ConcreteJob is returned
OUT	MessageID	String	Error MessageID is returned if the method fails to execute
OUT	Message	String	Error Message in English corresponding to the MessageID
OUT	MessageArguments	String[]	Any dynamic string substitutions for the Message
OUT	MessageID	String	Error MessageID is returned if the method fails to execute

722 **Table 102 – DCIM_LCService. ExportTechSupportReport () Method: Standard Messages**

MessageID (OUT parameter)	Message	MessageArguments[]
SYS094	[3] Another instance of embedded health report job is already running	Parameter name, see Table 101

723 **8.31 DCIM_LCService. UpdateOSAppHealthData ()**

724 This method is used to generate OS and App health data.

725 If the method is unable to collects the OS and App health data automatically then user needs to
726 do manual execution to update the OS and App health data. Manual execution will expose the
727 virtual USB drive or mount the virtual drive .

728

729

Table 103 – DCIM_LCService. UpdateOSAppHealthData() Method: Return Code Values

Value	Description
2	Error occurred
4096	Job started: REF returned to started CIM_ConcreteJob

730

Table 104 – DCIM_LCService. UpdateOSAppHealthData () Method: Parameters

Qualifiers	Name	Type	Description/Values
IN	UpdateType	uint16	Agent Lite OSApp plugin: 0 Manual execution: 1 [4] Note: Default value is “Agent Lite OSApp plugin”
OUT	Job	CIM_ConcreteJob REF	a reference to the ConcreteJob is returned
OUT	MessageID	String	Error MessageID is returned if the method fails to execute
OUT	Message	String	Error Message in English corresponding to the MessageID
OUT	MessageArguments	String[]	Any dynamic string substitutions for the Message
OUT	MessageID	String	Error MessageID is returned if the method fails to execute

731

Table 105 – DCIM_LCService. UpdateOSAppHealthData () Method: Standard Messages

MessageID (OUT parameter)	Message	MessageArguments[]
SYS094	[1] Another instance of embedded health report job is already running	Parameter name, see Table 104

732

8.32 DCIM_LCService. SystemErase()

733
734

This method is to create granular, user selectable, categories to increase flexibility and improve the repurposing aspect of the existing System Wipe feature.

735
736

This method will take the component name as input. Multiple options can also be provided. A job ID will be returned to the user upon successful creation of job.

737

Table 106 - DCIM_LCService : SystemErase() Method: Return code values

Value	Description
2	Failed
4096	Job created to complete the task

738

739

Table 107- DCIM_LCService : SystemErase() Method: Parameters

Qualifiers	Parameter	Type	Description/value
IN,REQ	Component	String	The system and storage components to be erased: System Components: BIOS DIAG DrvPack LCDATA IDRAC
OUT	Job	CIM_ConcreteJob REF	a reference to the ConcreteJob is returned
OUT	MessageID	String	Error MessageID is returned if the method fails to execute
OUT	Message	String	Error Message in English corresponding to the MessageID
OUT	MessageArguments	String[]	Any dynamic string substitutions for the Message

740

741 Command:

```
742 winrm i SystemErase http://schemas.dmtf.org/wbem/wscim/1/cim-
743 schema/2/root/dcim/DCIM_LCService?SystemCreationClassName=DCIM_ComputerSystem+CreationCl
744 assName=DCIM_LCService+SystemName=DCIM:ComputerSystem+Name=DCIM:LCService -u:root -
745 p:password -r:https://192.168.0.18/wsman -SkipCNcheck -SkipCAcheck -encoding:utf-8 -a:basic -file:
746 SystemErase.xml
```

747 SystemErase_input.xml:

```
748 <p:SystemErase_INPUT xmlns:p="http://schemas.dmtf.org/wbem/wscim/1/cim-
749 schema/2/root/dcim/DCIM_LCService">
750 <p: Component >BIOS </p: Component >
751 <p: Component >DIAG</p: Component >
752 </p: SystemErase _INPUT>
```

753

754

Table 108 – DCIM_LCService. SystemErase () Method: Standard Messages

MessageID (OUT parameter)	Message	MessageArguments[]
RAC042	Invalid number of input parameters	NA
LC017	Invalid value for parameter <parameter>	NA
LC016	Missing required parameter, <parameter>.	Include all the parameters required for the command. Check Lifecycle Controller Profile documentation and try again.
LC044	An instance of Lifecycle Controller system configuration wipe is already running	NA
LC063	[2] Cannot create new jobs until the existing running jobs are completed or deleted.	NA
LC040	Memory resource allocation failure.	Power cycle system and retry the operation. If the problem persists, reapply firmware packages for Lifecycle Controller and iDRAC.

755

756 **8.33 DCIM_LCService. SetBackupSchedule()**

757 The SetBackupSchedule() method is used to set the periodic backup for firmware and configurations for

758 the Lifecycle Controller. This method will return an error if the AutomaticBackup attribute is Disabled.

759 This method will return an error if CSIOR or LC are disabled.

760 Table 109 – DCIM_LCService. SetBackupSchedule() Method: Return Code Values

Value	Description
2	Error occurred
4096	Job started

761

Table 110 – DCIM_LCService. SetBackupSchedule() Method: Parameters

Qualifiers	Name	Type	Description/Values
IN	IPAddress	String	IP address of NFS/CIFS share. This parameter is required if ShareType = 0 or 2
IN	ShareName	String	Share name of the NFS/CIFS network share
IN	Passphrase	String	Passphrase for the backup server profile
IN	ShareType	Uint16	Type of network share (NFS=0, CIFS=2, vFlash = 4). Defaults to NFS=0
IN	Username	String	The username to be used to access the network share
IN	Password	String	The password to be used to access the network share
IN	ImageName	String	Name of the backup server profile image. This parameter is not required if ShareType is vFlash=4.
IN	Domain	String	Domain name for the network share
IN, REQ	Time	String	Hh:mm (hour and minute of day to run)
IN	DayOfMonth	String	*, 1-28, L Default *
IN	WeekOfMonth	String	*, 1-4, L Only one of the characters above. Default *
IN	DayOfWeek	String	*, Mon, Tue, Wed, Thu, Fri, Sat, Sun Comma delimited
IN	Repeat	UINT16	1-366
IN	MaxNumberOfBackupArchives	UINT16	1-50
OUT	MessageID	String	Error MessageID is returned if the method fails to execute
OUT	Message	String	Error Message in English corresponding to the MessageID
OUT	MessageArguments	String[]	Any dynamic string substitutions for the Message

762

Table 111 – DCIM_LCService. SetBackupSchedule() Method: Standard Messages

MessageID (OUT parameter)	Message	MessageArguments[]
RED055	Set Automatic Backup Schedule failed	None
RED060	Automatic Backup Schedule already exists	None
RED058	Invalid value of parameter <param>	Invalid parameter

763

8.34 DCIM_LCService. GetBackupSchedule()

764 The GetBackupSchedule() method is used to retrieve the periodic backup settings for firmware and
 765 configurations for the Lifecycle Controller.

766

Table 112 – DCIM_LCService.GetBackupSchedule() Method: Return Code Values

Value	Description
2	Error occurred
4096	Job started

767

Table 113 – DCIM_LCService.GetBackupSchedule() Method: Parameters

Qualifiers	Name	Type	Description/Values
OUT	IPAddress	String	IP address of the NFS or CIFS share such as 192.168.10.12. The parameter shall be required, if the ShareType parameter has value 0 (NFS), 2 (CIFS), or not specified.
OUT	ShareName	String	Share name for the network share such as "imageshare". The parameter shall be required, if the ShareType parameter has value 0 (NFS), 2 (CIFS), or not specified.
OUT	ShareType	Unit16	Type of the share or storage. <ul style="list-style-type: none"> • 0 – NFS • 2 – CIFS • 4 – VFLASH If ShareType is blank or null, it shall be considered as NFS type. The parameter shall be required, if the ShareType parameter has value 0 (NFS), 2 (CIFS), or not specified.
OUT	ImageName	String	The name of the backup file. The parameter shall be required, if the ShareType parameter has value 0 (NFS), 2 (CIFS), or not specified.
OUT	Username	String	User name for the remote share
OUT	Domain	String	Domain for the share
OUT	Time	String	hh:mm Represents hour and minute of day to run.
OUT	DayofMonth	String	*,1-28,L
OUT	WeekofMonth	String	*,1-4, L Only one of the above characters
OUT	DayofWeek	String	*,Mon,Tue,Wed,Thu,Fri,Sat,Sun Comma delimited.
OUT	Repeat	Uint16	1-366
OUT	MaxNumberOfBackup Archives	Uint16	1-50
OUT	MessageID	String	Error Message ID may be used to look-up in the Dell Message registry files. For more information, see Error Message Registry.
OUT	Message	String	Error Message in English corresponding to MessageID is returned if the method fails to execute

Qualifiers	Name	Type	Description/Values
OUT	MessageArguments[]	string	Substitution variables for dynamic error messages

768 **Table 114 – DCIM_LCService. GetBackupSchedule() Method: Standard Messages**

MessageID (OUT parameter)	Message	MessageArguments[]
RED056	Get Automatic Backup Schedule failed	

769

770 **8.35 DCIM_LCService. ClearBackupSchedule()**

771 The ClearBackupSchedule() method is used to clear all the periodic backup settings for firmware and
 772 configurations for the Lifecycle Controller. This method also sets attribute AutomaticBackup to Disabled.

773

774 **Table 115 – DCIM_LCService. ClearBackupSchedule() Method: Return Code Values**

Value	Description
2	Error occurred
4096	Job started

775 **Table 116 – DCIM_LCService. ClearBackupSchedule() Method: Parameters**

Qualifiers	Name	Type	Description/Values
OUT	MessageID	String	Error Message ID may be used to look-up in the Dell Message registry files. For more information, see Error Message Registry.
OUT	Message	String	Error Message in English corresponding to MessageID is returned if the method fails to execute
OUT	MessageArguments[]	string	Substitution variables for dynamic error messages

776 **Table 117 – DCIM_LCService. ClearBackupSchedule() Method: Standard Messages**

MessageID (OUT parameter)	Message	MessageArguments[]
RED057	Clear Automatic Backup Schedule failed	

777

778 **9 Use Cases**

779 See *Lifecycle Controller (LC) Integration Best Practices Guide*

780 **10 CIM Elements**

781 No additional requirements have been defined.

782 **11 Privilege and License Requirement**

783 The following table describes the privilege and license requirements for the listed operations . For the
784 detailed explanation of the privileges and licenses, refer to the Dell WSMAN Licenses and Privileges
785 specification.

786 **Table 118 – Privilege and License Requirements**

Class and Method	Instance (GroupID.Attribute Name)	Operation	User Privilege Required	License Required
DCIM_LCString	SYSID	ENUMERATE, GET	Login	NONE
DCIM_LCEnumeration	Licensed	ENUMERATE, GET	Login	NONE
DCIM_LCString	CMCIP			NONE
DCIM_LCString	Provisioning Server	ENUMERATE, GET	Login	LM_AUTO_DISCOVERY
DCIM_LCEnumeration	Auto Discovery	ENUMERATE, GET	Login	LM_AUTO_DISCOVERY
DCIM_LCEnumeration	Discovery Factory Defaults	ENUMERATE, GET	Login	LM_AUTO_DISCOVERY
DCIM_LCEnumeration	Part Configuration Update	ENUMERATE, GET	Login	LM_PART_REPLACEMENT
DCIM_LCEnumeration	Part Firmware Update	ENUMERATE, GET	Login	LM_PART_REPLACEMENT
DCIM_LCEnumeration	Collect System Inventory on Restart	ENUMERATE, GET	Login	LM_REMOTE_CONFIGURATION
DCIM_LCEnumeration	VirtualAddressManagement	ENUMERATE, GET	Login	LM_REMOTE_CONFIGURATION
DCIM_LCString	VirtualAddressManagementApplication	ENUMERATE, GET	Login	LM_REMOTE_CONFIGURATION
DCIM_LCEnumeration	IPChangeNotifyPS	ENUMERATE, GET	Login	LM_AUTO_DISCOVERY
DCIM_LCEnumeration	Lifecycle Controller State	ENUMERATE, GET	Login	LM_REMOTE_CONFIGURATION
DCIM_LCService		ENUMERATE, GET	Login	NONE

DCIM_LCService. SetAttribute()		INVOKE	Login, System Control	LM_REMOTE_CONFIGURATION
DCIM_LCService. SetAttributes()		INVOKE	Login, System Control	LM_REMOTE_CONFIGURATION
DCIM_LCService. CreateConfigJob()		INVOKE	Login, System Control	LM_REMOTE_CONFIGURATION
DCIM_LCService. ReInitiateDHS()		INVOKE	Login, System Control	LM_AUTO_DISCOVERY
DCIM_LCService. ReInitiateAutoDiscovery()		INVOKE	Login, System Control	LM_AUTO_DISCOVERY
DCIM_LCService. ClearProvisioningServer()		INVOKE	Login, System Control	LM_AUTO_DISCOVERY
DCIM_LCService. DownloadServerPublicKey()		INVOKE	Login, System Control	LM_REMOTE_CONFIGURATION
DCIM_LCService. DownloadClientCerts()		INVOKE	Login, System Control	LM_REMOTE_CONFIGURATION
DCIM_LCService. DeleteAutoDiscoveryClientCerts()		INVOKE	Login, System Control	LM_AUTO_DISCOVERY
DCIM_LCService. SetCertificateAndPrivateKey()		INVOKE	Login, System Control	LM_REMOTE_CONFIGURATION
DCIM_LCService. SetPublicCertificate()		INVOKE	Login, System Control	LM_REMOTE_CONFIGURATION
DCIM_LCService. DeleteAutoDiscoveryServerPublicKey()		INVOKE	Login, System Control	LM_AUTO_DISCOVERY
DCIM_LCService.LCWipe()		INVOKE	Login, System Control	NONE
DCIM_LCService.LCWipe().ExportFactoryConfiguration()		INVOKE	Login	LM_BASIC_REMOTE_INVENTORY_EXPORT
DCIM_LCService. ExportHWInventory()		INVOKE	Login	LM_BASIC_REMOTE_INVENTORY_EXPORT
DCIM_LCService. ExportLCLog()		INVOKE	Login	NONE

DCIM_LCService. ExportCompleteLCLog()		INVOKE	Login	NONE
DCIM_LCService.. InsertCommentInLCLog()		INVOKE	Login, System Operations	LM_REMOTE_CONFIGURATION
DCIM_LCService. GetRSStatus()		INVOKE	Login	NONE
DCIM_LCService. GetRemoteServicesAPIStatus ()		INVOKE	Login	NONE
DCIM_LCService.TestNetwork Share()		INVOKE	Login	LM_REMOTE_CONFIGURATION
DCIM_LCService.BackupImage()		INVOKE	Login, System Control	LM_BACKUP_RESTORE
DCIM_LCService.RestoreImage()		INVOKE	Login, System Control	LM_RESTORE
DCIM_LCService.ExportCertifi cate()		INVOKE	Login	LM_REMOTE_CONFIGURATION
DCIM_LCService.ExportSyste mConfiguration()		INVOKE	Administrat or	LM_REMOTE_CONFIGURATION
DCIM_LCService.ImportSyste mConfiguration()		INVOKE	Administrat or	LM_REMOTE_CONFIGURATION
DCIM_LCService.ImportSyste mConfigurationPreview()		INVOKE	Administrat or	LM_REMOTE_CONFIGURATION
DCIM_LCRegisteredProfile		ENUMER ATE, GET	Login	None.
DCIM_LCElementConformsTo Profile		ENUMER ATE, GET	Login	None.
DCIM_LCService. RunPSADiagnostics ()		INVOKE	Login, System Control	LM_REMOTE_CONFIGURATION
DCIM_LCService. ExportePSADiagnosticsResult ()		INVOKE	Login, System Control	LM_REMOTE_CONFIGURATION
DCIM_LCService. ExportTechSupportReport ()		INVOKE	Login, System Control	None
DCIM_LCService. UpdateOSAppHealthData()		INVOKE	Login, System Control	None

DCIM_LCService.SystemErase()		INVOKE	Login, System Control	None
DCIM_LCService.SetBackupSchedule()		INVOKE	Login, System Control	LM_BACKUP_RESOURCE
DCIM_LCService.GetBackupSchedule()		INVOKE	Login	None
DCIM_LCService.ClearBackupSchedule		INVOKE	Login, Server Control	LM_BACKUP_RESOURCE

787
788
789
790
791

ANNEX A (informative)

Change Log

Version	Date	Description
1.6.0		Added the IPAddress, Mask, Gateway, DNS, Domain optional parameters to the DCIM_LCService.ReInitiateDHS() method. Added the DCIM_LCService.ExportSystemConfiguration() method.
1.6.0	4/23/2012	Added optional MaxExecutionTime input parameter to DCIM_LCService.ExportSystemConfiguration() method. Added messages LC016 and LC017 to methods -DCIM_LCService.ExportLCLog(), DCIM_LCService.ExportHWInventory(), DCIM_LCService.ExportFactoryConfiguration() and DCIM_LCService.ExportSystemConfiguration(). Added LC062 error message to the SetAttribute(), SetAttributes(), and CreateTargetedConfigJob() methods.
1.6.0	4/25/2012	Add licensing and privilege requirement for ExportSystemConfiguration().
1.6.0	4/30/2012	Remove MaxExecutionTime input parameter from DCIM_LCService.ExportSystemConfiguration() method.
1.6.0	5/08/2012	Added DCIM_LCService.ReInitiateAutoDiscovery() method to support Auto-Discovery with static IP. Removed optional parameters (IPAddress, Mask, Gateway, DNS, Domain) from DCIM_LCService.ReInitiateDHS().
1.6.0	6/05/2012	Added DCIM_LCService.ExportCertificate method to support export of uniquely generated SSL certificates
1.6.1	6/18/2012	Added DCIM_LCService.ImportSystemConfiguration() method to support importing system configuration settings.
1.6.2	6/25/2012	Added DCIM_LCService.TestNetworkShare() method to test network connection.
1.6.2	7/10/2012	Added Target to DCIM_LCService.ExportSystemConfiguration() method. Added ScheduledStartTime and UntilTime to DCIM_LCService.ImportSystemConfiguration() method.
1.6.2	7/25/2012	Changed privilege requirement to Administrator for DCIM_LCService.ImportSystemConfiguration() method.
1.6.3	4/24/2013	Added details for ExportCompleteLCLog
1.6.4	5/8/2013	Added details for RunePSADiagnostics and ExportePSADiagnostics
1.6.5	5/9/2013	Added
1.6.	5/31/1013	Added details for ExportHealthReport

5		
1.6.5	10/30/2013	Added support for selective import/export feature for the following methods . DCIM_LCService.ImportSystemConfiguration(),DCIM_LCService.ImportSystemConfigurationPreview(),DCIM_LCService.ExportSystemConfiguration()
1.6.5	5/22/2014	Updated the privilege for ExportSystemConfiguration from login to administrator as per technologist's inputs
1.6.6	7/15/2014	System Erase
1.6.7	7/15/2014	Added parameter to ExportSystemConfiguration for PasswordHash story
1.7.0	7/20/2014	Tech Support Report
1.8.0	9/9/2014	Updated the correct version and added SetBackupSchedule, GetBackupSchedule and ClearBackupSchedule APIs
1.9.0	11/6/2014	Corrected the CreateConfigJob API (was missing Input parameters)and updated the SetBackupSchedule API (modified description for ImageName Parameter). Updated missing Attributes for 13G
1.9.1	11/19/2014	Changed the description for Target parameter in the ImportSystemConfigurationPreview method. It accepts only All but not selective fqdds.

792

793

794

795

796